

DAIKIN

3P785322-12C

DAIKIN ROOM AIR CONDITIONER

OPERATION MANUAL



MODELS:

FTKR35XV16VAA

FTKR50XV16MKA

FTKR60XV16MAA

3P785322-12C

Features

SMART CONTROL OPERATION

Wi-Fi

Wi-Fi

Lets you interact and control your AC operation by simple voice command and user friendly App based on android and iOS platform. The voice assistant solution is based on most popular and commonly used voice recognition AI powered technology platform- Amazon Alexa & Google Home.

▶ Page 14

Other functions



COANDA

Directs airflow upward. This function prevents air from blowing directly at users. ▶ Page 10

















Contents

■ Read before Operation

Safety Precautions.....	3
Name of Parts	4
Preparation before Operation	6

■ Operation

 DRY . COOL . FAN Operation.....	7
 Adjusting the Temperature.....	7
 Adjusting the Airflow Rate / SMELL PROOF Operation.....	8
 Adjusting the Airflow Direction.....	9
 COANDA Operation.....	10
 POWER CHILL Operation.....	10
 ECONO button.....	11
 ON/OFF TIMER Operation.....	12
 GOOD SLEEP OFF TIMER Operation.....	12
 LED / 7 SEGMENT BRIGHTNESS Control Operation.....	13
 Wi-Fi Operation	14
 DEW CLEAN Operation.....	17
 CHECKING THE INVERTER OUTPUT AND TEMPERATURE DISPLAY.....	18
 FILTER CLEAN button	19

■ Care

Care and Cleaning.....	20
------------------------	----

■ Troubleshooting

Troubleshooting	23
-----------------------	----

Safety Precautions

- Keep this manual where the user can easily find it.
- Read the precautions in this manual carefully before operating the unit.
- The precautions described herein are classified as **WARNING** and **CAUTION**. They both contain important information regarding safety. Be sure to observe all precautions without fail.

WARNING

Failure to follow these instructions properly may result in personal injury or loss of life.

CAUTION

Failure to follow these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.



Never attempt.




Be sure to follow the instructions.





Be sure to establish an earth connection.

- After reading, keep this manual in a convenient place so that you can refer to it whenever necessary. If the equipment is transferred to a new user, be sure also to hand over the manual.


WARNING


- To avoid fire, explosion or injury, do not operate the unit when harmful gases (e.g. flammable or corrosive) are detected near the unit. 
- Be aware that prolonged, direct exposure to cool air from the air conditioner, or to air that is too cool, can be harmful to your physical condition and health.
- Do not place objects, including rods, your fingers, etc., in the air inlet or outlet. Product damage may result due to contact with the air conditioner's high-speed fan blades.
- Do not attempt to repair, dismantle, reinstall or modify the air conditioner yourself as this may result in water leakage, electric shock or fire hazards.
- Do not use flammable spray (like hair spray, insecticides, disinfectants, air dusters or cleaners, deodorants etc.) near the product. It can cause fire, water leak or malfunction etc.
- Do not use a refrigerant other than the one indicated on the outdoor unit (R32) when installing, moving or repairing. Using other refrigerants may cause trouble or damage to the unit, and personal injury.
- To avoid electric shock, do not operate with wet hands.

- Beware of fire in case of refrigerant leakage. If the air conditioner is not operating correctly, i.e. not generating cool air, refrigerant leakage could be the cause. Consult your service centre for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not use the air conditioner until a qualified service person confirms that the leakage has been repaired. 
- Do not attempt to install or repair the air conditioner yourself. Improper workmanship may result in water leakage, electric shock or fire hazards. Please contact your local service centre or qualified personnel for installation and maintenance work.
- If the air conditioner is malfunctioning (giving off a burning odour, etc.), turn off power to the unit and contact your local service centre. Continued operation under such circumstances may result in a failure, electric shock or fire hazards.
- Be sure to install an earth leakage circuit breaker. Failure to install the earth leakage circuit breaker may result in electric shock or fire.


- Be sure to earth the unit. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shock. 

CAUTION

- Do not use the air conditioner for purposes other than those for which it is intended. Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned. 
- Do not expose plants or animals directly to the airflow from the unit as this may cause adverse effects.
- Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion of the burner.
- Do not block the air inlets or outlets. Impaired airflow may result in insufficient performance or trouble.
- Do not sit on the outdoor unit, put things on the unit, or pull the unit. Doing so may cause accidents, such as falling or toppling down, thus resulting in injury, product malfunctioning, or product damage.
- Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
- After prolonged use, check the unit stand and its mounts for damage. If they are left in a damaged condition, the unit may fall and cause injury.
- To avoid injury, do not touch the air inlet or aluminium fins of the indoor or outdoor units.
- The appliance is not intended for use by unattended young children or infirm persons. Impairment of bodily functions and harm to health may result.
- Children should be supervised to ensure that they do not play with the unit or its remote controller. Accidental operation by a child may result in impairment of bodily functions and harm health.
- Avoid impacts to the indoor and outdoor units, or otherwise product damage may result.
- Do not place flammable items, such as spray cans, within 1m of the air outlet. The spray cans may explode as a result of hot air from the indoor or outdoor units.
- Be careful not to let pets urinate on the air conditioner. Urination on the air conditioner may result in electric shock or fire.
- Do not wash the air conditioner with water, as this may result in electric shock or fire.
- Do not place water containers (vases, etc.) above the unit, as this may result in electric shock or fire hazards if they should topple over.
- Do not insert the batteries in the wrong polarity (+/-) orientation as this may result in short circuiting, fire, or battery leakage.

- To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the air conditioner. 
- Before cleaning, be sure to stop unit operation and turn off the circuit breaker. Otherwise, an electric shock and injury may result.
- Only connect the air conditioner to the specified power supply circuit. Power supplies other than the one specified may result in electric shock, overheating and fires.
- Arrange the drain hose to ensure smooth drainage. Imperfect drainage may cause wetting of the building, furniture, etc.
- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.
- Do not place objects around the indoor unit. Doing so may have an adverse influence on the performance, product quality, and life of the air conditioner.
- This appliance is not intended to be used by persons with reduced physical, sensory or mental capabilities, or with lack of operation knowledge, unless they have been given supervision or instruction concerning the appliance use by person responsible for their safety. Keep out of children's reach to ensure that they do not play with the appliance.

■ Indoor Unit

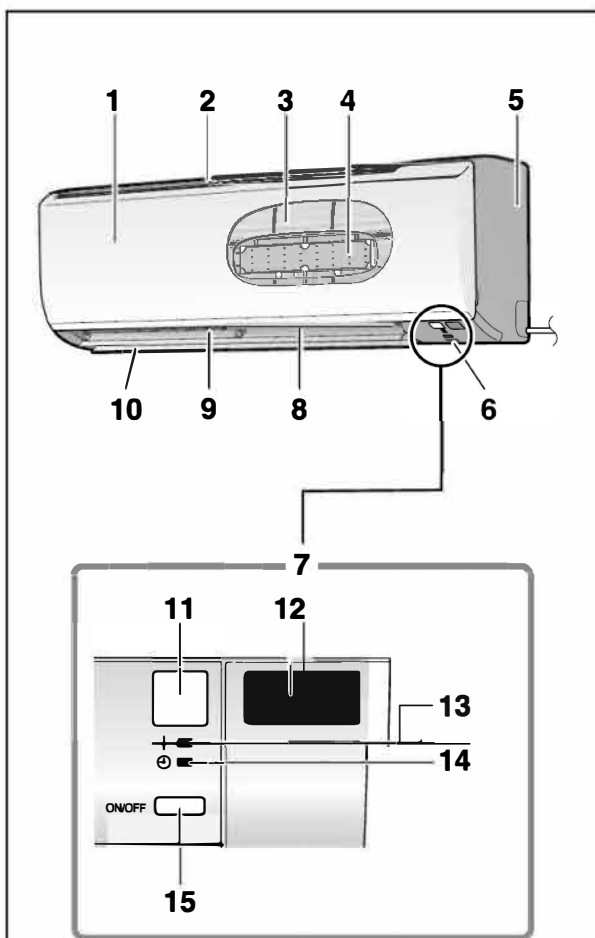

1. Front panel
2. Air inlet
3. Air filter
4. Accessory filter*
5. Model name plate
6. Indoor temperature sensor:
 - Detects the air temperature around the unit.
7. Display
8. Air outlet
9. Louvres (vertical blades):*
 - The louvres are inside of the air outlet.
10. Flaps (horizontal blades)
11. Signal receiver:
 - Receives signals from the remote controller.
 - When the unit receives a signal, you will hear a beep sound.

Case	Sound type
Operation start	beep-beep
Setting changed	beep
Operation stop	long beep

12. Inverter output and temperature display*
13. OPERATION lamp (green)
14. TIMER lamp (orange)
15. Indoor unit ON/OFF switch:


- Press this switch once to start the operation. Press it once again to stop.
- For the operation mode setting, refer to the following table.

Mode	Temperature setting	Airflow rate
COOL	22°C	AUTO

- This switch can be used when the remote controller is missing.

16. Air inlet (back and side)
17. Refrigerant pipes and inter-unit wire
18. Drain hose
19. Earth terminal (inside)
20. Model name plate
21. Air outlet
22. Outdoor temperature sensor (back)

■ Outdoor Unit

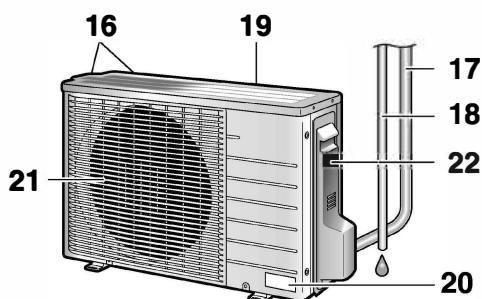


Appearance of the indoor/outdoor unit may differ between different models.

* Features available with selected models

Note: When the machine receives command through Mobile App, there will not be any beep sound.

■ Remote Controller

1. **Signal Transmitter:**
 - Send signals to the indoor unit.
2. **Display (LCD):**
 - Display the current setting.
(In this illustration, each section is shown with its display on for the purpose of explanation.)
3. **ON/OFF button:**
 - Press this button once to start operation.
Press once again to stop it
4. **TEMPERATURE adjustment button:**
 - Change the temperature setting.
5. **FAN setting button:**
 - Select the airflow rate setting.
6. **SWING button:**
 - Adjust the airflow direction.
7. **POWER CHILL button:**
 - POWER CHILL operation.
8. **MODE selector button:**
 - Select the operation mode.
(DRY/COOL/FAN)
9. **ECONO button:**
 - ECONO operation:
10. **COANDA button:**
 - COANDA operation.
11. **TIMER CANCEL button:**
 - Cancel the timer setting.
12. **ON TIMER button:**
13. **OFF TIMER button:**
14. **GOOD SLEEP button :**
15. **Wi-Fi button :**
16. **DEW CLEAN button:**
17. **DISPLAY button.:**
18. **FILTER CLEAN button:**
 - FILTER CLEAN operation:

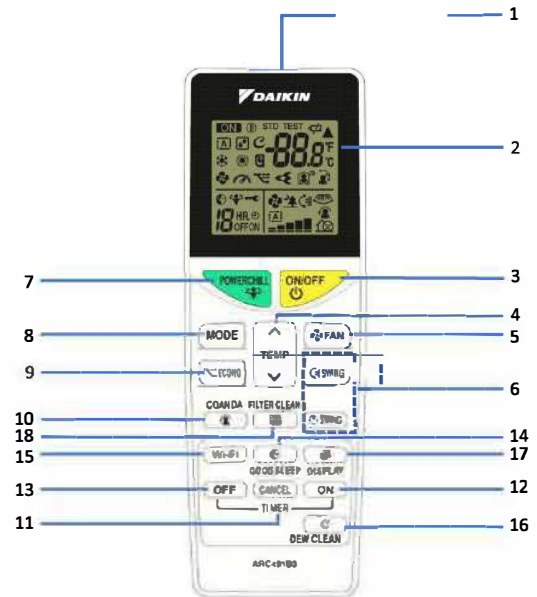

(Model : ARC491B3)

Notes

■ Notes on remote controller

- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity, wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamp) is in the room. Consult your service centre if that is the case.
- If the remote controller activate other electric devices, move them away or consult your service centre.
- The Remote appearance may vary as per the applicable model.

Preparation before Operation




CAUTION

Incorrect handling of batteries can result in injury from battery leakage, rupturing or heating, or lead to equipment failure. Please observe the following precautions and use safely.

- If the solution from the batteries should get in the eyes, do not rub the eyes. Instead, immediately flush the eyes with tap water and seek the attention of a medical professional.
- Keep batteries out of reach of children. In the event that batteries are swallowed, seek the immediate attention of a medical professional.
- Do not expose batteries to heat or fire. Do not disassemble or modify batteries. The insulation or gas release vent inside the battery may be damaged, resulting in battery leakage, rupturing, or heating.
- Do not damage or peel off labels on the batteries.


■ To insert the batteries

1. Remove the back cover by sliding and then slightly lifting it.
2. Inset 2 dry batteries (AAA).
3. Place the back cover.

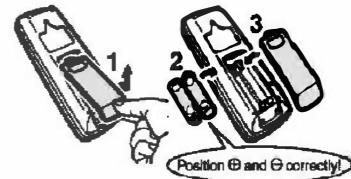



■ To operate the remote controller

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything blocking the signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller, and avoid getting it wet.
- The maximum transmission distance is about 7m.
(When in front of unit at angle 0° without any interference)

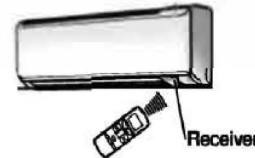

■ To attach the accessory filters

- Set the accessory filters under the refer of the filter frame on the indoor/streamer unit.
- While attaching the accessory filters, refer to “**Care and Cleaning**”, and pull out the air filters.
- User a recommended to note down SSID and key details. This will be helpful during wireless LAN Connection.

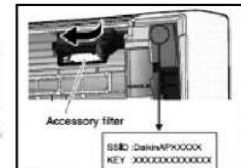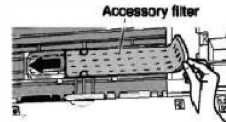

■ Turn on the circuit breaker

- After the power is turned on, the flaps of the indoor unit open and close once to set the reference position.

Notes

■ Tips for saving energy

- Be careful not to cool the room too much.
- Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain. Blocking sunlight and air from outdoor increases the cooling effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once in about every 2 weeks.

■ Notes on batteries

- Do not use a leaking battery.
- To avoid possible injury or damage from battery leakage or rupturing, remove the batteries when not using the product for long periods of time.
- The standard replacement time is about 1 year, Both batteries should be replaced at the same time. Be sure to replace them with new size AAA dry batteries.
- However, if the remote controller display begins to fade and the possible transmission range becomes shorter within a year, replace both batteries as specified above.
- The batteries supplied with the remote controller are for initial operation. The battery may run out in less than 1 year.


DRY. COOL. FAN Operation

The air conditioner operate with the operation mode of your choice.
From next time onwards air conditioner will operate with the same operation mode.

■ To Start operation

1. Press and select an operation .

- Each press of the button changes the mode setting in sequence.




2. Press

- "  " is displayed on the LCD and the Operation lamp light green.



■ To Stop operation

1. Press again.

- "  " Disappears from the LCD and then the operation lamp turns off.

■ To change the temperature setting

1. Press .

- Press  to raise the temperature and press  to lower the temperature.

COOL Operation	DRY or FAN Operation
18-32°C	The temperature setting cannot be changed.

Default Set Temperature Setting : As per BEE regulation, whenever Air Conditioner will be switched ON from the remote, the default set temperature will be set as mentioned in below table:

Mode	Set temperature before remote switched OFF	Set temperature before remote switched ON
COOL	If set temperature <24°C	Default set temperature will be 24°C.
	If set temperature >=24°C	Default set temperature will remain same

Note: Whenever AC is switched OFF in dry mode and is switched ON from remote, air conditioner will start in Cool mode and then DRY mode selection can be done using the MODE button.

Notes

■ Note on COOL operation

- This air conditioner cools the room by releasing heat in the outdoor. Therefore, cooling performance may fall in higher outdoor temperatures.

■ Note on DRY operation

- Eliminates humidity while maintaining the indoor temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these function is unavailable.

■ Note on FAN operation

- This mode is valid for fan only.

■ Recommended temperature setting

- For cooling: 26-28°C

Adjusting the Airflow Rate/Smell Proof Operation


Adjusting the airflow rate


You can adjust the airflow rate to increase your comfort.

■ To change the airflow rate setting

Press 

- Each pressing of  changes the airflow rate setting in sequence.



- In Dry operation, the airflow rate setting cannot be changed.
- When the airflow is set to “”, quiet operation starts and noise from the indoor unit will become quieter.
- In the quiet operation mode, the airflow rate is set to a Low level.

SMELL PROOF Operation


The SMELL PROOF operation prevents unpleasant odours inside the indoor unit. This function is available in both DRY and COOL operation.

■ To use SMELL PROOF operation

1. Before starting the operation, press  to set to Auto.

2. Press  to select the DRY or COOL operation.

3. Press 

- Air starts circulating about 1 minute after the operation is started. However, if the POWER CHILL  operation is started, air starts circulating immediately.

Notes

■ Note on airflow rate setting

- At smaller airflow Rate, the cooling effect is also smaller.

■ Notes on the operation conditions

- The air conditioner always consumes a small amount of electricity even When it is not operating.
- If you are not going to use the air conditioner for a long period, turn off the circuit breaker.
- Operating outside the humidity or temperature range described in the table may cause a safety device to disable the system.

Mode	Operating Conditions	If operation is continued out of this range
COOL	Outdoor temperature: 20-54°C Indoor temperature: 18-32°C Max	■ A safety device may activate to stop the operation.
DRY	Indoor humidity: 80% max.	■ Dew may form on the Indoor unit and drip from it when COOL or DRY operation is selected.

Adjusting the Airflow Direction

You can adjust the airflow direction to increase your comfort.


⚠ CAUTION


- Always use a remote controller or smart phone application to adjust the angles of the flaps. Moving the flaps or louvres forcibly by hand, may cause a malfunction.
- Be careful when adjusting the louvres. Inside the air outlet, a fan is rotating at a high speed.

■ To start auto swing

Up and Down airflow direction


1. Press SWING


- “” is displayed on the LCD.
- The flaps (horizontal blade) will begin to swing.

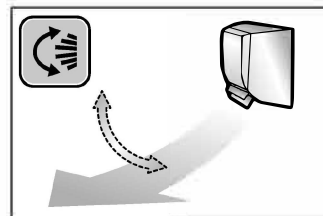

Right and Left airflow direction



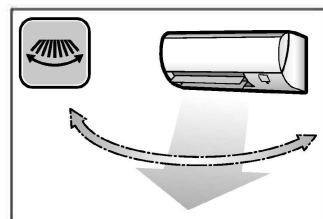

1. Press SWING


- “” is displayed on the LCD.
- The louvres (vertical blades) will begin to swing.



The 3-D airflow direction

1. Press and SWING

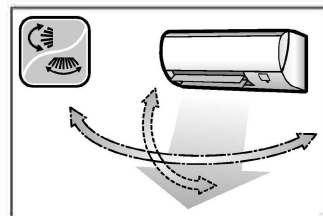

- “” and “” is displayed on the LCD.
- The flaps and louvres move in turn.
- To cancel 3-D airflow, press either  SWING or  SWING again. The flaps or louvres will stop moving.



■ To set the flaps or louvres at desired position

- This function is effective while flaps or louvres are in auto swing mode.

1. Press and when the Flaps or louvres have reached the desired position.

- In the 3-D airflow, the flaps or louvres move in turn.
- “” and “” is disappears from the LCD.

■ Note on 3-D airflow


- Using 3-D airflow circulates cold air, which tends to collect at the bottom of the room, and hot air which tends to collect near the ceiling throughout the room, preventing the development of cold and hot areas.

COANDA / POWER CHILL Operation

COANDA Operation

Directing airflow upward serves the function of preventing air from blowing directly at users.


■ To Start COANDA Operation

1. Press  The flaps position will change, preventing air from blowing directly onto occupants of the room.

- “” is displayed on the LCD. The flap will go up.

■ To cancel COANDA Operation

2. Press  again.


- The flaps will return to the memory position from COANDA mode
- “” disappears from the LCD.

POWER CHILL Operation

POWER CHILL Operation quickly maximizes the cooling effect in any operation mode. In this mode the air conditioner operates at maximum capacity.

■ To Start POWER CHILL operation

1. Press 

- “” is displayed on the LCD.
- After the POWERCHILL operation ends in 20 minutes the system automatically resumes operation the previous setting were used before POWERCHILL mode.

■ To cancel POWER CHILL operation

1. Press  again.

- “” is Disappears from the LCD.

■ Notes on COANDA operation

- The flaps position will change, preventing air from blowing directly on the occupants of the room.
- If the up and down airflow direction is selected, the COANDA operation will be cancelled.
- The airflow rate can be set any level. However, a low airflow rate may result in the downward flow of cold air, and in air blowing at people.

■ Notes on POWER CHILL operation.

- When using POWERCHILL operation, some functions are not available.
- POWERCHILL operation can only be set when the unit is running.
- POWERCHILL operation will not increase the capacity of the conditioner if the air conditioner is already operating at maximum capacity.

■ In COOL operation

- To maximize the cooling effect, the capacity of outdoor unit is increased and the airflow rate becomes fixed at the maximum setting. However the temperature and airflow settings cannot be changed.

■ In Dry operation

- The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.

■ In FAN operation

- The airflow rate is fixed at the maximum setting.

ECONO Operations

ECONO Operation

ECONO operation enables efficient operation by limiting the maximum power consumption. This function is useful to prevent the circuit breaker from tripping when the unit operates alongside other appliances on the same circuit.

■ To start ECONO operation

1. Press  during operation.



- “” is displayed on the LCD.


■ To cancel ECONO operation

2. Press  again.

- “” disappears from the LCD.



■ Notes on ECONO operation

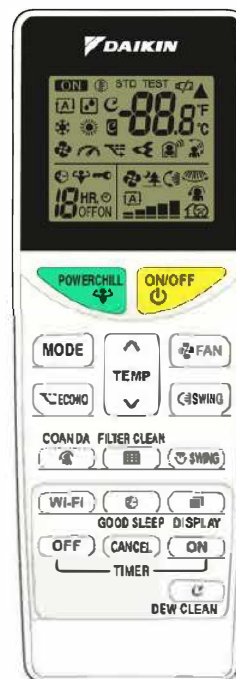- ECONO operation can only be set when the unit is running. Pressing  causes the settings to be cancelled, and “” disappears from the LCD.
- ECONO operation functions in COOL and DRY operation.
- POWER CHILL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- This operation is performed with lower power and therefore may not provide a sufficient cooling effect.



Notes

■ Notes on ECONO operation :

- ECONO operation can only be set when the unit is running. Pressing  causes the setting to be cancelled, and  disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit.
- ECONO operation functions in COOL and DRY operation.
- POWER CHILL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- If the power consumption level is already low, switching to ECONO operation will not reduce the power consumption.
- This operation is performed with lower power and therefore may not provide a sufficient cooling effect.

TIMER/GOOD SLEEP Operation

TIMER Operation


Timer function are useful for automatically switching the air conditioner ON or OFF in the morning or at night. You can also use the ON TIMER and GOOD SLEEP OFF TIMER together.

To use ON TIMER operation

1. Press **ON**

 "HRL ON" is displayed on the LCD

- Each pressing of **ON** changes the time setting by 1 hour.
- The time can be set between 1 and 12 hours.
- The TIMER lamp light orange.




To use OFF TIMER operation

1. Press **OFF**

 "HRL OFF" is displayed on the LCD

- Each pressing of **OFF** changes the time setting by 1 hour.
- The time can be set between 1 and 9 hours.
- The TIMER lamp light orange.



To cancel TIMER operation

1. Press **CANCEL**

- "HRL OFF" disappears from the LCD.
- The TIMER lamp goes off.

To combine ON TIMER and GOOD SLEEP OFF TIMER

- A sample setting for combining the 2 timers is shown below.
- "ON" and "OFF" are displayed on the LCD.



Note

Note on TIMER operation

- When you set the ON /GOOD SLEEP OFF TIMER, the time setting is kept in the memory . However this memory is cleared when you replace the batteries in the remote controller.

To use GOOD SLEEP OFF TIMER operation

1. Press **GOOD SLEEP** during COOL operation.

- "C" blinks for a few seconds.
- The temperature shift value (Default+2) is displayed on the LCD for a few seconds.
- "C" "OFF" and the stop time (default+2H.) are displayed on the LCD.
- The TIMER lamp lights orange.

2. Press **TEMP** while "C" is blinking.

- Each pressing of the button changes temperature shift value by 1°C.
- You can specify a temperature shift value between +1°C and +5°C.

3. Press **GOOD SLEEP** while "C" is blinking.

- Each pressing of the button changes the time setting.
- The time can be set between 1 and 9 hours.
1 hour....→ 9 hours → OFF

To cancel GOOD SLEEP OFF TIMER operation

1. Press **CANCEL**

- "HRL OFF" disappears from the LCD.
- The TIMER lamp goes off.

NOTE

Notes on GOOD SLEEP OFF TIMER operation

- The set temperature increases by 0.5°C in 30 minutes until the total increase reaches the specified shift value. There is no function for heating the room.

EXAMPLE

Temperature shift value at +2°C, OFF TIMER at 8 hours

Temperature shift value at +5°C, OFF TIMER at 8 hours



In the following cases, set the timer again.

- After the circuit breaker has turned off.
- After a power failure.
- After replacing the batteries in the remote controller.

LED / 7 SEGMENT BRIGHTNESS Control Operation

The brightness of the indicator lamp or 7- Segment display can be adjusted to H(high),L(low), or OFF .


To set the brightness setting mode.


- Press  for more than 5 seconds.

- **Ld** is displayed on the LCD.

- Press the  button to show the last memory setting of the brightness intensity of the indicator lamp or 7-Segment display.

- Again press the  button to adjust the brightness of the indicator lamp or 7-Segment display.

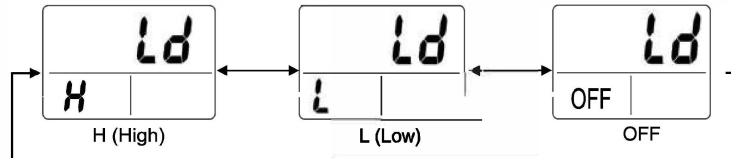


- Press the  button for more than 5 seconds again to exit from the brightness setting mode. Alternatively if the remote controller is left untouched for 60 seconds, it will automatically return to normal mode.

Note

- “Ld” indicates the brightness(Light)feature which appears in the set temperature area .
- Remote will show to High Brightness Intensity by default whenever batteries are inserted.
- Keep this in mind that if user sets LED lights to be in “OFF” state (using Brightness control feature) and if power failure occurs then when power will resume LED will remain in OFF state (needs to reset LED Brightness Control again).



Wi-Fi Operation

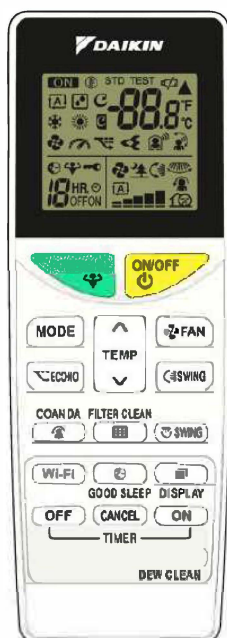

To connect the wireless LAN connecting adapter to your home network

- To connect the wireless LAN adapter to the home network firstly turn ON the machine through the main power supply.
- Turn off the machine through the remote, keeping the remote display on while the machine is turned OFF.
- With the remote display ON, press the Wi-Fi key for about 5 seconds and follow the below process.
- The wireless LAN connecting adapter can be connected to your home network by means of:
 - 1) Simple connection (WPS connection), if there is a WPS button on the router.
 - 2) Access point connection (AP connection). If there is no WPS button on the router.



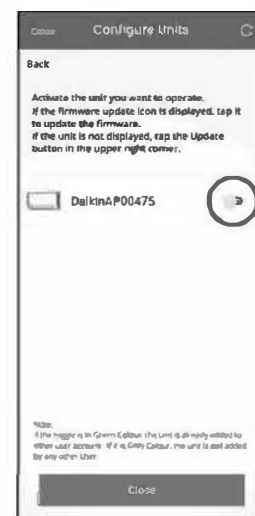


Fig.1

■ Simple connection (WPS connection)

- 1) Press and hold **Wi-Fi** button on remote controller for about 5sec.
- 2) Press **TEMP** or **TEMP** button and select number 2.
 - “SP” appears on the LCD.
 - “2” Blinks.
- 3) Press **Wi-Fi/C** button to confirm the WPS selected setting.
 - “▲” Blinks.
 - Operation & Timer LED start blinking simultaneously.
- 4) Press the WPS button on your communication device(e.g. router) within approximately one minute. Please refer to the manual of your communication device,
 - Only the Timer LED (Orange color) will blink, indicating successful connection between home router and machine.
 - Operation & Timer LED (Green and Orange color) will blink continuously.

If you fail to connect, refer to Note
- 5) Press **CANCEL** button to return to the default screen of remote.
- 6) Open the DAIKIN AC MANAGER 2.0 MOBILE APP and select “Add Units” on Homescreen. Connect to your home network and then follow the on-screen instructions.
- 7) Connect your smart phone to your home network.
- 8) Open the Home screen of the DAIKIN AC MANAGER 2.0 MOBILE APP. The air conditioner will be listed there (Fig.1).

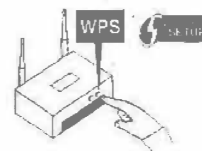

NOTE

Note on simple connection (WPS connection)

- If user did not connect within 3 minutes of Operation & Timer LED blinking, then Wi-Fi Module will not be able to connect with home router and user need to again start the SP2 process. Alternatively, try connecting via your device directly, Please refer to “Access point connection (AP connection)”

Wi-Fi Operation

To connect the wireless LAN adapter with the home network, first turn ON the machine through main power supply. Turn Off the machine through remote, keep remote display ON while machine is turned OFF.

■ Access point connection (AP connection).

If your home Wi-Fi router does not have a WPS button, you can connect your smart phone directly to the wireless LAN connecting adapter in order to set up a connection to your home network by following these steps.

- This step requires SSID number and key located on the indoor unit.


■ To enable the wireless LAN connecting adapter:

- 1) Press and hold the **Wi-Fi** button on the remote controller for about 5 sec.

- 2) Press **TEMP** or **TEMP** button and select number 1.

- “**SP**” appears on the LCD.


- “**—|—**” blinks.

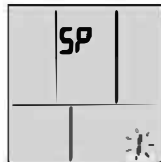

- 3) Press **Wi-Fi** to confirm the selected setting.

Timer LED (Orange) and Operation LED (Green) will blink Alternatively during the AP Connection for 3 minutes.

- 4) Connect the wireless LAN connecting adapter to a smart phone. View available Wi-Fi networks on your smart phone or tablet and select the SSID (Daikin AP****) printed on the sticker. SSID and KEY are located on the indoor unit, as shown in the below image.


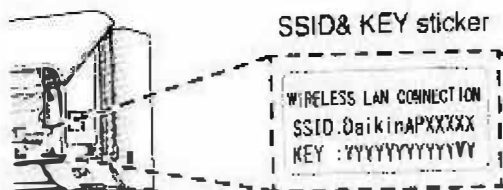


- 5) Press **CANCEL** to return to the default screen.

- 6) Open the DAIKIN AC MANAGER 2.0 MOBILE APP and select “Add Units” (Fig.2) and connect to your home network as per the on-screen instructions.

- 7) Connect your smart phone to your home network.

- 8) Open the Home screen of the DAIKIN AC MANAGER 2.0 MOBILE APP. The air conditioner will be listed there.

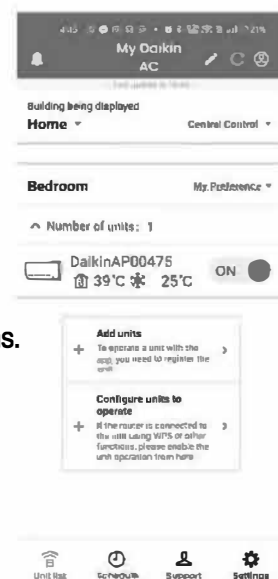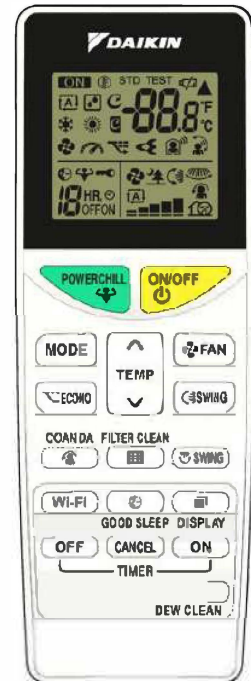

NOTE

- Once the connection between wireless LAN connecting adapter & router is established successfully, the timer LED will blink.
- SSID sticker location is for representation purpose only.

Fig.2



Wi-Fi Operation

Reset connection setting to factory defaults.

- To reset the wireless LAN connection, firstly turn ON the machine through the main power supply .
- Turn OFF the machine using the remote, keep the remote display ON while machine is turned OFF.

Please note

When the device is reset, machine will forget already saved home router password.

All previous setting/data of wireless LAN would be lost and user needs to re-add the machine.


To reset

1) Press and hold **Wi-Fi** for 5 seconds on the default screen.

2) Press  or  button and select option **R** .

- “**SP**” appears on the LCD.

- “**R**” Blinks.

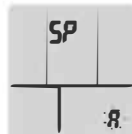

3) Press and hold **Wi-Fi** button for 2 seconds to confirm the selected setting.

4)The Operation and Timer LED will blink simultaneously for approximately 3 min

5) Press  to return to the default screen.

To disable the wireless LAN connecting adapter


To disable the wireless LAN connecting adapter to the home network ensure that the unit is turned OFF through the remote and keep the remote display ON while the machine is turned OFF.

1) Press and hold **Wi-Fi** button on remote controller for about 5sec.

2) Press  or  button and select option OFF.


- “**SP**” appears on the LCD.

- “**OFF**” Blinks.

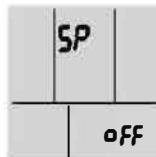

3) Press and hold **Wi-Fi** button for 2sec to confirm the selected setting.

4)Operation & Timer led will blink alternatively for 1 min.

5) Press  button to return to the default screen.

NOTE






- If remote batteries are removed /replaced during wireless LAN enable or disable process the remote controller will forget previous setting and the user will need to perform enable or disable process again .
- If the Wi-Fi module is already connected to your home network and the user attempts to repeat the WPS connection or AP connection method, then blinking pattern may differ.
- In case there is no connection or disconnection between Wi-Fi Module and Indoor PCB, and then if user try to connect through WPS or AP connection methods, then machine will not show any blinking.
- After adding a unit via the mobile App or smart speakers, if the seven-segment display does not function when operated with the remote controller, the user should turn the unit off and then back on using the main power supply or Indoor ON/OFF Switch .


DEW CLEAN Operation

Dew Clean Operation

- Dew Clean function helps in cleaning the accumulation of dust and stains on the indoor Heat Exchanger.



■ To start the Dew Clean Operation:

- Using the remote, turn on the air conditioner.
- Press, hold and release the " " button for a duration between 2 to 9 seconds.
- The "  " symbol will blink four times on remote LCD screen and remain visible in the LCD display.
- After the completion of blinking by the "  " symbol, the LCD display shall return to normal. The ON symbol " ON ", the fan symbol with Auto Fan speed "  ", and the Dew clean symbol "  " shall remain on the LCD display for the entire duration of the Dew Clean function operation (Refer to image 1).

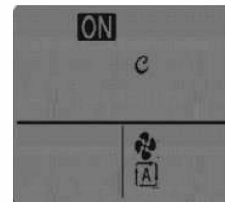


■ To check the Dew Clean Operation:

- During the operation, the LED indicator lamp (green and orange) on the indoor unit will blink simultaneously.
- The operation stops automatically according to the defined process, and the unit shall be switched off after the completion of the Dew clean operation.

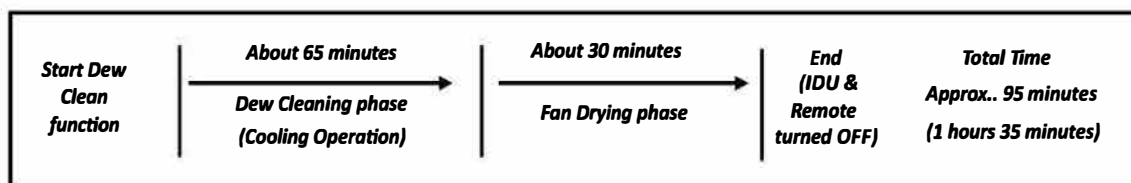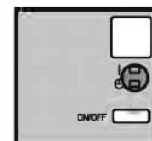

■ To cancel the Dew Clean Operation:

- Press, hold, and release the " " button for a duration between 2 to 9 seconds, or alternatively, use the "On/Off" button.
- Upon completion of the Dew Clean function (either by the stipulated time expiring or through cancellation of the operation), both the remote and the unit revert to the OFF state, restoring them to the state they were in before the Dew Clean function was activated.

■ Note on the Dew Clean Operation:


- Users are recommended to turn "OFF" other features (such as ON/OFF timer, good sleep etc.) before turning "On" Dew Clean operation.
- During the Dew Clean operation, all buttons except Power, Streamer, and Dew Clean shall be non-operable.
- The Dew Clean operation automatically controls temperature and airflow rate, rendering manual adjustments of these functions unavailable.
- In case of a main power reset or power failure, the Dew Clean operation will terminate.
- It is recommended that users avoid staying inside the room during the Dew Clean operation, as the indoor temperature will be lower.
- If the user removes and reinserts the battery while using the Dew Clean functions, the Dew Clean feature is turned OFF on the remote.
- The function will not operate if the room temperature is lower than 10°C.
- To ensure easy identification of the Dew Clean mode, it is advisable to keep the LED lights in the "ON" state using the Brightness control feature before starting the Dew Clean operation.
- The Dew Clean feature cannot be applied if the remote is in brightness control mode, fault diagnosis mode, construction mode, jumper setting, trial mode, or inspection and commissioning mode. To activate the Dew Clean feature, it is necessary to first exit from the other selected mode.
- Using this function once a month is recommended to achieve better cooling effects.
- This function is recommended to operate at a temperature exceeding 24°C.
- This function is available in both COOL and DRY modes of operation.


Checking the Inverter Output and Temperature Display

- The inverter output and temperature display for the indoor unit shows the current inverter output, indoor temperature, and set temperature.

■ Checking current inverter output, indoor temperature and set temperature when the air conditioner is in operation

1. Press  for ≥ 2 seconds during operation.

- Each press of  for ≥ 2 seconds, cycles the display through current inverter output, indoor temperature, and set temperature.

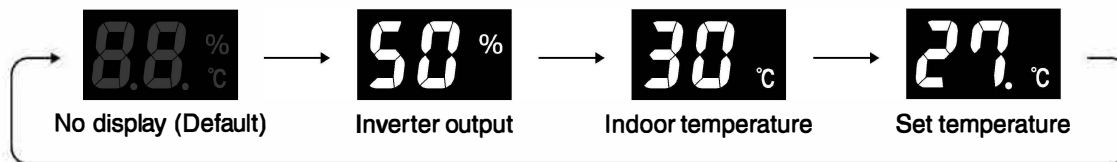


- The inverter output serves as an estimate of power consumption (where the rated power consumption is 100%.).
- There is “.” (dot) after the set temperature figure.
- The inverter output does not display when the unit is in FAN operation.
- The set temperature does not display when the unit is in DRY operation or FAN operation.
- Inverter output and set temperature may not display depending on the operation mode that is active.
- The display turns off when the unit is turned off.

■ Checking current indoor temperature when the air conditioner is off

1. Press  when the air conditioner is OFF.

- The current indoor temperature displays.
- Press the button again to turn off the display.

■ Note on the inverter output and temperature display

- “FL.” displays as inverter output when the rated power consumption is exceeded.
- “--” may display for a short while after the air conditioner is turned on or at other times.
- Inverter output may be low at times for the purpose of protecting the product.
- When the unit is operated using another device, such as a wired remote controller or smartphone, the set temperature displayed may not match the set temperature on the remote controller.
- An error code will display if the air conditioner fails to operate when turned on, consult your service center. Refer to the error code table in “Troubleshooting”.  Page 23
- Display is default OFF


FL. %


00

FILTER CLEAN INDICATOR Operation

Filter Clean Indicator function prompts the user to regularly clean the machine filters which gets clogged due to accumulation of dust, thereby avoiding a drop in machine performance.

■ To start Filter Clean Indicator operation:

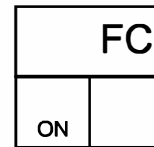

- Press and hold  button on the remote controller for about 5 sec.
- "FC" and "ON" will be displayed on the remote LCD for about 5 sec.




After completion of Filter Clean Indicator duration, IDU display will show "FC" and the Operation LED (Green) and Timer LED (Orange) will blink alternately for 5 minutes, This will indicate to the user that it's time to clean the filters. After cleaning the filters, user needs to reset the filter clean indicator operation by following the process below.




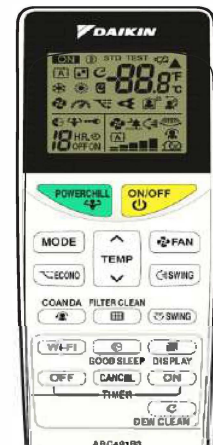
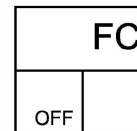
■ To reset the Filter Clean Indicator operation:

- Press and hold  +  buttons at same time for about 5 sec.
- "CL" will be displayed on the remote LCD for about 5 sec.

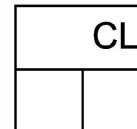




■ To cancel the Filter Clean Indicator operation:

- Press and hold  button on the remote controller for about 5 sec.
- "FC" and "OFF" will displayed on the remote LCD for about 5 sec.



Note

■ Notes on Filter Clean Indicator Operation:

- 1) User can temporarily remove "FC" from the IDU display and also temporarily stop the LED blinking by pressing  button (before the completion of 5 minutes).
- 2) After completion of the filter clean indicator duration, the IDU display will show "FC" and IDU LEDs will blink alternately for 5 minutes each time the machine is turned OFF and ON.
- 3) If the filter clean duration is completed while machine is operating then IDU display will not show "FC". IDU display will show "FC" once machine is turned OFF and ON.
- 4) The user can check whether the filter clean indicator operation is active or not by following the process below :
 - If the Filter Clean Indicator function is on and the Filter Clean button is pressed on the remote for about 2 seconds, the Indoor display will show "FC" for 5 sec and remote will display "FC" and "ON".
 
 - If the Filter Clean Indicator function is off and the Filter Clean button is pressed on the remote for about 2 seconds, the Indoor display will show "- -" for 5 sec and remote will display "FC" and "OFF".
 
- 5) If the user resets the filter clean indicator duration before it's completion, duration will again start from zero.
- 6) Filter Clean feature will not work during Dew Clean operation.
- 7) Filter Clean Indicator operation will work separately though remote & mobile application. Users are recommended to use this operation either from mobile application or remote at same time.



CAUTION

- Before cleaning, be sure to stop the operation and turn off the circuit breaker.
- Do not touch the aluminium fins of the indoor unit . If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, stand on a solid, stable base and take care not to fall.
- When removing or attaching the front panel, support the panel security with your hand to prevent it from falling.

Units

■ Indoor unit and remote controller

1. Wipe them with a dry soft cloth.


■ Front Panel

1. Open the front panel.

- Hold the front panel by the indentations in the unit and open the front panel.

2. Remove the front panel.

- Slide the front panel to either the left or right and pull it toward you to disengage one of the front panel shafts.
- Disengage the front panel shaft on the other side in the same manner.
- After disengaging both front panel shafts, pull the front panel toward yourself and remove it.

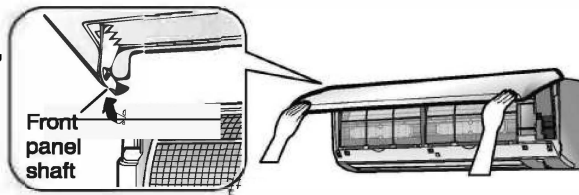


3. Clean the Front panel.

- Wipe it with a soft damp cloth.
- Only neutral detergent may be used.
- In case of washing the panel with water, wipe it with a dry soft cloth, and let it dry in the shade after washing.

4. Attach the front panel.

- Align the front panel shaft on the left and right of the front panel with the grooves, then push them all the way in.
- Close the front panel slowly.
- Press the front panel at both sides and the centre.
- After cleaning, make sure that the front panel is securely fixed.

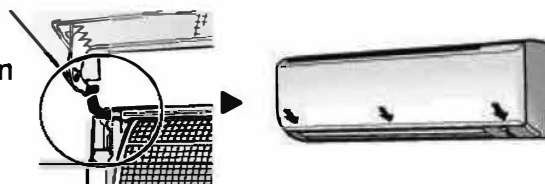

NOTE

For cleaning, do not use any of the following:

- Water hotter than 40°C
- Polishing compounds
- Volatile liquid such as benzene, petrol and thinner
- Rough materials such as a scrubbing brush

Air Filter

1. Pull out the air filters.


- Open the front panel.
- Push the filters tab at the center of each air filter a little upwards, then pull it down.

2. Wash the air filters with water or clean them with a vacuum cleaner.

- If the dust does not come easily, wash the air filters with Neutral detergent thinned with Luke warm water, then let them dry in the shade.
- It is recommended to clean the air filters every 2 weeks.

3. Reattach the filters and close the front panel.

- Insert the filters into slots of the front grille. Close the front panel slowly and push the panel at the 3 points.

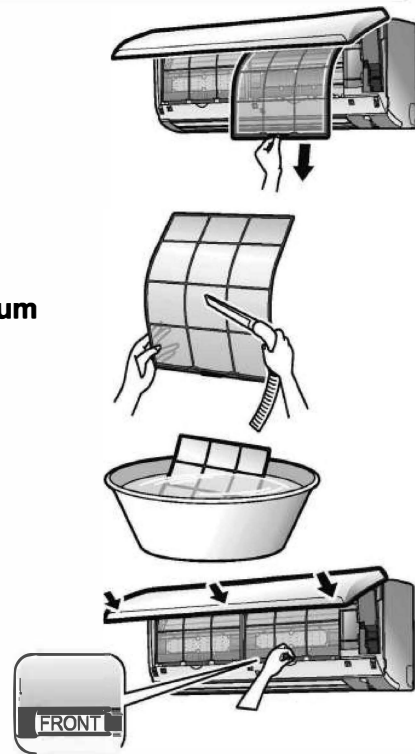

Accessory filter for front grille

Filter Type: Micro-filter (PM 2.5)

Accessory filters can also be attached to the front grille.

[Attaching]

1. Open the front panel and pull out the air filters.

2. Set the accessory filters under the tabs of the filter frame on the indoor unit.

The accessory filters can be renewed by cleaning them with a vacuum cleaner. Once every 6 months. However we recommend replacing them once every 6.5 years.

1. Take off the accessory filters.


- 1) Open the front panel and pull out the air filters.
- 2) Take off the accessory filters.
 - Remove the accessory filters from the tabs.

2. Vacuum dust.

- Do not wash the accessory filters as this will reduce their efficiency.

[Replacement]

1. Replace the old accessory filters with new accessory filters.



[Replacement]

1. Replace the old accessory filters with new accessory filters.


NOTE

- When applying for the filter for the first time, specify “with frame”.
- To order an optional filter, contact the service shop where you bought the air conditioner.
- Dispose of the old filter as non-flammable waste.
- Dispose of the old filter frame in accordance with your local waste sorting procedures.

ITEMS	PART NO.
PM1.0 + 3-Layer Filter (1 set)	KAF100A508
PM1.0 + Cetachin & CO2 Filter (1 set)	KAF100A509
PM1.0 + Apataito Filter (local) (1 set)	KAF100A510
PM2.5 + Active Carbon Filter (1 set)	KAF250A511
PM2.5 + Apataito Filter (local) (1 set)	KAF250A512
PM2.5 + Vitamin C Filter (1 set)	KAF250A513

- Operation with dirty filters: (1) cannot deodorise the air. (2) cannot clean the air.
(3) results in poor cooling. (4) may cause odour.

■ Prior to a long period of non-use

1. Operate the FAN mode for several hours on a fine day to dry out the inside.
 - Press **[MODE]** and select FAN operation. • Press  and start the operation.
2. After operation stops, turn off the circuit breaker for the room air conditioner.
3. Clean the air filters and set them again.
4. To prevent battery leakage, take out the batteries from the remote controller.

We recommend periodical maintenance.

In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist in addition to regular cleaning by the user. For specialist maintenance, Please contact your service centre.
The maintenance cost must be borne by the user.

These cases are not problems

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Explanation
Operation does not start soon. <ul style="list-style-type: none"> When "ON/OFF" button was pressed soon after operation was stopped. When the mode was reselected. 	<ul style="list-style-type: none"> This is to protect the air conditioner. You should wait for about 3 minutes.
Air does not come out.	<ul style="list-style-type: none"> If the operation is started when the airflow setting is "Auto", the SMELL PROOF operation starts running to prevent unpleasant odour inside the indoor unit. Wait for about 1 minute. (Except when POWER CHILL operation is set) ▶Page 12
The flaps do not start swinging immediately.	<ul style="list-style-type: none"> The air conditioner is adjusting the position of the flaps. The flaps will start moving soon.
Operation stopped suddenly. (OPERATION lamp is on)	<ul style="list-style-type: none"> To protect the system, the air conditioner may stop operating after sudden large voltage fluctuations. It automatically resumes operation in about 3 minutes. Voltage range protection: 130V-285V
A sound is heard.	<p>■ A sound like flowing water</p> <ul style="list-style-type: none"> This sound is generated because the refrigerant in the air conditioner is flowing. This is a pumping sound of the water in the air conditioner and can be heard when the water is pumped out from the air conditioner during COOL or DRY operation. <p>■ Blowing sound</p> <ul style="list-style-type: none"> This sound is generated when the flow of the refrigerant in the air conditioner is switched over. <p>■ Ticking sound</p> <ul style="list-style-type: none"> This sound is generated when the cabinet and frame of the air conditioner slightly expand or shrink as a result of temperature changes. <p>■ Clopping sound</p> <ul style="list-style-type: none"> This sound is heard from the inside of the air conditioner when the exhaust fan is activated while the room doors are closed. Open the window or turn off the exhaust fan.
The outdoor unit emits water or steam.	<p>■ In COOL or DRY operation</p> <ul style="list-style-type: none"> Moisture in the air condenses into water on the cool surface of the outdoor unit piping and drips.
Mist comes out of the indoor unit.	<ul style="list-style-type: none"> This happens when unit cooling in high humidity or if unit exposed to excessive oil, dust due to this irregular temperature may occur.
The indoor unit gives out odour.	<ul style="list-style-type: none"> The room odour absorbed in the unit is discharged with the airflow. We recommend you to have the indoor unit cleaned. Please consult your service centre.

Case	Explanation
The outdoor fan rotates while the air conditioner is not in operation.	<ul style="list-style-type: none"> ■ Immediately after the air conditioner is stopped: <ul style="list-style-type: none"> • The outdoor unit fan continues rotating for about another 1 minute to protect the system. ■ While the air conditioner is not in operation: <ul style="list-style-type: none"> • When the outdoor temperature is high, the outdoor unit fan may start rotating to protect the system.
Remote controller does not work properly.	<ul style="list-style-type: none"> ■ No remote controller signals are displayed. ■ The remote controller sensitivity is low. ■ The display is low in contrast or blacked out. ■ The display runs out of control. <ul style="list-style-type: none"> • The batteries are dying and the remote controller is malfunctioning. Replace both batteries with new, dry batteries (AAA). For details, refer to “To insert the batteries” of this manual.

Check again.

Please check again before requesting repairs.

Case	Explanation
The air conditioner does not operate. (OPERATION lamp is off)	<ul style="list-style-type: none"> • Has the circuit breaker been tripped or the fuse blown? • Is there a power failure? • Are batteries set in the remote controller? • Is the timer setting correct?
The room does not cool down.	<ul style="list-style-type: none"> • Is the airflow rate setting appropriate? If the airflow rate setting is too low, increase it. • Is the set temperature appropriate? • Is the adjustment of the airflow direction appropriate? • Are the air filters dirty? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Is a window or door open? • Is the air conditioner in ECONO operation or GOOD SLEEP OFF TIMER operation?
Operation stops suddenly. (OPERATION lamp is blinking)	<ul style="list-style-type: none"> • Are the air filters dirty? Clean the air filters. • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? Stop operation and after turning off the circuit breaker, remove the obstruction. Then restart operation with the remote controller. If the OPERATION lamp is still blinking, check the error code and consult your service centre.
An abnormal functioning happens during operation.	<ul style="list-style-type: none"> • The air conditioner may malfunction with lightning or radio waves. Turn off the circuit breaker, turn it on again and try operating the air conditioner with the remote controller.

Call your service centre immediately

⚠ WARNING

- When an abnormally (Such as a burning smell) occurs, stop operation and turn off the circuit breaker.
Continued operation in an abnormal condition may result in problems, electric shock or fire.
Consult your service centre.
 - Do not attempt to repair or modify the air conditioner by yourself.
Incorrect work may result in electric shock or fire.
Consult your service centre.
- If one of the following problem takes place, call your service center immediately.

- **The power cord is abnormally hot or damaged.**
- **An abnormal sound is heard during operation.**
- **The circuit breaker, a fuse, or the earth leakage circuit breaker cuts off the operation frequently.**
- **A switch or a button often fails to work properly.**
- **There is a burning smell.**
- **Water leaks from the indoor unit.**




**turn off the circuit breaker
and call your service centre.**

- **After a power failure**
The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

- **Lighting**
If there is a risk lightning could strike in the neighbourhood, stop operation and turn off the circuit breaker to protect the system.

Disposal requirements

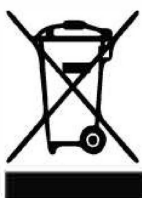

Your air conditioning product is marked with this symbol. This means that electrical and electronic products shall not be mixed with unsorted household waste.

Do not try to dismantle the system yourself: the dismantling of the air conditioning system, treatment of the refrigerant, of oil and of other parts must be done by a qualified installer in accordance with relevant local and national legislation.

Air conditioners must be treated at a specialized treatment facility for re-use, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. Please contact the installer or local authority for more information.

Batteries must be removed from the remote controller and disposed of separately in accordance with relevant local and national legislation.

Fault diagnosis by remote controller

The remote controller can receive relevant error codes from the indoor unit.

1. When **CANCEL** is held down for about 5 seconds, “ ” blinks in the temperature display section.
2. Press **CANCEL** repeatedly until a long beep is produced.
 - The code indication changes as shown below, and notifies with a long beep.

	CODE	MEANING
SYSTEM	00	NORMAL
	UA	INDOOR-OUTDOOR UNIT COMBINATION FAULT
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A1	INDOOR PCB DEFECTIVENESS
	A5	FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
OUTDOOR UNIT	E1	CIRCUIT BOARD FAULT
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	E8	OVERCURRENT INPUT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	F6	HIGH PRESSURE CONTROL (IN COOLING)
	F8	OPERATION HALT DUE TO COMPRESSOR INTERNAL TEMPERATURE ABNORMALITY
	H0	SENSOR FAULT
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	DC CURRENT SENSOR FAULT
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L3	ELECTRICAL PARTS HEAT FAULT
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

NOTE

- A short beep indicates non-corresponding codes.
- To cancel the code display, hold down **CANCEL** for about 5 seconds.
The code display also cancels itself if the button is not pressed for 1 minute.

DAIKIN INDUSTRIES, LTD.

Head office:

Osaka Umeda Twin Towers South
1-13-1, Umeda, Kita-ku, Osaka, 530-0001, Japan

Tokyo office:

Yaesu Central Tower, Tokyo Midtown Yaesu,
2-2-1, Yaesu, Chuo-ku, Tokyo, 104-0028, Japan
<http://www.daikin.com>

DAIKIN ROOM AIR CONDITIONER



INSTALLATION MANUAL




MODELS:
FTKR35XV16VAA
FTKR50XV16MKA
FTKR60XV16MAA

Safety Precautions

- The precautions described herein are classified as **WARNING** and **CAUTION**. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of **WARNING** and **CAUTION** notices





	WARNING	Failure to follow these instructions properly may result in personal injury or loss of life.
	CAUTION	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- The safety marks shown in this manual have the following meanings:


	Be sure to follow the instructions.		Be sure to establish an earth connection.		Never attempt.
---	-------------------------------------	---	---	---	----------------

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.

WARNING

- Ask your dealer or qualified personnel to carry out installation work.
Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.
- Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire.
- Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.
- Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury.
- Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.
- Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.
- Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire.
- When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.
- If refrigerant gas leaks during installation, ventilate the area immediately.
Toxic gas may be produced if the refrigerant comes into contact with fire. 
- After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker. 
- When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R32). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.
- During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- Be sure to earth the air conditioner.
Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks. 
- Be sure to install an earth leakage circuit breaker. Failure to install an earth leakage circuit breaker may result in electric shocks or fire.
- Do not pump down when the refrigerant has leaked, otherwise the compressor may be damaged. 

CAUTION

- Do not install the air conditioner at any place where there is a danger of flammable gas leakage.
In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out. 
- While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.
- Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.
- Take adequate steps to prevent the outdoor unit being used as a shelter by small animals.
Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.
- The temperature of refrigerant circuit will be high, please keep the inter-unit wires away from copper pipes that are not thermally insulated.

Accessories ㉠ ~ ㉠

ITEM	QTY.	Remarks	ITEM	QTY.	Remarks
㉠ Mounting plate	1	O	㉠ Remote controller holder fixing screw (M3 x 20L)	2	※
㉡ Mounting plate fixing screw (M4 x 25L)	6/7*	O	㉡ 4-Core wire (3.7M)	1	※
㉢ Wireless Remote Controller	1	O	㉢ Tie wrap	6	※
㉣ Dry battery (AAA)	2	O	㉣ Accessory filter	1/2*	※
㉤ Indoor Unit Fixing Screw (M4 x 12L)	2	O	㉤ Gas pipe (3.0M)	1	※
㉥ Operation Manual + Installation Manual	1+1	O	㉥ Liquid pipe (3.0M)	1	※
㉦ E-Waste (Guideline)	1	※	㉦ Drain socket	1	※
㉧ Product warranty	1	※	㉧ Heat insulation tape	1	※
㉨ Remote controller holder	1	※	㉨ WI-Fi manual	1	※

'O' Applicable for all models '※' Applicable only for selected models. '*' Quantity may vary model to model.

Note: The accessories parts included with the unit displayed on the packing case name plate / Label of indoor and outdoor packing case

Table No. 1

Precautions for Selecting a Location

- Before choosing the installation site, obtain user approval.

Indoor unit

The indoor unit should be positioned in a place where:

- the restrictions on the installation requirements specified in "Indoor/Outdoor Installation Diagram" are met,
- both the air inlet and air outlet are unobstructed,
- the unit is not exposed to direct sunlight,
- the unit is away from sources of heat or steam,
- there is no source of machine oil vapour (this may shorten the indoor unit service life),
- cool air is circulated throughout the room,
- the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may affect the remote controller range,
- the unit is at least 1m away from any television or radio set (the unit may cause interference with the picture or sound),
- the unit can be installed at the recommended height (1.8m),
- no laundry equipment is nearby.

Outdoor unit

The outdoor unit should be positioned in a place where:

- the restrictions on the installation requirements specified in "Indoor/Outdoor Installation Diagram" are met,
- drain water causes no trouble or problem in particular,
- both air inlet and outlet have clear paths of air (they should be free of snow in snowy districts),
- the unit is in a clear path of air but not directly exposed to rain, strong winds, or direct sunlight,
- there is no fear of inflammable gas leakage,
- the unit is not directly exposed to salt, sulfidized gases, or machine oil vapour (these may shorten the service life of the outdoor unit),
- operating sound or hot airflow does not cause trouble to neighbours,
- the unit is at least 3m away from any television or radio antenna.


Outdoor Unit Installation Space Requirements




CAUTION

When carrying the outdoor unit during installation, wear gloves to avoid injury.

- Position the unit on a horizontal surface.
Any tilt in the unit (front to back, right to left) should be 3° or less to the horizontal.
- Where a wall or other obstacle is in the path of the outdoor unit's intake or exhaust airflow, follow the installation space requirements below.
- For any of the below installation patterns, the wall height on the outlet side should be 1200mm or less.




Viewed from the front




Viewed from the side

Wall facing one side

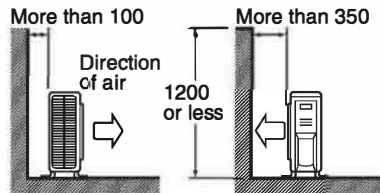


Side view

Walls facing two sides

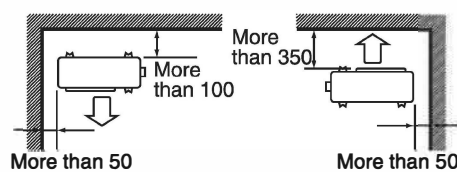

Top view

Walls facing three sides

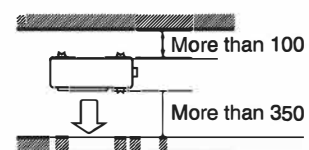


Top view


unit: mm

Indoor/outdoor Unit Installation Diagram

- The mounting plate should be installed on a wall which can support the weight of the indoor unit.

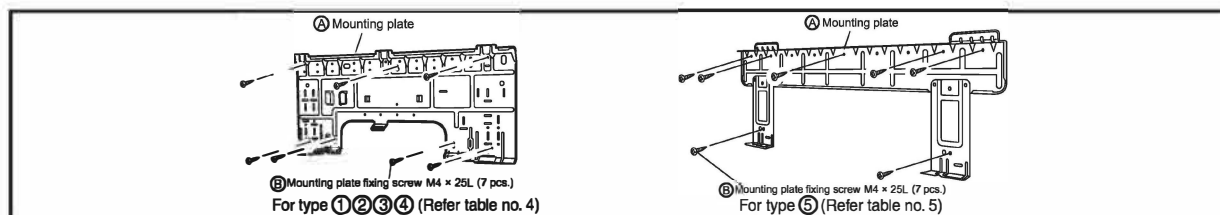

Note: Before installation, mounting plate size & shape must be matched with mounting plate available in the unit, then accordingly follow the installation instruction.

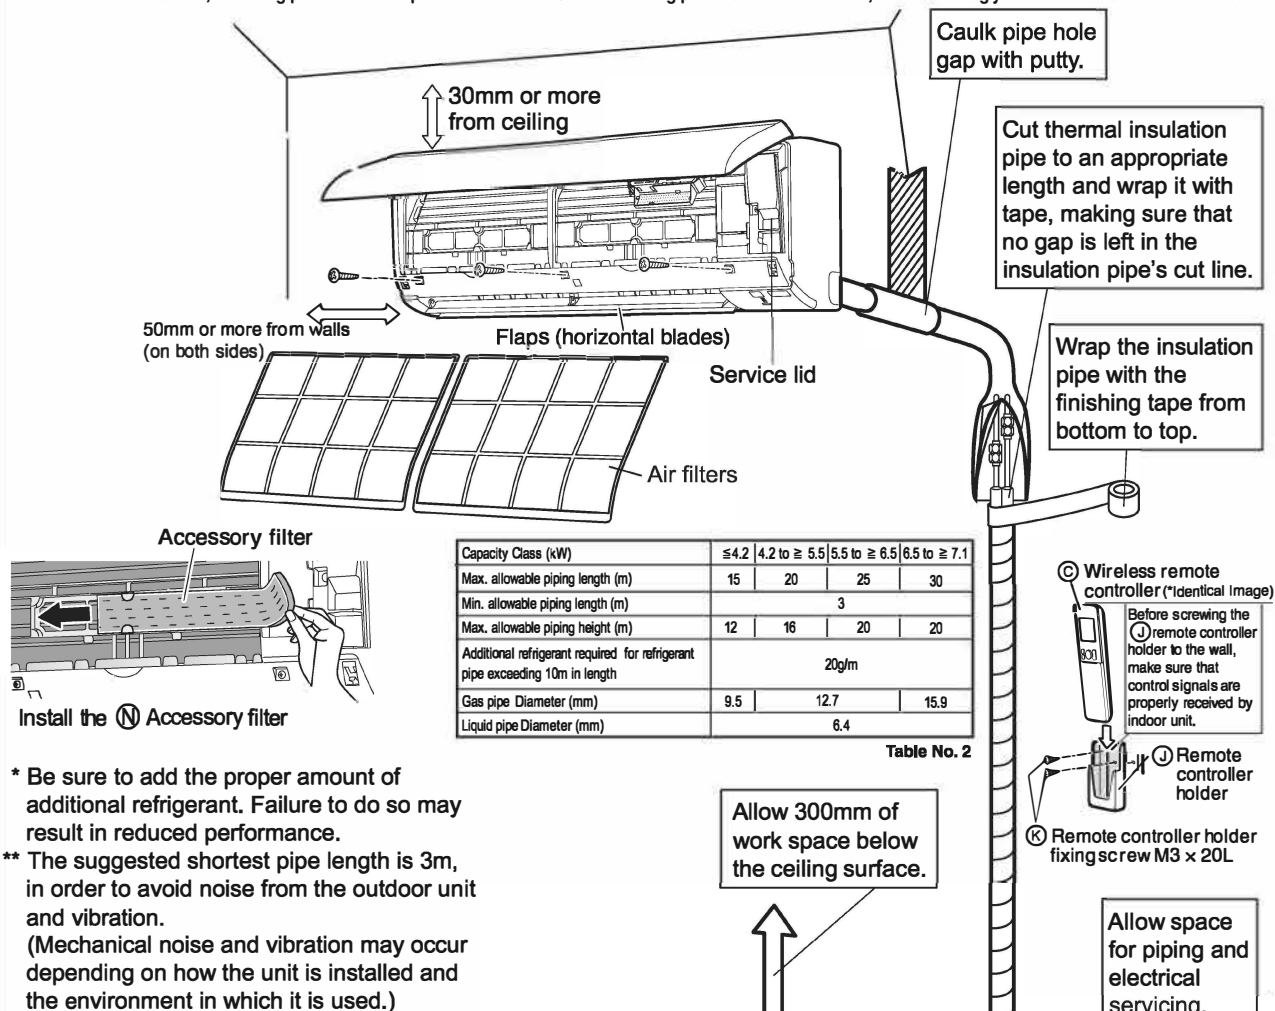

Capacity Class (kW)	≤4.2	4.2 to ≥ 5.5	5.5 to ≥ 6.5	6.5 to ≥ 7.1
Max. allowable piping length (m)	15	20	25	30
Min. allowable piping length (m)	3			
Max. allowable piping height (m)	12	16	20	20
Additional refrigerant required for refrigerant pipe exceeding 10m in length	20g/m			
Gas pipe Diameter (mm)	9.5	12.7	15.9	
Liquid pipe Diameter (mm)	6.4			

Table No. 2

- * Be sure to add the proper amount of additional refrigerant. Failure to do so may result in reduced performance.
- ** The suggested shortest pipe length is 3m, in order to avoid noise from the outdoor unit and vibration. (Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)


Dimensions of ODU installation leg*				
Type	Applicable unit size* [H] x [W] x [D]	A	B	C
①	418 x 695 x 244	467	119.5	287
②	550 x 675 x 284	470	97	308
③	550 x 765 x 285	573.5	131	326
④	595 x 845 x 300	574	105.5	311
⑤	695 x 930 x 350	610	175	367

* Unit size available on name plate.

Table No. 3

In sites with poor drainage, use block bases for outdoor unit. Adjust foot height until the unit is leveled. Otherwise, water leakage or pooling of water may occur.

Note: All shapes or appearance may vary from actual parts.

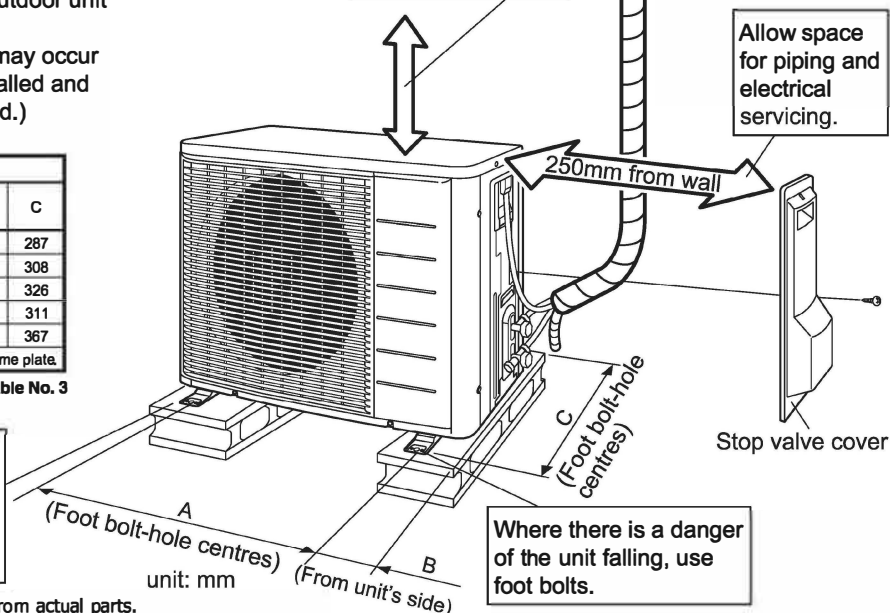

Installation Tips


■ Installing and Removing the indoor unit.

• Installation method

Hook the claws of the bottom frame to the mounting plate.
If the claws are difficult to hook, remove the front grille.

• Removal method

Push up the marked area (at the lower part of the front grille) to release the claws. If it is difficult to release, remove the front grille.

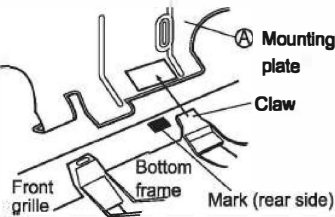

⚠ CAUTION

Do not hold the midsection of the bottom of the front grille when carrying the indoor unit.


■ Removing and installing the front panel.

• Removal method

Hold the front panel by the indentations in the main unit and open the panel. Slide the front panel sideways to disengage the front panel shaft.


Then pull the front panel toward you to remove it.

You can also remove the front panel by pushing it open until the front panel shaft is disconnected.

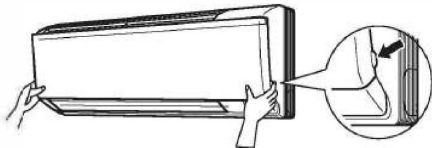

• Installation method


Align the front panel shaft of the front panel with the grooves, and push all the way in. Then close slowly. Push the centre of the lower surface of the panel firmly.

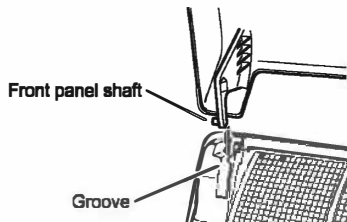

■ Removing and installing the front grille.

• Removal method

- 1) Remove the front panel to remove the air filter.
- 2) Remove the flap (horizontal blade).
- 3) Remove the front grille. (3 screws)
- 4) In front of the OOO mark of the front grille, there are 3 upper hooks. Lightly pull the front grille toward you with one hand, and push down on the hooks with the fingers of your other hand.

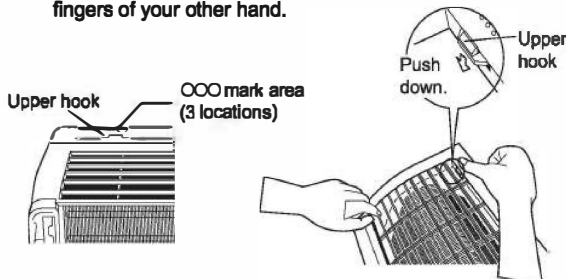


<When there is no work space because the unit is close to ceiling>

⚠ CAUTION

Be sure to wear protection gloves.

1) Push up.

Place both hands under the centre of the front grille, and while pushing up, pull it toward you.



• Installation method

- 1) Install the front grille and firmly engage the upper hooks (3 locations).
- 2) Install 3 screws of the front grille.
- 3) Install the air filter and then mount the front panel.

■ Opening the service lid.

The service lid is opening/closing type.


• Opening method

- 1) Remove the service lid screws.
- 2) Pull out the service lid diagonally down in the direction of the arrow.
- 3) Pull down.




■ How to set the different addresses.

- 1) Remove the battery cover of the remote controller.
- 2) Cut the address jumper.
- 3) Press the center of TEMP button and MODE button on the remote controller at the same time.
- 4) Select A (address setting) with TEMP▲ or TEMP▼ button.
- 5) Press MODE button to enter the address setting mode. Then, the indoor unit operation lamp blinks for 1 minute.
- 6) Press the indoor unit ON/OFF button while the operation lamp is blinking.
- 7) Press MODE button on the remote controller for 5 seconds to return to the normal mode.



ADDRESS	
EXIST	1
CUT	2

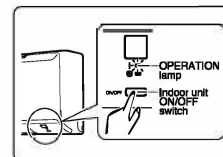

⚠ CAUTION


Replace the remote controller if you cut a jumper unintentionally. Jumper are necessary for electronic circuit. Improper operation may occur if you cut any of them.

Indoor Unit

1 Installing The Mounting Plate


- The mounting plate should be installed on a wall which can support the weight of the indoor unit.
 - 1) Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the boring points on the wall.
 - 2) Secure the mounting plate to the wall with screws.

Recommended mounting-plate retention spots and Dimensions

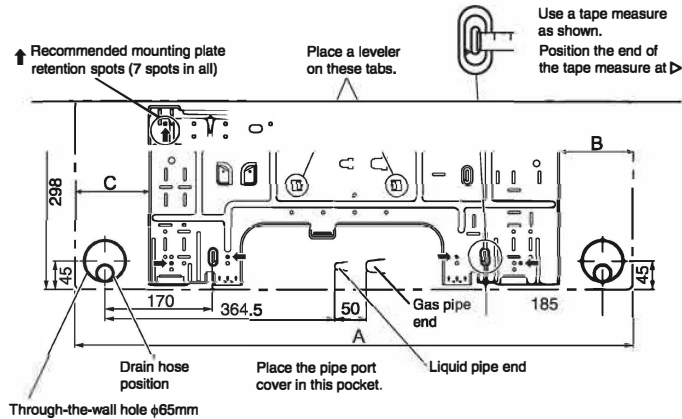

Applicable Unit Size*				
Type	[H] X [W] X [D]	A	B	C
①	298 x 800 x 229	800	116.5	116.5
②	298 x 821 x 235	821	128	126.5
③	298 x 885 x 229	885	116.5	116.5
④	298 x 906 x 235	906	127	127.5

* Unit size available on name plate.

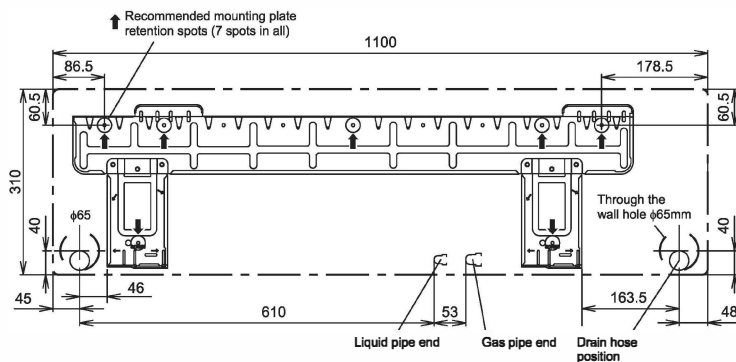Table No. 4

Applicable Unit Size*	
Type	【H】 X 【W】 X 【D】
⑤	310 x 1100 x 239

* Unit size available on name plate.

Table No. 5


All dimensions are in mm.

2 Drilling A Wall Hole And Installing Wall Embedded Pipe

⚠ WARNING

For metal frame or metal board walls, be sure to use a wall embedded pipe and wall hole cover in the feed-through hole to prevent possible heat, electrical shock, or fire.

- 1) Drill a feed-through hole with a 65mm diameter through the wall at a downward angle toward the outside.
- 2) Insert a wall embedded pipe into the hole.
- 3) Insert a wall hole cover into wall pipe.





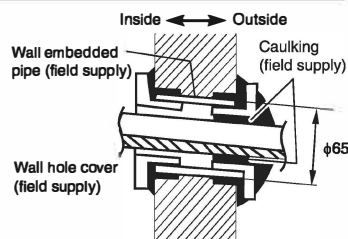


Indoor Unit

3 Installing The Indoor Unit

Right-Side, Right-Back or Right-Bottom Piping

- 1) Open the front panel, open the Front grille (If Required), then open the service lid. (Refer to Installation Tips.)
- 2) Shape the refrigerant pipes.
- 3) Pass the drain hose and refrigerant pipes through the wall hole.
- 4) Hang the indoor unit on (A) mounting Plate
- 5) Pass the inter-unit wires from the outdoor unit through the feed-through wall hole and then through the back of the indoor unit. Pull them through the front side. Bend the ends of tie wires upward in advance for easier work. (If the inter unit wires ends are to be stripped first, bundle wire ends with adhesive tape.)
- 6) Connect the refrigerant pipes.
- 7) Bind refrigerant pipe and drain hose with vinyl tape then wrap the refrigerant pipes and drain hose together with insulation tape (field supply) as shown in the figure.
- 8) Hook the claws of the bottom frame to the mounting plate, press the bottom frame of the indoor unit with both hands to set it on the (A) mounting plate hooks. Make sure the wire lead do not catch on the edge of the indoor unit.
- 9) Secure the indoor unit to the (A) mounting plate with the (D) indoor unit fixing screws (M4 x 12L).
- 10) Caulk the gap between the pipe and the front grille with putty.
- 11) After completing refrigerant piping, wiring and drain piping, caulk pipe hole gap with putty.

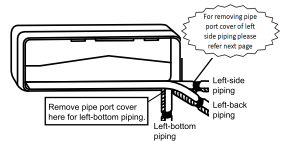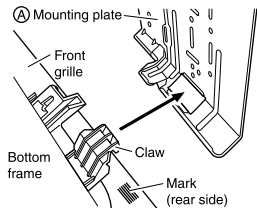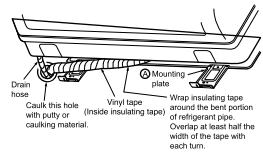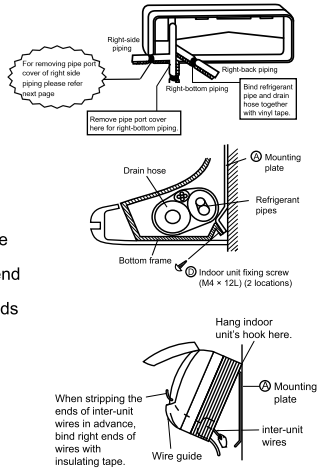


Left-Side, Left-Back, or Left-Bottom Piping

For left piping addition things need to be taken care.

- 1) Be sure to connect the drain hose to the drain port in place of a drain plug.
- 2) Install the unit as per mentioned above RHS side.

Well Embedded Piping

- 1) Insert the drain hose to this depth so it won't be pulled out of the drain pipe

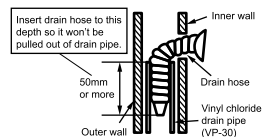


Indoor Unit

4 Installing The Indoor Unit

Right Side Piping and Left Side Piping



- 1) Firstly, remove the deco plate from front grill by pressing 6 locks given on its back side.
- 2) Use a plier or similar cutting tool to cut the material of deco plate given on both ends of internal cutout.
- 3) Use twisting or tearing force by hand to remove the remaining material of internal cutout and follow the same process to remove the outer cutout.
- 4) Use a plier or similar cutting tool to cut the material of Front Grill Internal and Outer Cutout & use twisting or tearing force by hand to remove the remaining material.
- 5) Re-attach Deco Plate with Front Grill after removing cutout material.

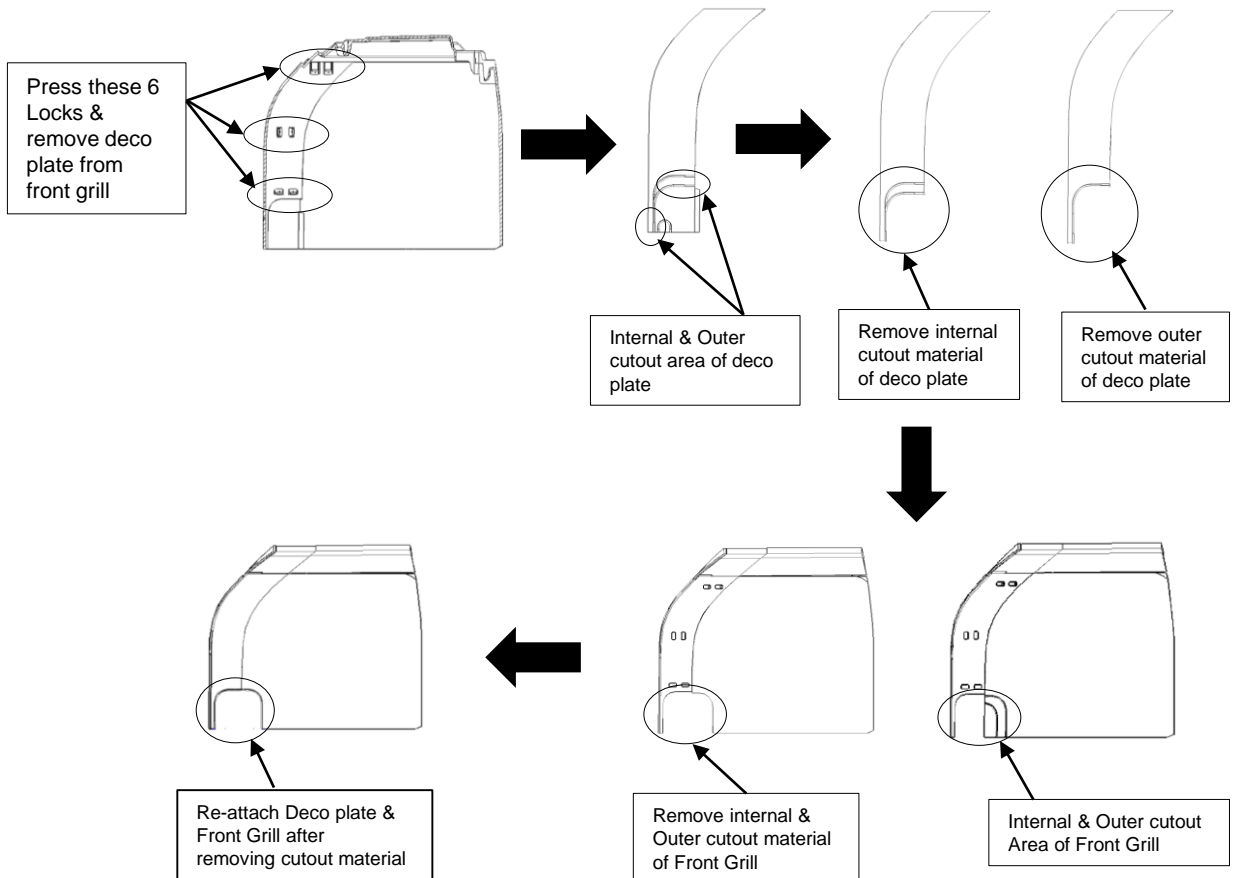

Indoor Unit

4 Wiring

- 1) Strip wire ends (15mm).
- 2) Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals with the screw.
- 3) Connect the earth wires to the corresponding terminals.
Attach the earth wire so that it is not connected to the fan motor connector.
- 4) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 5) Shape the wires so that the service lid fits securely, then close service lid.

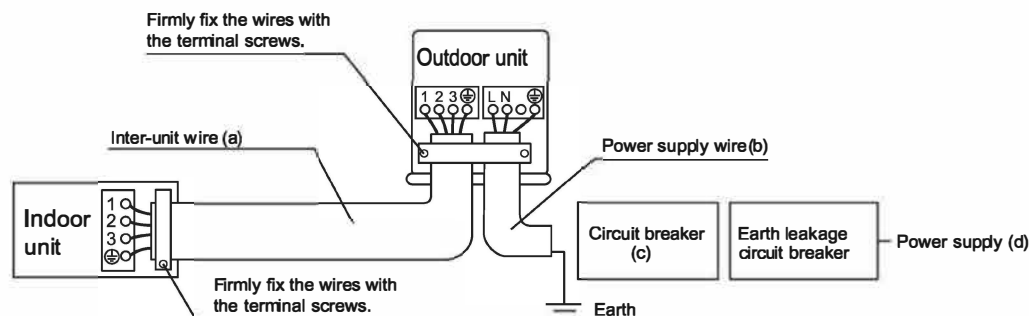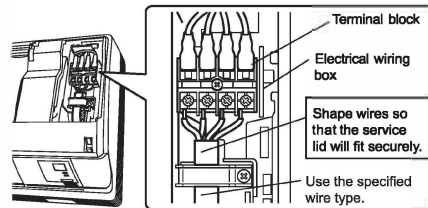

Capacity Class (kW)	2.5~3.7	above 3.7 and upto 7.1
Inter Unit wire (a)	4-core, 1.0 mm ² or more	4-core, 1.5 mm ² or more
Power supply wire (b)	3-core, 1.5 mm ² or more	
Wire Standard	IS:694 or country specific standard.	
Circuit breaker size (c)	15A or more	20A or more
Power supply (d)	50Hz 230V~or Country specific	

Note: Use 4-core 1.5 mm² wire if wire is not included with the unit.




Table No. 6

⚠ WARNING

- Use a stabiliser if required by the voltage supply condition.
- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.


5 Drain Piping

- 1) Connect the drain hose, as described right.
- 2) Remove the air filters and pour some water into the drain pan to check the water flows smoothly.
- 3) When drain hose requires extension, obtain an extension hose commercially available.
Be sure to thermally insulate the indoor section of the extension hose.
- 4) When connecting a rigid polyvinyl chloride pipe (nominal diameter 13mm) directly to the drain hose attached to the indoor unit as with embedded piping work, use any commercially available drain socket (nominal diameter 13mm) as a joint.

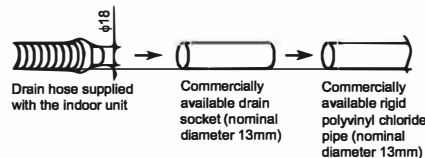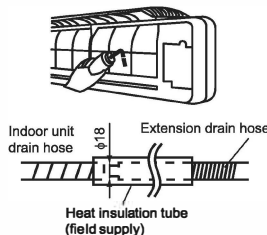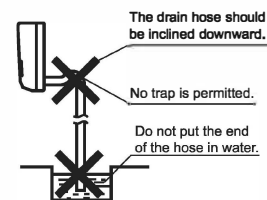


Binding Of Insulation Pipe



1. The slit direction should be upward.
2. It should be sealed with vinyl tape without any gap.
3. Do not over tighten with vinyl tape.

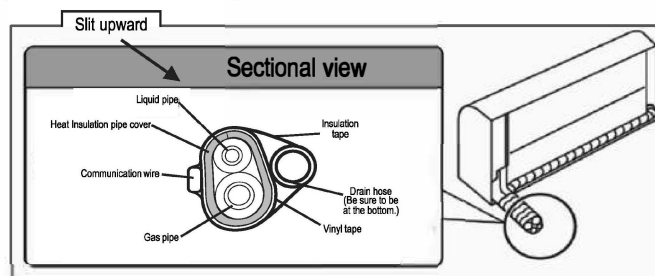

Wrap vinyl tape with the slit of the heat insulation pipe cover facing up so that there are no gap . If there is a gap or if it is tightened too much, it may cause condensation or water dripping.



This illustration shows the case of the left rear piping.

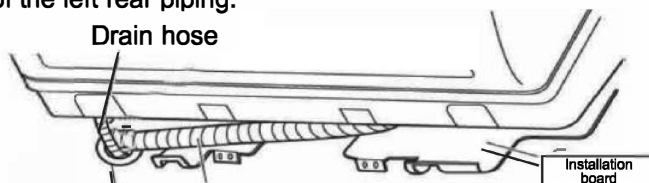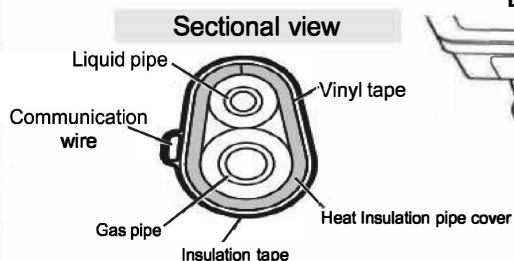


- Overwrap more than half of heat insulation tape.
- Wrap the heat insulation tape around all the pipes from the right side to the left side of the pipe that pass through the back side of indoor unit.

Seal with putty or caulking material.

WARNING

Fill the gap from both the indoor side and the outdoor side to prevent dew condensation, misdetection of indoor temperature, and invasion of small animals.

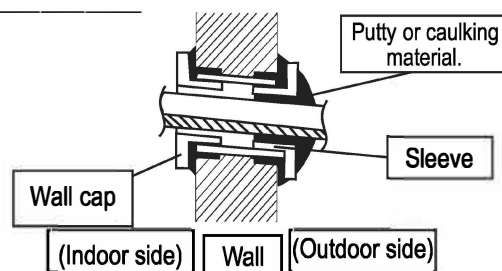

Outdoor Unit

1 Installing The Outdoor Unit

- When installing the outdoor unit, refer to "Precautions for Selecting a Location" and the "Outdoor Unit Installation Diagram".

2 Flaring The Pipe End


⚠ WARNING

Incomplete flaring may result refrigerant gas leakage.

- Cut the pipe end with a pipe cutter.
- Remove burrs with the cut surface facing downward, so that the fillings do not enter the pipe.
- Put the flare nut on the pipe.
- Flare the pipe.
- Check that the flaring has been done correctly.



Flaring			
Set exactly at the position shown below.			
	Flare tool for R410A/R32	Conventional flare tool	
	Clutch-type	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)
A	0-0.5mm	1.0-1.5mm	1.5-2.0mm

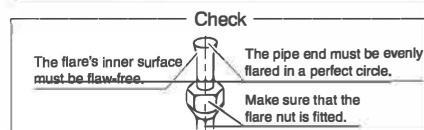

3 Refrigerant Piping

- To prevent gas leakage, apply refrigeration oil to the inner surface of the flare.
- Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.
 - Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and escaping gas.

	Piping size	Flare nut tightening torque	Valve cap tightening torque	Service port cap tightening torque
Gas side	O. D. 9.5mm	32.7-39.9N • m (333-407 kgf • cm)	21.6-27.4N • m (220-280 kgf • cm)	10.8-14.7N • m (110-150 kgf • cm)
	O. D. 12.7mm	49.5-60.3N • m (505-615 kgf • cm)	48.1-59.7N • m (490-610 kgf • cm)	
	O. D. 15.9mm	61.8-75.4N • m (630-770 kgf • cm)		
Liquid side	O. D. 6.4mm	14.2-17.2N • m (144-175 kgf • cm)	21.6-27.4N • m (220-280 kgf • cm)	

Table No. 7

Cautions on Pipe Handling

- Protect the open end of the pipe against dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

Selection of Copper and Heat Insulation materials


When using commercial copper pipes and fittings, observe the following:

- Insulation material : Polyethylene foam or equivalent.
Heat transfer rate - Co-efficient : 0.041 to 0.052W/m²K
(0.035 to 0.045kcal/m²h°C)


- Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 9.5mm	30 mm or more	Thickness, 0.6mm (C1220T-O)	I.D 12-15mm	Thickness min.6.5mm
	O.D. 12.7mm	40 mm or more		I.D 14-16mm	
	O.D. 15.9mm	50 mm or more	Thickness 0.8mm (C1220T-O)	I.D 16-20mm	
Liquid side	O.D. 6.4mm	30 mm or more	Thickness 0.6mm (C1220T-O)	I.D 8-10mm	

Table No. 8

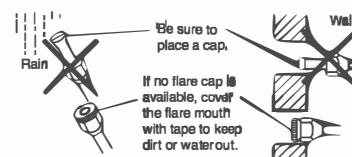

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.

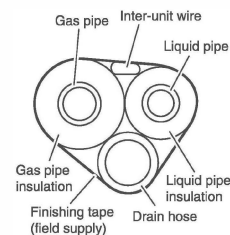


Outdoor Unit

4 Purging Air And Checking Gas Leakage

⚠ WARNING

- Do not mix any substance other than the specified refrigerant (R32) into the refrigeration cycle.
- When refrigerant gas leaks occur, ventilate the room as soon and as much as possible.
- To prevent air pollution, a vacuum pump should be used for air purging wherever possible.

- If using additional refrigerant, perform air purging from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench at the specified tightening torque.

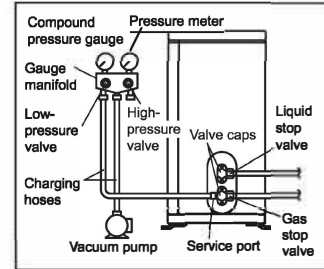

- 1) Connect projection side (on which pin is pressed) of charging hose (which comes from gauge manifold) to gas stop valve's service port.
- 2) Fully open gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi). (High-pressure valve subsequently requires no operation.)
- 3) Do vacuum pumping and make sure that the compound pressure gauge reads -0.1MPa (-76cmHg) *1.
- 4) Close gauge manifold's low-pressure valve (Lo) and stop vacuum pump. (Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.) *2.
- 5) Remove valve cap from liquid stop valve and gas stop valve.
- 6) Turn the liquid stop valve's rod 90 degrees counterclockwise with a hexagonal wrench to open valve. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off.
- 7) Disconnect charging hose from gas stop valve's service port, then fully open liquid and gas stop valves. (Do not attempt to turn valve rod beyond its stop.)
- 8) Tighten valve caps and service port caps for the liquid and gas stop valves with a torque wrench at the specified torques.


*1. Pipe length vs. vacuum pump run time

Pipe length	Up to 15m	More than 15m
Run time	Not less than 10 min.	Not less than 15 min.

*2. If the compound pressure gauge pointer swings back, refrigerant may have water content or a loose pipe joint may exist. Check all pipe joints and retighten nuts as needed, then repeat steps 2 to 4.

5 Wiring

- For inter-unit wires connections, see **INDOOR UNIT**, **4 WIRING**.

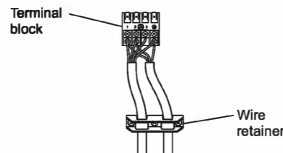


- Regarding the interconnecting and power cables.

⚠ WARNING

Never use short cables for connecting end of conductor to each other.

- When connecting the connection wires to the terminal block using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.

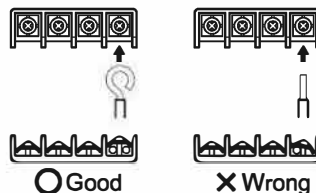

Stripping wire at terminal block

- Precaution to be taken for power supply wiring.
- When using stranded wires, make sure to use a round crimp-style terminal for connection to the power supply terminal block. Place the round crimp-style terminals on the wires up to the covered part and secure in place.

Strip wire end to this point.



Excessive strip length may cause electrical shock or leakage.



Round crimp-style terminal
Stranded wire

6 Drain Work

- 1) Use the drain socket for drainage.
- 2) When attaching the drain socket to the bottom frame, make sure to connect the drain hose to the drain socket first.
- 3) If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 30mm in height under the outdoor unit's feet.
- 4) In cold areas, do not use a drain hose with outdoor unit. (Drain water may freeze, impairing heating performance.)



Trial Operation And Testing

1. Trial operation and testing

- Check that the inter-unit wire is correctly connected.
- Trial operation should be carried out in COOL operation.
- 1-1 Measure the supply voltage and make sure that it is within the specified range.**
- 1-2 Select the lowest programmable temperature.**
- 1-3 Carry out the trial operation following the instructions in the operation manual to ensure that all functions and parts, such as the movement of the flaps, are working properly.**
- To protect the air conditioner, restart operation is disabled for 3 minutes after the system has been turned off.
- 1-4 After trial operation is complete, set the temperature to a normal level (26°C to 28°C in COOL operation, 20°C to 24°C in HEAT operation).**
- When operating the air conditioner in COOL operation in winter, or HEAT operation in summer, set it to the trial operation mode using the following method.
 - 1) Press "MODE" button and select the cooling or heating mode.
 - 2) Press "ON/OFF" button to turn on the system.
 - 3) Press both of "TEMP" button and "MODE" button at the same time.
 - 4) Press "TEMP" button, select "7", and press "MODE" button for confirmation.
- Trial operation will stop automatically after about 30 minutes. To stop the operation press "ON/OFF" button.
- The air conditioner draws a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
- For products that are having wireless LAN adaptor would draw more power in standby mode as compared to products that are not having wireless LAN adaptor.
- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is turned on again.

2. Items to Check

Test Items	Symptom	Check
Indoor and outdoor units are installed securely.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
Only specified wires are used for all wiring, and all wires are connected correctly.	No operation or burn damage	
Indoor or outdoor unit's air intake or exhaust has clear path of air.	Incomplete cooling function	
Stop valves are opened.	Incomplete cooling function	
Indoor unit properly receives remote controller commands.	No operation	


Pump Down Operation

WARNING

- Make sure that air or any matter other than refrigerant (R32) does not get into the refrigeration cycle.
- When performing a pump down, turn off the compressor before detaching the refrigerant pipes. (If the refrigerant pipes are detached when the compressor is operating and the stop valves are open, air will be drawn in leading to abnormally high pressure in the refrigeration cycle. This may result in rupturing and bodily injury.)

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve cap from the liquid stop valve and gas stop valve.
- 2) Begin forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop forced cooling operation.
- 5) Attach the valve cap once procedures are complete.

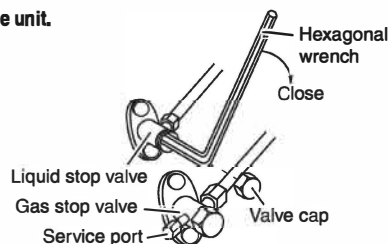

Forced cooling operation

■ Using the indoor unit ON/OFF switch

- Press and hold the indoor unit ON/OFF switch for at least 5 seconds. (The operation will start.)
- Forced cooling operation will stop automatically after about 15 minutes.
 - To stop the operation, press the indoor unit ON/OFF switch.

Disclaimer: Appearance of indoor & outdoor unit may differ between different models.

DAIKIN ROOM AIR CONDITIONER

MOBILE APPLICATION MANUAL

**MODELS:****FTKR35XV16VAA****FTKR50XV16MKA****FTKR60XV16MAA**

INDEX

1. Safety Precautions.....	43-44
2. Process To Install And Open The App	45
3. Process For New User Registration.....	46
4. Process For New User Registration (Using Gmail ID)	47
5. Process For New User Registration (Using Mobile Number)	48
6. Process For New User Registration (Using Facebook ID)	49-50
7. Process For Login.....	51
8. Process To Reset Forgot Password.....	52
9. App Homepage.....	53
10. Process For Editing Profile Details.....	54-55
11. Process For Editing The Building Name And Room Name.....	56
12. Process for Registering unit to a Room of a Building.....	57
13. Process To Add Air Conditioning Unit in the App (Add Unit Process).....	58
14. Process To Add AC Unit in the Mobile App Using Access Point (AP) Mode Method.....	59-60
15. Process To Add AC Unit in the Mobile App Using WPS/Simple Connection Meth.....	61-62
16. Process To Update Firmware Of AC Wi-fi.....	63
17. Home Page - How To Start A Unit.....	64-65
18. Home Page After Multiple Units Are Added.....	66
19. Central Control.....	67
20. My Preference.....	68
21. Process To Configure Unit.....	69
22. Process To Change Home Router Network.....	70-71
23. Home Screen Details.....	72
24. How to use Control Screen.....	73
25. Operation Mode.....	74
26. Swing-UP & Down Swing; Right & Left Swing.....	75
27. How to use Airflow Rate and Power Chill feature.....	76
28. Good Sleep Feature.....	77-78
29. LED Brightness Operation.....	79
30. Econo Operation.....	80
31. Dew Clean Operation.....	81-82
32. Filter Clean Operation.....	83-84
33. Electricity Consumption Feature.....	85-86

INDEX

34. How To Use Schedule Feature.....	87-88
35. How To Use Schedule Feature On Multiple Units.....	89
36. Support & Setting Section.....	90
37. Process To Remove An Added Unit.....	91
38. Notes.....	92
39. Daikin AC Manager 2.0 Smart Speaker- Amazon Alexa.....	93
40. Alexa App Overview.....	94-96
41. Alexa Device Setup (How to Connect Alexa Speaker with Alexa Mobile App)	97-104
42. Alexa AC connectivity (How to Connect Alexa Speaker with AC Unit)	105-113
43. How to Provide Command to Alexa- Smart Speaker	114-115
44. Daikin AC Manager 2.0 Smart Speaker- Google Home.....	116
45. Google Home App.....	117-120
46. Google Home App+ Google Home Smart Speaker	121-124
47. Google Home Smart Speaker + Daikin Smart App.....	125-132
48. How to Provide Command to Google Home- Smart Speaker.....	133-134
49. E-Waste Guidelines.....	135
50. Wiring Diagram	136-140

Safety Precautions

Please be sure to follow the instructions mentioned below

This instruction manual described various ways to ensure safe use of Product.

Please read the text after carefully understanding the contents (display and graphic symbols) and follow the descriptions.

The contents caused by ignoring the "indication" and mishandling are classified as follows.

• **WARNING**

It indicates "content that may result in death or serious injury."

• **CAUTION**

It indicates "content that may cause injury or damage to property".

- **The types of contents to be protected are explained by dividing them into "graphic symbols".**



It represents "what not to do".



It represents "what must be done".

• **WARNING**



Do not disassemble, modify, or repair it.

(Causes of fire, electric shock, or injury)



Do not handle the connection adapter with wet hands.

(Causes of electric shock or fire)



Do not wet the main unit or use it in the bathroom.

(Causes of electric shock or fire)

- Do not use the connection adapter in the following places, or do not turn on the wireless LAN connection function of the device
 - Places that may be used by people with cardiac pacemakers (may affect the operation of pacemakers, etc., and cause accidents)
 - Near people with cardiac pacemakers or defibrillators (if they are too close, radio waves may affect the operation of the pacemaker, etc.)
 - Near automatic control equipment such as automatic doors, fire alarms (causes of accidents due to equipment malfunctions)



If there is an abnormal odour, abnormal noise, overheating, or smoke, immediately unplug the equipment or turn off the breaker.

(Cause of fire or malfunction)

Please have it inspected by the dealer where you purchased it.

- **If the connection adapter is dropped or the case is damaged, unplug the device or turn off the breaker.**

(Causes of fire or electric shock)

Please have it inspected by the dealer where you purchased it.

- **Make sure that the product is not installed in a place where flammable gas may leak.**
(In the unlikely event that gas leaks, it may cause a fire.)

• **CAUTION**



Do not attach the connection adapter within reach of young children.

(Cause of injury)

- **When installing and cleaning the connection adapter, do not get on an unstable base.**
(Causes of injuries such as falls)



If you are using the following people, use it when there is someone nearby who can manage it. Infants, children, the elderly, sick people, people with physical disabilities

(causes of physical illness)

- **Do not use the connection adapter near a microwave oven.**
(Causes affecting wireless LAN communication)
- **Do not use or store in the following locations:**
 - In direct sunlight
 - Places with poor ventilation.
 - Places where rain, fog, etc. can enter directly
 - Places with extreme high and low temperatures
 - Dusty places

[Precautions when using wireless LAN]

• **About security settings**

- Since wireless LANs use radio waves to transmit and receive data, there is a risk of eavesdropping and unauthorized access. When using wireless LAN, please fully understand the dangers and manage the wireless LAN connection adapter of the device, the SSID / KEY of the wireless router, and the "member information" set in the app so that others do not know it.
- In the unlikely event that the product is operated from outside the home due to unauthorized access, turn off the wireless LAN connection function using remote control.

Safety Precautions

- Before using the wireless router, set the security settings of the wireless router to "WPA2" encryption method.
- Please note that we are not responsible for any damage caused by the use of a wireless LAN router.
- About wireless LAN connection adapters and radio wave law
 - There is no need to apply for a license because this wireless LAN connection adapter has a built-in wireless device that has obtained required certification.
- This product cannot be directly connected to the communication lines of telecommunications carriers (e.g., Internet providers). When connecting to the Internet, be sure to connect via a router.

[Precautions for radio waves]

- Use in the vicinity of other radios or microwave ovens may affect wireless communications.
 - Remote control may not be available. Please check the safety of the product thoroughly before use.
- Make sure that your device has a signal from the wireless router.
 - Remote control may not be available. If the signal is weak in the vicinity of your device, please use it in a good radio wave environment, such as installing an access point in the vicinity.

[Safety precautions when using the app]

- Please be sure to follow the instructions in this instruction manual and on the product in various ways to ensure safe use. Please read the text after carefully understanding the contents (display and graphic symbols) and follow the descriptions.
- The contents caused by ignoring the "indication" and mishandling are classified as follows.

➢ WARNING

It indicates "content that may result in death or serious injury."

- The types of contents to be protected are explained by dividing them into "graphic symbols".



It represents "what must be done".

• WARNING



When operating the device from outside the office, it is not possible to check the condition of the device, its surroundings and the people in the room. So make sure that it is safe in advance. In some cases, it may result in death, serious injury, or property damage.

- Check the following contents in advance (while at home)

- The power plug is securely plugged into the root. There is no dust accumulation on the power plug. (Causes of heat generation, ignition, or fire due to poor contact or insulation)
- The status of settings set by others, such as timer scheduling. (Causes of illness due to unexpected driving or stopping.) Causes of adverse effects on flora and fauna)
- There are no abnormalities in the equipment. Even if there is a change in the wind, it will not adversely affect people or rooms. (e.g., there are no items that are easy to fly, etc.) (Wind causes things to fall, causing fires, injuries, and damage to household goods)
- Even if remote control is not possible, it will not adversely affect people or property.
 - If you need to operate it, use the remote control in your home.
 - If you are at home with an infant, a person with a disability, or an elderly person who cannot operate the remote control by yourself, or if there is a risk of incorrect operation, please operate it with the remote control in your home.

- Check the following before and during operation from outdoors.

- When you know people are around, let them know that you will be driving or stopping from outside. (If you are on a platform, you may be startled by sudden driving or stopping, causing you to fall or fall.) In addition, sudden changes in indoor and outdoor temperature and indoor environment can cause you to get sick) The temperature control and shutdown of the air conditioner can also be operated with a remote control in the home.

- Frequently check the settings and driving status.

Depending on the communication status, the contents of the operation on the smartphone may not be reflected on the device.

When you know that there will be people, let them know that you will be doing an operation.

If an error occurs with the equipment, stop operation immediately and consult the dealer where you purchased the product.

Double-check that it is stopped on the operation screen.

[Notice]

- The contents of the operation with the smartphone are not reflected on the display of the wireless remote control of the air conditioner.
- When operating the device from a smartphone, there is no reception sound from the device, but it is not a malfunction.
Depending on the model of the air conditioner, the outside air temperature is not displayed when the air conditioner is stopped. (-°C) is displayed.
- To prevent accidental operation, we recommend that you enable the auto-lock feature on your phone.
- Depending on your smartphone, the screen display may vary.
- iPhone is a trademark and registered trademark of Apple Inc.
- Android is a trademark or registered trademark of Google LLC.
- Other company names and product names are trademarks or registered trademarks of their respective companies.

PROCESS TO INSTALL AND OPEN THE APP

- Download And Install the App Daikin AC Manager 2.0  from Google Play Store (Android OS) or iOS App Store.
- After installation, Open the App. User need to read and accept the License agreement.

License agreement

License Agreement After installation of the application
Smart App Terms of Use

These terms and conditions apply to smart applications (including future updates) that can be used by the smart remote control service (hereinafter referred to as the "Service") provided by Daikin Airconditioning India pvt. Ltd. (hereinafter referred to as the "Company"), (hereinafter referred to as "Application"), which defines the conditions for customers to use it. Please agree to these Terms before downloading, installing or using this App. If you do not agree to these Terms, you may not use the App, so please stop downloading, installing or using the App immediately.

By downloading, installing or using the App, you are deemed to have unconditionally agreed to these Terms.

Parental or guardian consent is required for minors to download, install or use the App.

Article I (Use of this application)

1. The Customer shall install the App on a compatible terminal equipped with a compatible OS specified by the Company (hereinafter referred to as the "Compatible Terminal") and use the Service within the scope of the Customer's personal use of the Service in accordance with the Terms can.

DECLINE
ACCEPT

- License Agreement after installation of the application.
- User can read this License agreement by scrolling down.

License agreement

1. Through the provision of the smart remote control service (hereinafter referred to as "this service"), the Company will acquire the customer's personal information specified in paragraph 2 by the method specified in paragraph 3. Alternatively, with a third party such as a partner company or university, handling for the following purposes (including providing your personal information to the third party to the extent necessary to achieve the purpose) We assume that we can.

(1) Provision and improvement of the Service

(2) Planning, research, development, provision, and improvement of our products and services other than the Service

(3) Customer support

2. Personal information of customers acquired by the Company (for customers who have used this application while logged into their CLUB DAIKIN account in the past, including the personal information of customers acquired by the Company at the time of such use) is as follows. is.

(1) Name, date of birth, telephone number, email address, Location.


(2) Password

(3) Sensor information of air conditioning products (hereinafter referred to as "target products")

DECLINE
ACCEPT


- User need to "Accept" the License agreement terms of use to proceed further.

PROCESS FOR NEW USER REGISTRATION

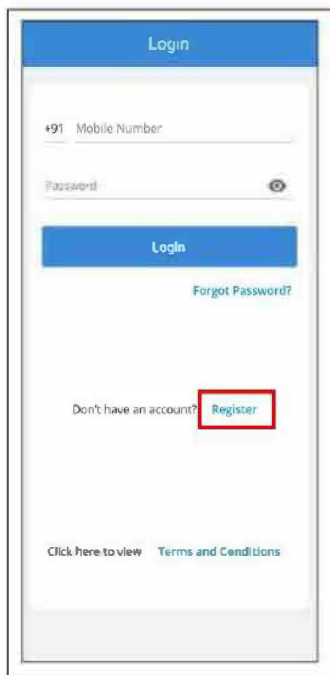


Log in or Register

- New users need to "Register" before login.
- If user had already registered then user can login using their Mobile number and Password.

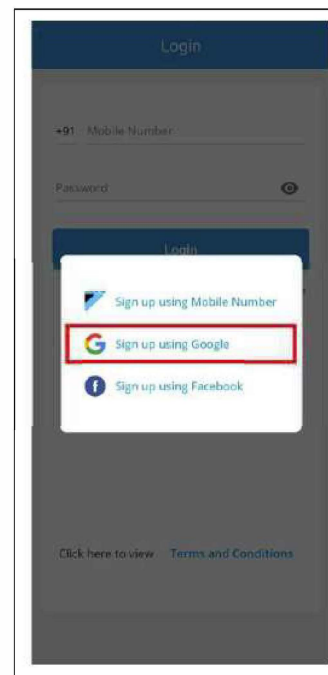


Sign Up

- User can register or sign up using Mobile Number, Google or Facebook.
- If user wants to sign-up using Google, then user need to select the same.

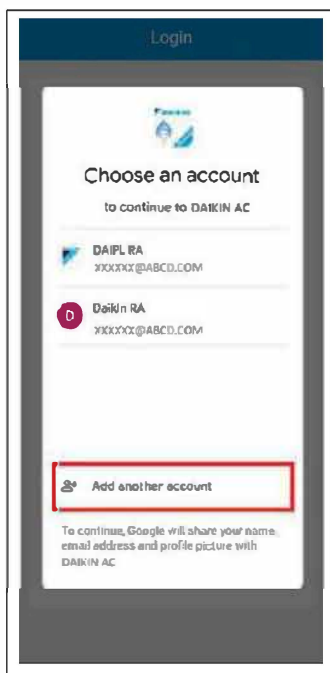

- Choose an existing Gmail account then user will be redirected to Daikin App Registration Page as shown in next page.
- Choose "Add another account" and follow as mentioned.

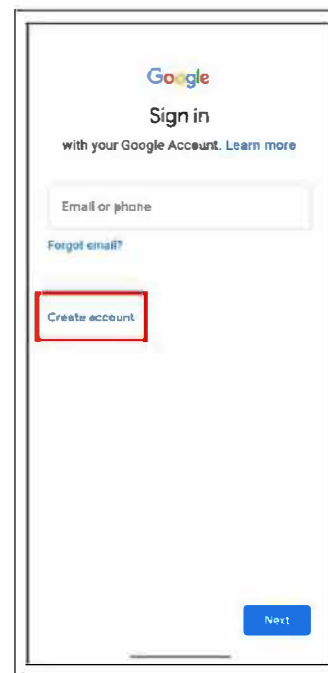

Sign in or Create account on Google

- User can sign in using their Google Account or sign up by tapping on "Create account"

PROCESS FOR NEW USER REGISTRATION (USING GMAIL ID)

- Enter Email or phone number and tap on “Next”.

- Enter password and tap on “Next”.

- User can add phone number to their Google account if already not added.
- Scroll down and read to the bottom.

- Select “Yes, I'm in” if adding the number.
- Select “Skip” if not adding the number.

- Tap on “I agree” to complete the registration using Google.


- User will be redirected back to the App.
- Email Id, First Name and Last Name will be auto-filled by Gmail account. User need to enter Mobile Number and set a password to complete the registration on Daikin App.

PROCESS FOR NEW USER REGISTRATION (USING MOBILE NUMBER)



Sign up using Mobile Number

- Tap on **"Sign up using Mobile Number"**.

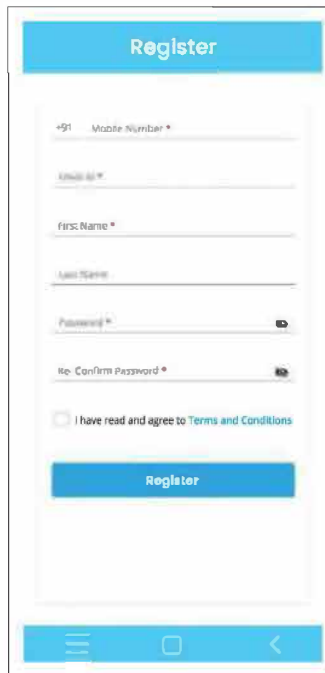


- Now, enter all the required details to complete the registration on Daikin app




- User can read **"Terms and Conditions"** by tapping on it.
- Tick the "I have read and agree to **"Terms and Conditions"** and Register

PROCESS FOR NEW USER REGISTRATION (USING FACEBOOK ID)

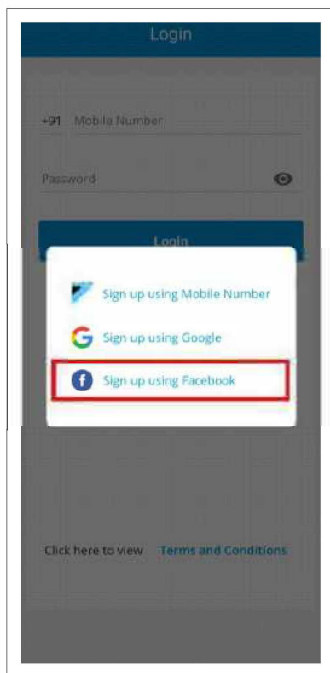

Sign up using Facebook

- Tap on **"Sign up using Facebook"**.

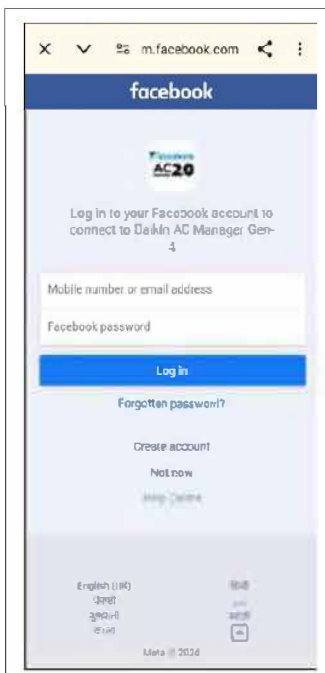


- User will be redirected to Facebook Login page.
- Enter registered **Mobile number or email address** and **password** to **Login**.



- After entering required login details, tap on **"Log In"**.



- User will be asked to give access to their name, profile picture and email address.
- Tap on **Continue** to proceed.

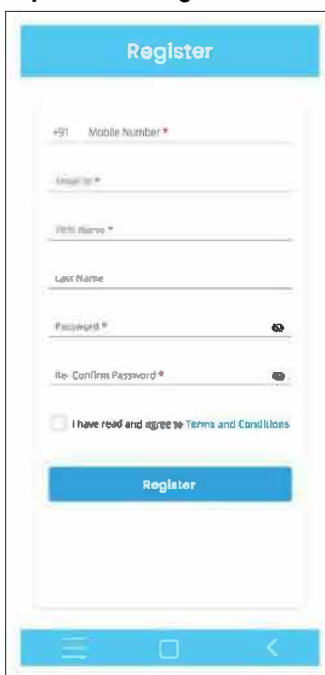


- User will be redirected to Daikin App to complete the registration.
- Email ID, First Name and Last Name will be auto-filled from Facebook account. User need to enter Mobile Number and set a password to complete the registration on Daikin App.



- User can read **"Terms and Conditions"** by tapping on it.
- Tick the **"I have read and agree to Terms and Conditions"** and **Register**


PROCESS FOR NEW USER REGISTRATION (USING FACEBOOK ID)

- After entering all the required details, OTP would be send to registered phone number and email ID.
- Complete the verification by entering OTP to finish the registration.

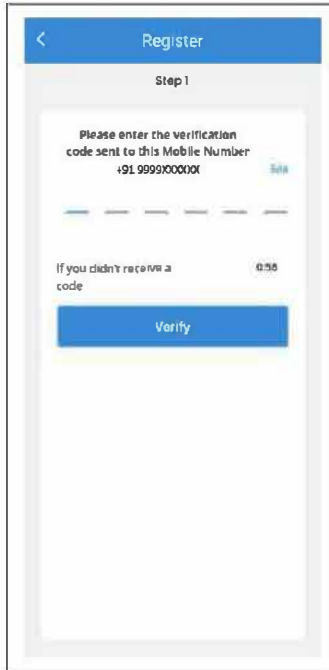The image shows a mobile application screen titled "Register" with a back arrow on the left. Below the title is "Step 1". The main text says "Please enter the verification code sent to this Mobile Number" followed by a masked number "+91 9999XXXXXX" and a "Send" button. Below this is a row of five empty boxes for entering the code. Further down, it says "If you didn't receive a code" with a "Resend" button. At the bottom is a large blue "Verify" button.

Mobile Number Verification

- App will automatically detect the OTP or user can enter manually.

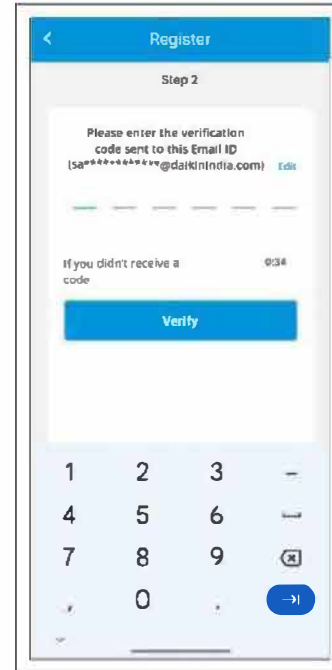The image shows a mobile application screen titled "Register" with a back arrow on the left. Below the title is "Step 2". The main text says "Please enter the verification code sent to this Email ID" followed by a masked email address "(s*****@daitk.in)" and an "Edit" button. Below this is a row of five empty boxes for entering the code. Further down, it says "If you didn't receive a code" with a "Resend" button. At the bottom is a large blue "Verify" button. Below the "Verify" button is a numeric keypad with digits 1-9, 0, and a backspace button.

Email ID Verification

- User need to enter **OTP** manually received on registered Email ID.
- If OTP is not received within 60 seconds then user can again request for OTP.

PROCESS FOR LOGIN

- After completing the registration and verification process, user can Login by entering registered mobile number and password.
- A password must contain at least 8 characters includes 1 lower & upper case, 1 digit and 1 special character.

License Agreement when the login done

- User can read this License agreement by scrolling down.
- User need to Accept this License agreement to proceed further.

PROCESS TO RESET FORGOT PASSWORD




The screenshot shows the 'Login' screen of an application. At the top, there is a blue header with the word 'Login'. Below it, there are two input fields: one for a mobile number (prefixed with '+91') and one for a password. A blue 'Login' button is positioned below the password field. To the right of the 'Login' button, the text 'Forgot Password?' is highlighted with a red rectangular box. At the bottom of the screen, there is a link that says 'Don't have an account? Register' and another link that says 'Click here to view Terms and Conditions'.

- In case, user forgets the password.
- Tap on "Forgot Password?" on Log In page as shown.



The screenshot shows the 'Forgot Password' screen. At the top, there is a blue header with the text 'Forgot Password'. Below it, there is a message that says 'Please enter your registered Email ID/Mobile Number to send the verification code'. Underneath this message is an input field labeled 'Email ID / Mobile Number'. A blue button labeled 'Send Code' is positioned below the input field. At the bottom of the screen, there is a blue navigation bar with three icons: a menu icon, a home icon, and a back icon.

- Now, Enter the registered Email ID/ Mobile Number to receive the OTP.

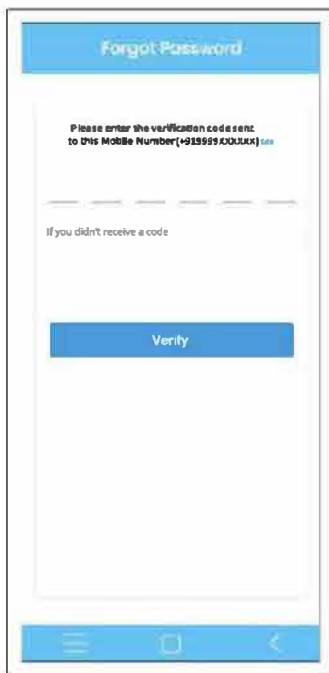

The screenshot shows the 'Forgot Password' screen. At the top, there is a blue header with the text 'Forgot Password'. Below it, there is a message that says 'Please enter the verification code sent to this Mobile Number(+919999999999)'. Underneath this message is an input field for the verification code. A blue button labeled 'Verify' is positioned below the input field. At the bottom of the screen, there is a blue navigation bar with three icons: a menu icon, a home icon, and a back icon.


- App will automatically detect the OTP or user can enter manually.




The screenshot shows the 'New Password' screen. At the top, there is a blue header with the text 'New Password'. Below it, there is a message that says 'New Password'. Underneath this message are two input fields: one for the 'New Password' and one for the 'Confirm New Password'. A blue button labeled 'Submit' is positioned below the input fields. At the bottom of the screen, there is a blue navigation bar with three icons: a menu icon, a home icon, and a back icon.

- Set the **New Password**.


APP HOME PAGE

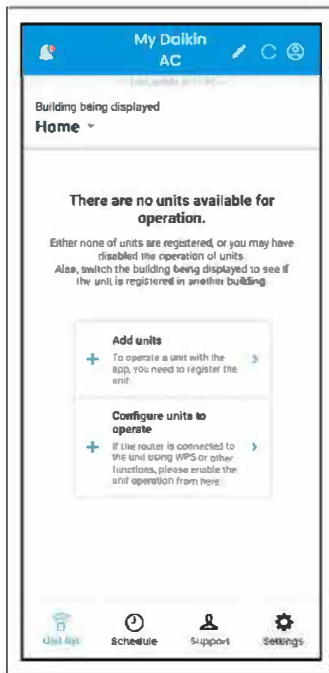

- This is the App Home Screen after login.

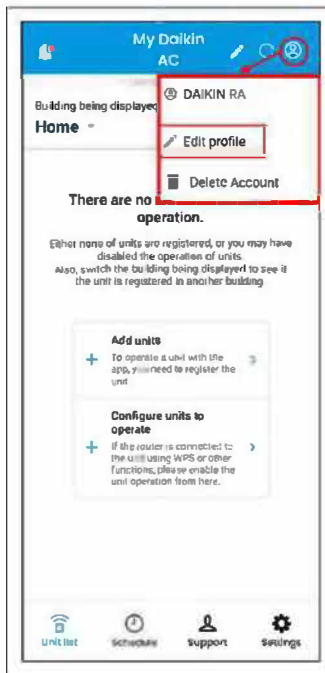


- User can view their Profile by tapping on top right corner of the screen.
- Username and "Edit profile option" are available.

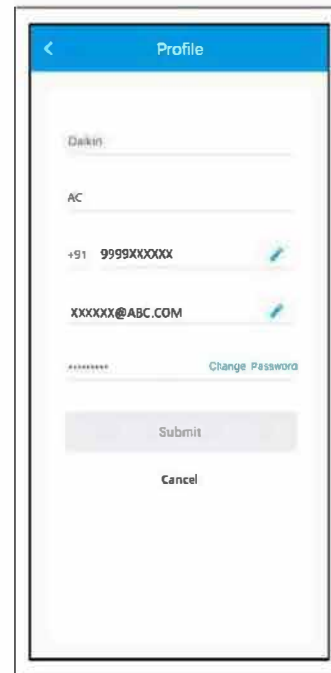


- To view Profile, tap "Edit Profile".
- Username, registered mobile number and email are shown here.
- User can also change password here.


To Delete Account, follow the steps as mentioned below:-

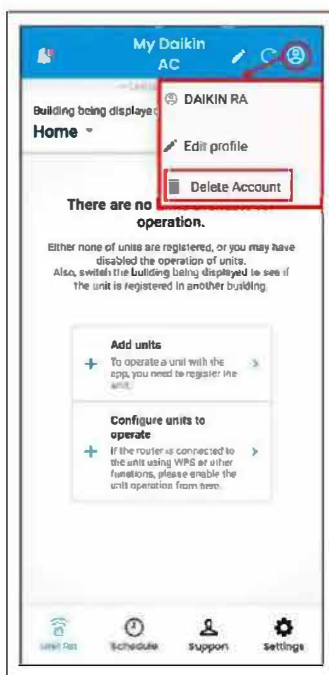

- On this screen, tap on "Delete Account".

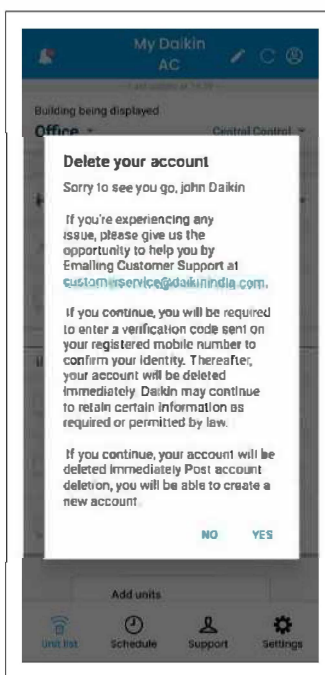


- Tap "YES" to give confirmation to delete the account.

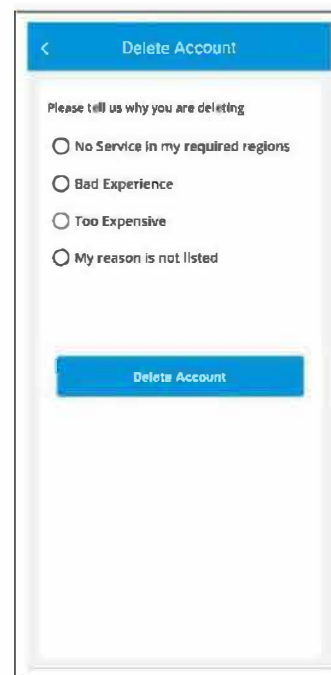


- Select any mentioned point and Tap on "Delete Account".

PROCESS FOR EDITING PROFILE DETAILS

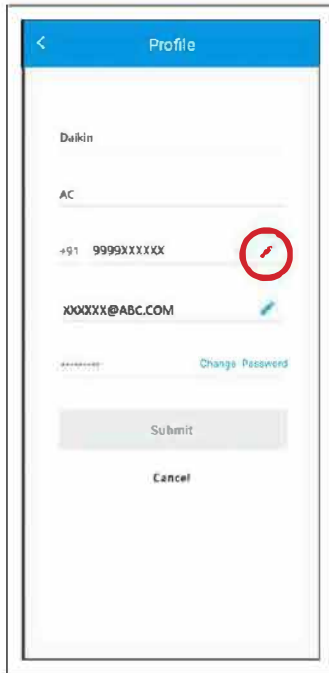


Change Mobile Number


- User can change their registered mobile number by using edit icon as shown.

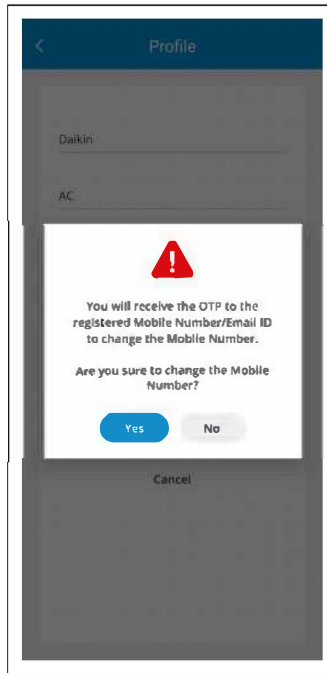

- OTP will be sent to the registered Mobile Number and Email.
- User need to select "Yes" to proceed.

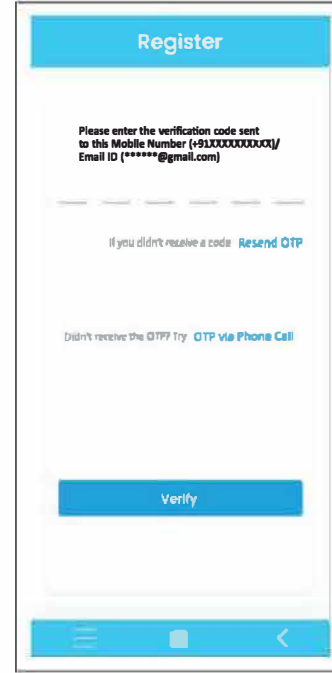

- Enter the received OTP on this screen and tap on "Verify".

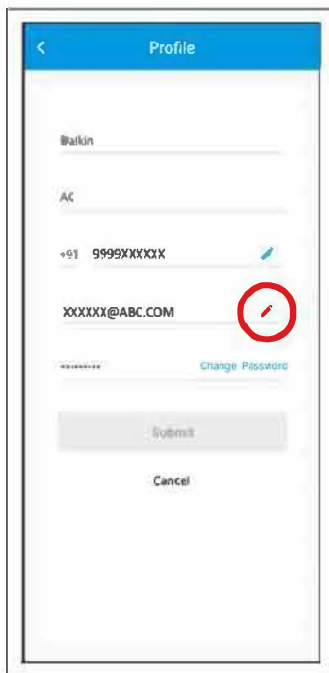


Change Email ID.


- User can change their registered Email ID by using edit icon as shown.

Note:

- The first name & last name can also be edited from the profile page.

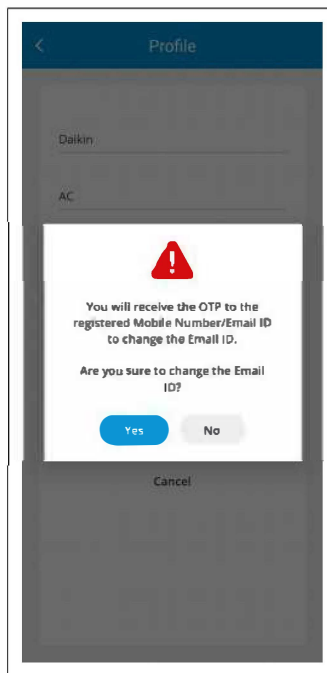


- OTP will be sent to the registered Mobile Number and Email.
- User need to select "Yes" to proceed.

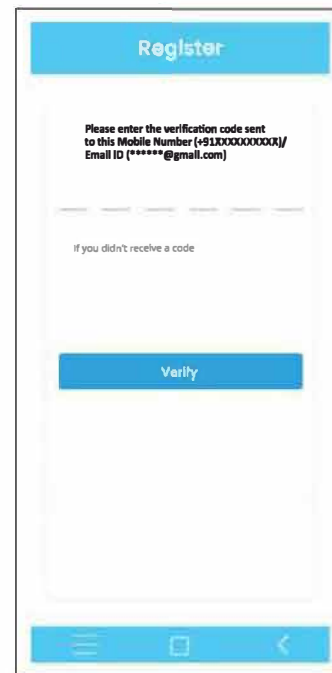

- Enter the received OTP on this screen and tap on "Verify".


PROCESS FOR EDITING PROFILE DETAILS

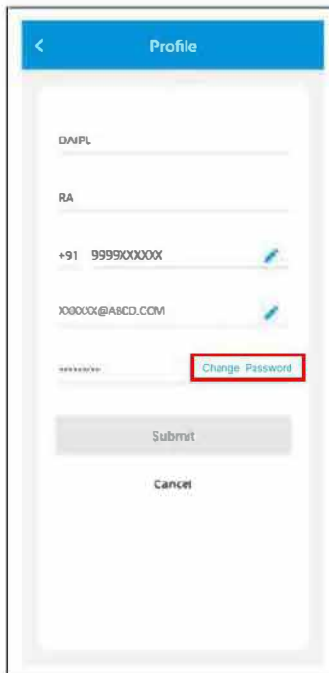

The screenshot shows the 'Profile' page with a blue header. Below the header, there are input fields for 'DAIPL', 'RA', a phone number '+91 9999XXXXXX', and an email address 'XXXXXX@ASCD.COM'. A 'Change Password' button is highlighted with a red box. Below the button are 'Submit' and 'Cancel' buttons.


Change Password

- To change your login password, Tap on **"Change Password"** on profile page as shown.

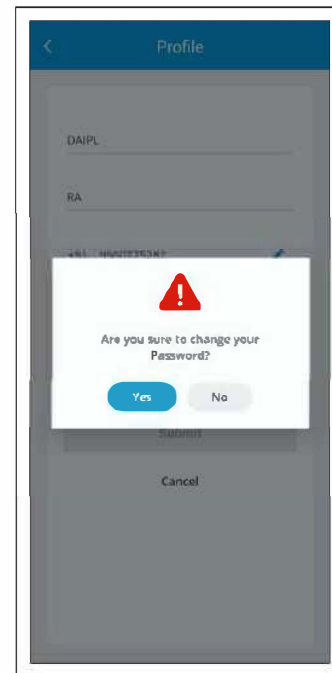

The screenshot shows the 'Profile' page with a blue header. A white dialog box with a red exclamation mark icon is displayed in the center. The dialog box contains the text 'Are you sure to change your Password?' and two buttons: 'Yes' and 'No'.

- Tap on **"Yes"** to confirm.

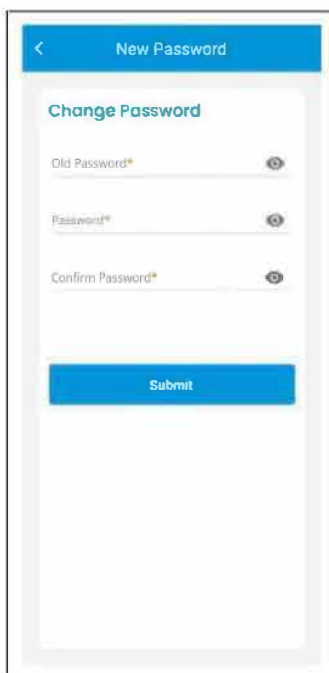

The screenshot shows the 'New Password' page with a blue header. Below the header, there is a 'Change Password' section with three input fields: 'Old Password*', 'Password*', and 'Confirm Password*'. Each field has an eye icon to toggle visibility. A blue 'Submit' button is at the bottom.


- Enter your old password and new password on this screen. Then tap on 'Submit' to proceed.



The screenshot shows the 'New Password' page with a blue header. Below the header, there is a 'Change Password' section with three input fields: 'Old Password', 'Password', and 'Confirm Password'. Each field has an eye icon to toggle visibility. A validation error message is displayed below the 'Password' field: 'Old and New Password should not be the same'. A blue 'Submit' button is at the bottom.

- Old and New Password should not be the same.

PROCESS FOR EDITING THE BUILDING NAME and ROOM NAME

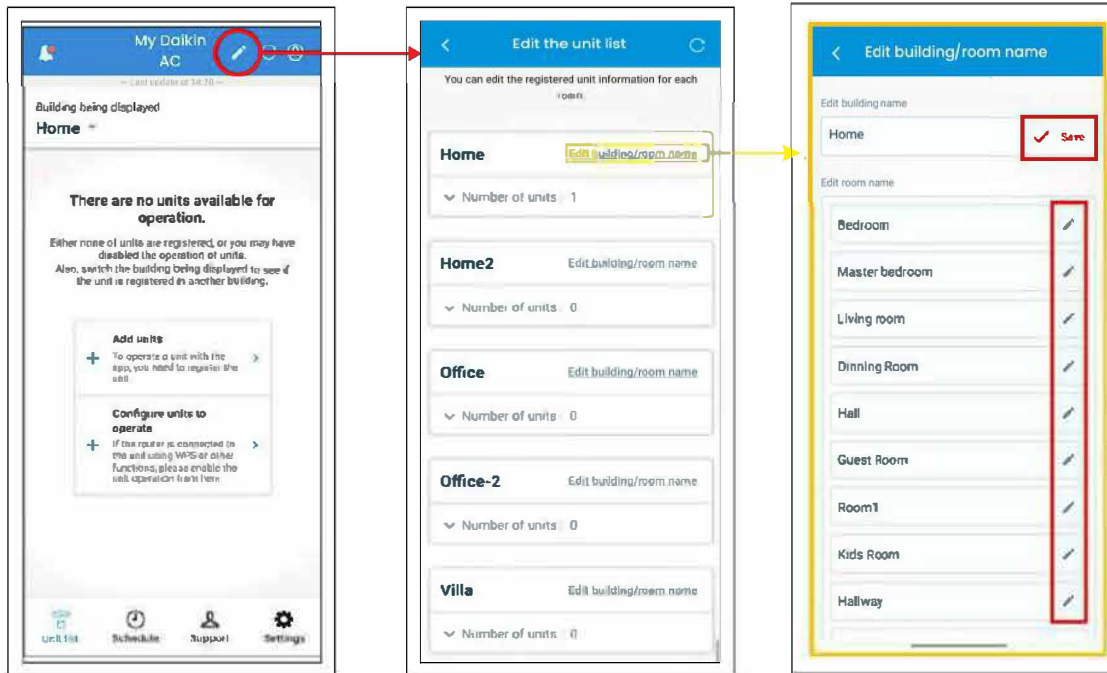

Initial Home screen

- Tap on edit icon on home screen as shown above to view and edit the unit list.

- On this screen, user can view registered number of units for each room.
- User can also edit building/room name here as shown.

- User can now edit Building Name and Room Name.

Note:


- Type the building or room name directly instead of copying and pasting it from another file, such as text. If you copy and paste a large amount of text into the input box, you may not be able to paste it correctly.

PROCESS FOR REGISTERING UNIT TO A ROOM OF A BUILDING




Initial Home screen

- Tap on edit icon on home screen as shown above to view and edit the unit list.

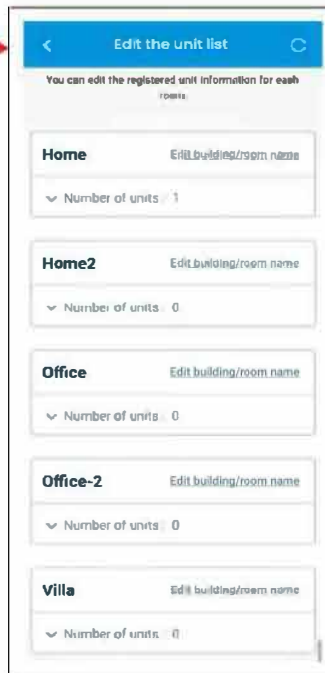

- On this screen, scroll down to view Unit with unconfigured room.

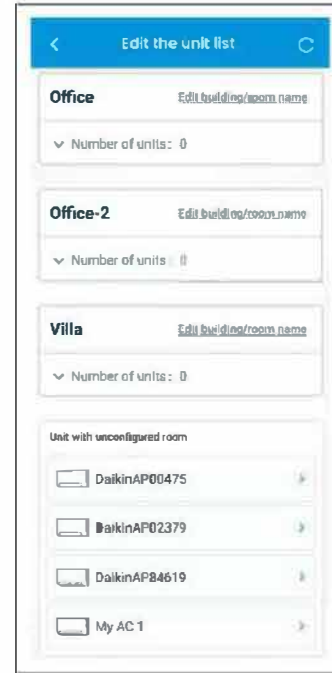


- Select the unit you want to register in the "Unit with unconfigured room" section



- Tap on "Not Set" as shown and select the Building and Room to which you want to add the unit. Then Tap on Set.
- User can also set Unit name.


Note:

- Up to 10 devices can be registered in one room.

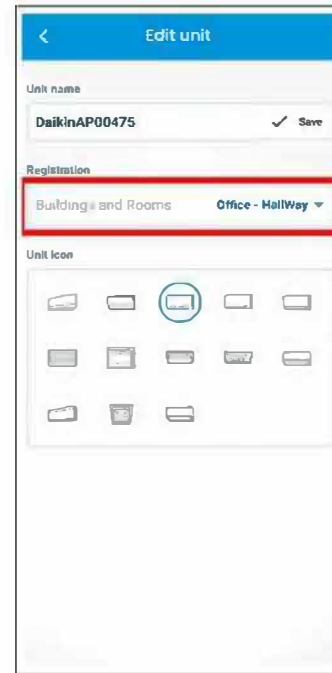

- Now, you can see the selected Building and Room.

PROCESS TO ADD AIR CONDITIONING UNIT IN THE APP (ADD UNIT PROCESS)

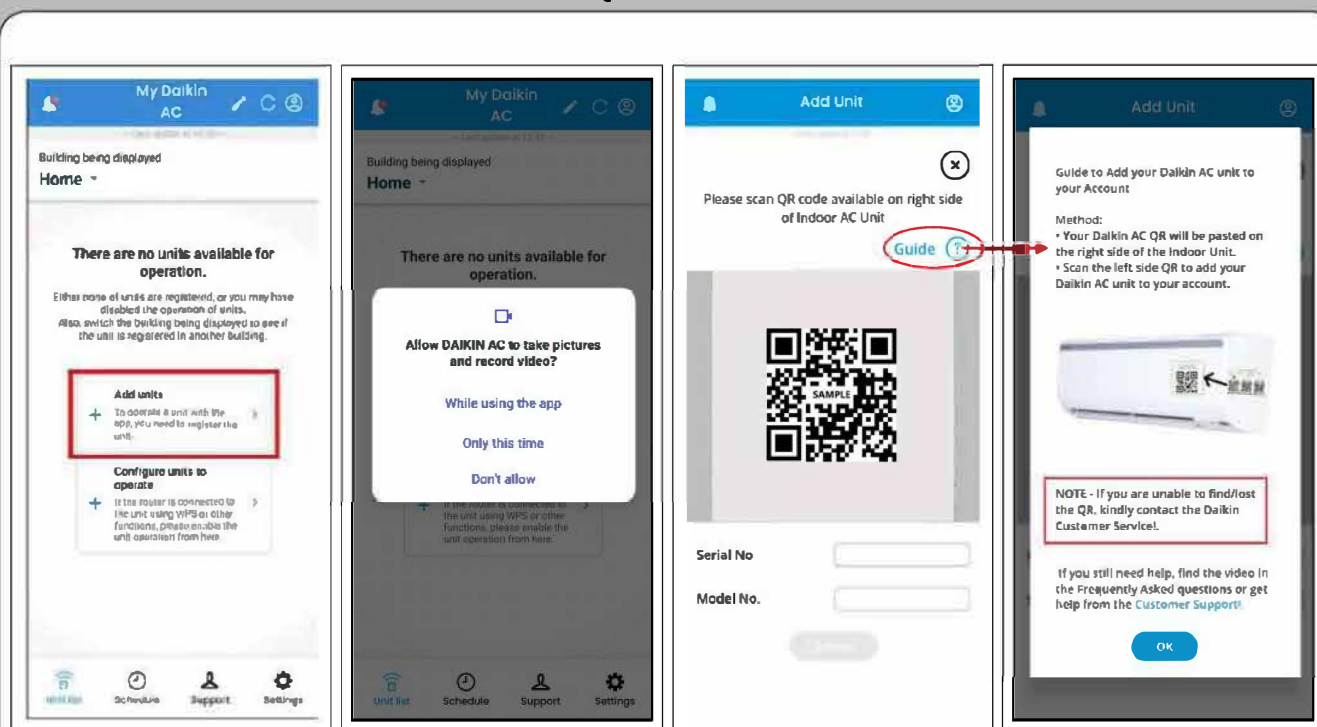

- Tap on 'Add units' icon on homepage to add one or more units in the App.

Note :


- The Daikin air conditioner is here by referred to as unit .

- On this screen, provide permission to take pictures and record video which is required to scan the QR code.

- Scan the QR code available on right side of indoor AC unit or enter Serial Number and Model Number of your Daikin AC unit to add to your Account.
- If you need help, tap on "Guide".

- Guide to Add your Daikin AC unit to your Account. Read carefully.

- Consult with your local authorized service person/dealer

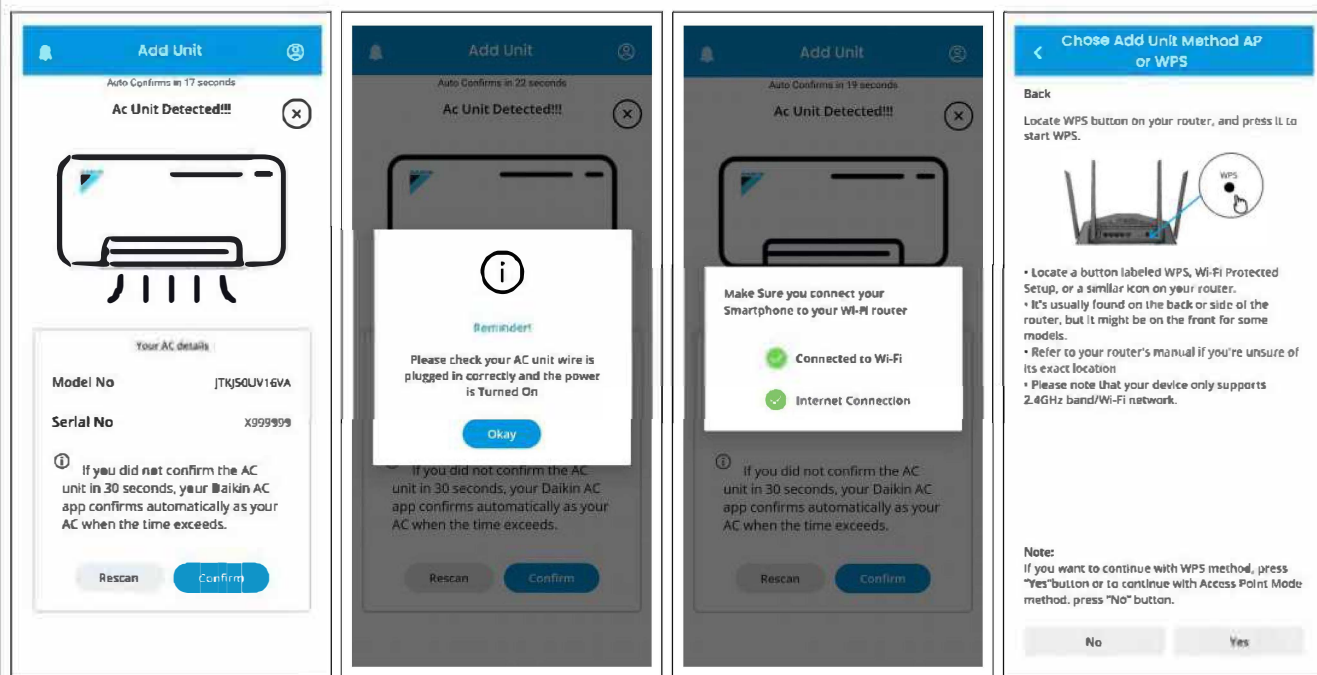

- Press confirm button to add your unit or it will confirm automatically in 30 seconds.


- Read this message and tap on "Okay" to proceed.

- This screen indicates that your Smartphone is connected to Wi-Fi and has internet connection.


- To continue with WPS method, Tap "Yes" or to continue with AP mode method, Tap "No" on screen.

Note:- Users are requested to disable "Wi-Fi Assistant" or "Auto-switch to mobile network" in phone settings during Add a unit process.


PROCESS TO ADD AC UNIT IN THE MOBILE APP USING ACCESS POINT (AP) MODE METHOD

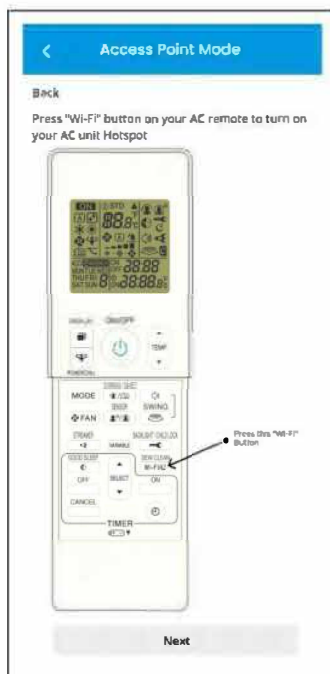

- Turn OFF unit from the remote controller (unit must be ON from main power supply.)
- Press “Wi-Fi” key for about 5 seconds on the remote and select “SP-1. (Refer Wi-Fi function details in unit operation manual).
- Tap 'Next' to proceed to the next step.

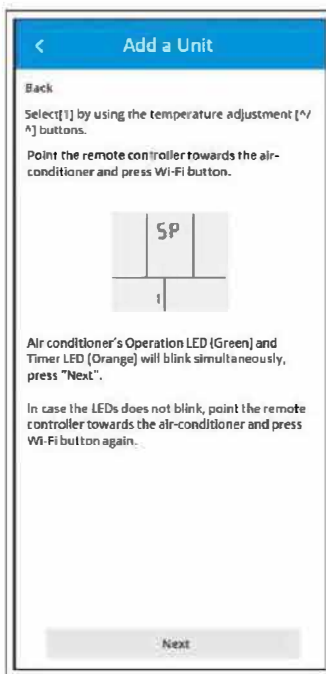


- Read on-screen instructions and tap Next.

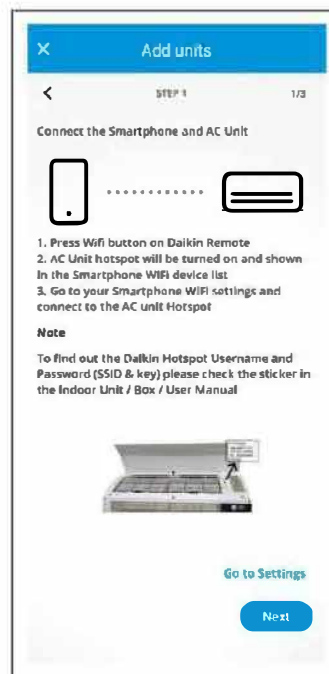

- Connect the Smartphone and AC unit. Read the instructions



- Select your Wi-Fi router on this screen.

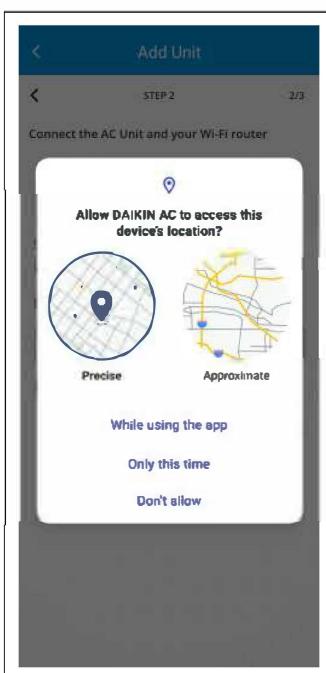


- User need to provide location access to proceed.



- Enter your Wi-Fi router password here and Tap “Connect”.

PROCESS TO ADD AC UNIT IN THE MOBILE APP USING ACCESS POINT (AP) MODE METHOD

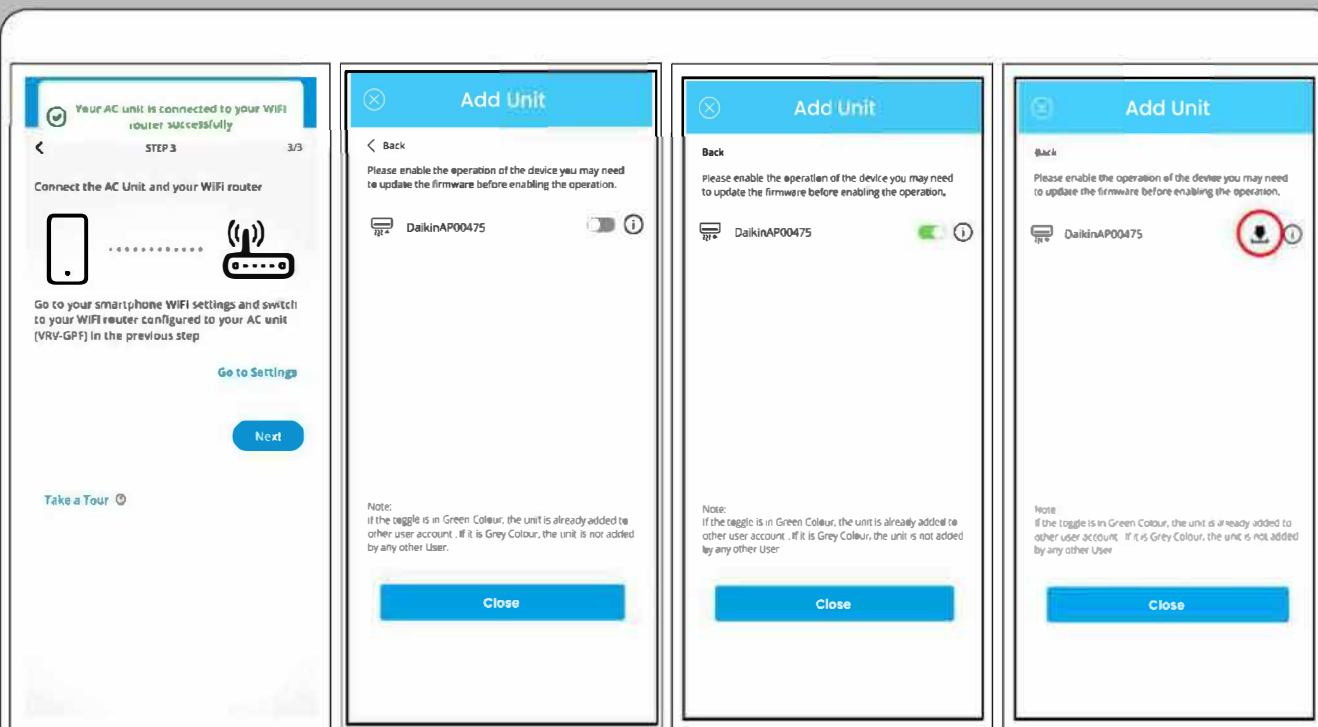

- Now Air Conditioner unit is successfully connected with home router.
- User need to connect smartphone with home router to operate the unit.
- Tap 'Next' to proceed to the next step.
- Please ensure that the toggle button is turned ON to operate the unit.
- If firmware update is required then App will update the firmware.
- Tap on 'Close' to redirect to the Unit list section in App.
- If this icon is shown next to unit name, Tap on it to update the firmware of the AC Wi-Fi.

PROCESS TO ADD AC UNIT IN THE MOBILE APP USING WPS/SIMPLE CONNECTION METHOD

- Please ensure to follow these steps carefully to successfully add your AC unit to the Mobile App using the WPS method.

Step 1:

- Ensure the AC unit is turned off
- Using the remote, give the command "SP 2."
- The Operation LED and Timer will blink simultaneously.

Step 2:

- Locate the WPS button on your home router.
- Press the WPS button on the router.
- Only the Timer LED on the AC unit will blink once a connection between the AC unit and the home router is established.

Step 3:

- Connect your Mobile to the Home Router Wi-Fi.
- Open the Mobile App on your smartphone.
- Navigate to the "Add units" on Homescreen and follow the instructions

Step 4:


- Look for the SSID of the Wi-Fi module displayed on the screen. The SSID will start with "DAIKINAP."
 - Toggle the button next to the SSID to enable it.
- This action adds the unit to the Mobile App.

Step 5:

- Tap on the close button located in the top left corner of the screen to exit the configuration process.

Note:

- The Image of Remote is for reference purpose it may vary model to model.

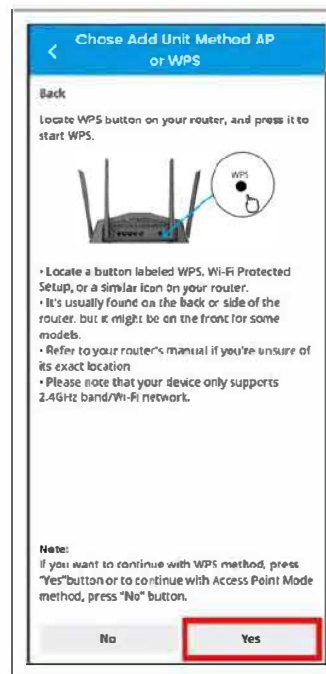


• To continue with WPS method, tap "Yes" on screen.




• Tap "Next" to proceed.


PROCESS TO ADD AC UNIT IN THE MOBILE APP USING WPS/SIMPLE CONNECTION METHOD

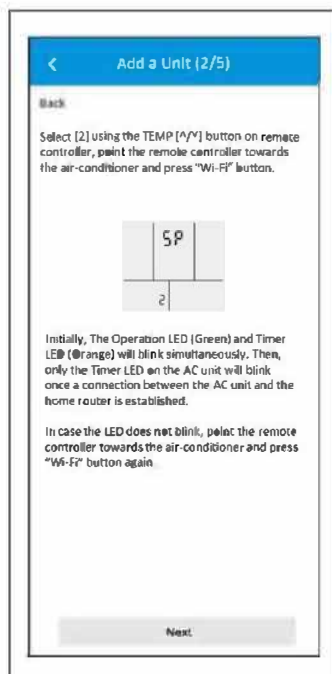

Press Next

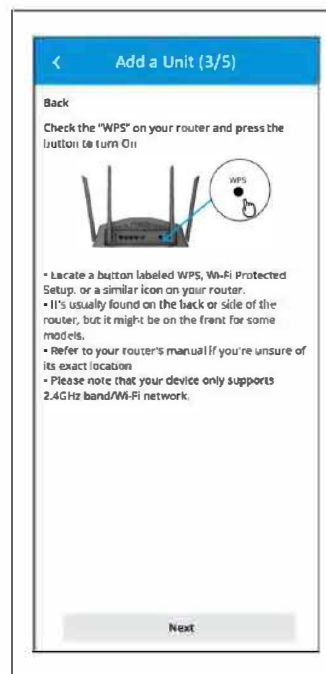

Press Next

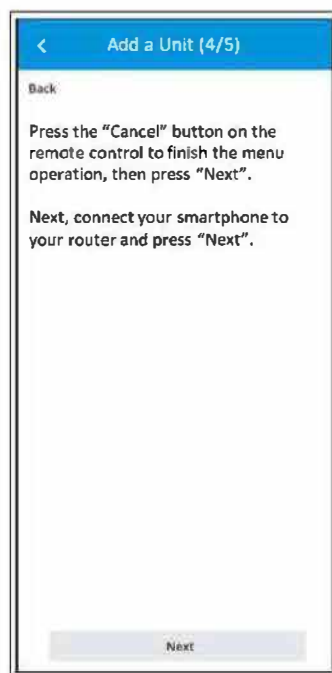

Press Next



Press Next



• Select your unit and then close.

PROCESS TO UPDATE FIRMWARE OF AC WI-FI




- Tap on firmware update button right next to the unit name to update the firmware of AC Wi-Fi.




- Current version and Latest version details are shown on this screen. Tap on Update button to proceed.



- This screen represents the firmware update progress.

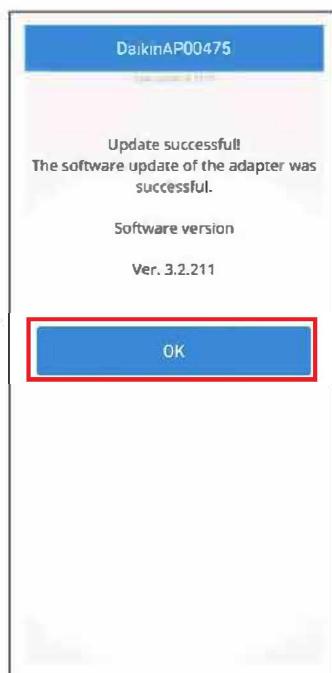

- This screen represents the firmware update successful. Tap on OK button to proceed.

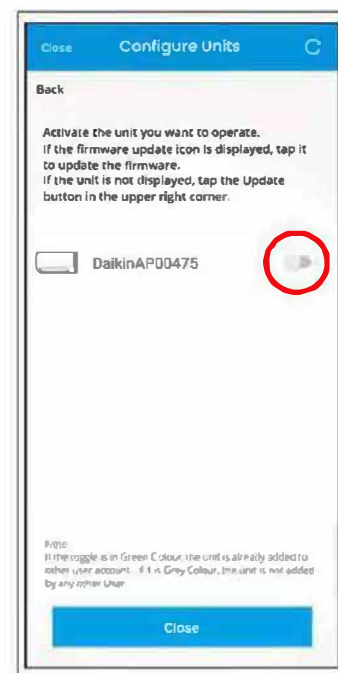


- Now, Turn ON the toggle button.


HOME PAGE - HOW TO START A UNIT



- Read this message and tap on 'Close' to proceed.

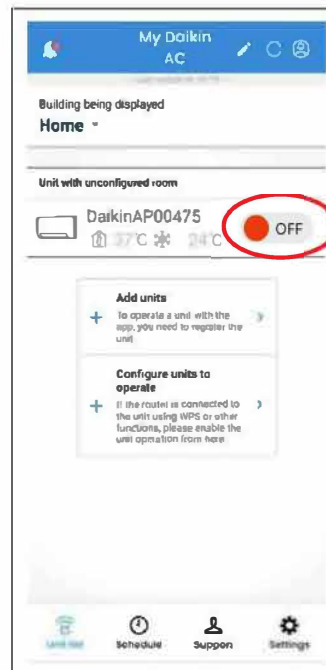

- This represents AC unit is OFF. To Turn ON the AC, tap on the toggle button present next to the Unit name.

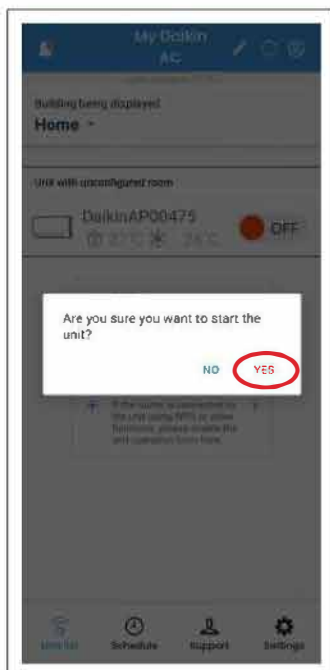

- Tap 'Yes' to confirm and turn ON the AC unit.




- AC Unit is turned ON as shown in the picture.


HOME PAGE - HOW TO START A UNIT



- Tap on AC Unit name as shown above to operate the AC by mobile application.

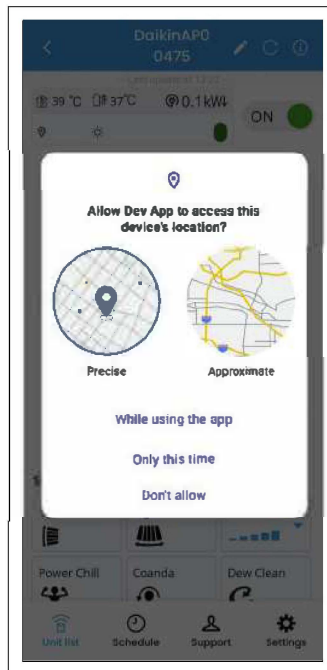


- User need to provide location access to mobile app.

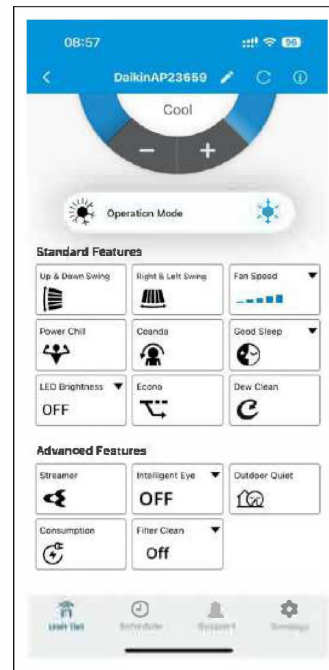


- On opening the AC unit, this screen will appear.

HOME PAGE AFTER MULTIPLE UNITS ARE ADDED

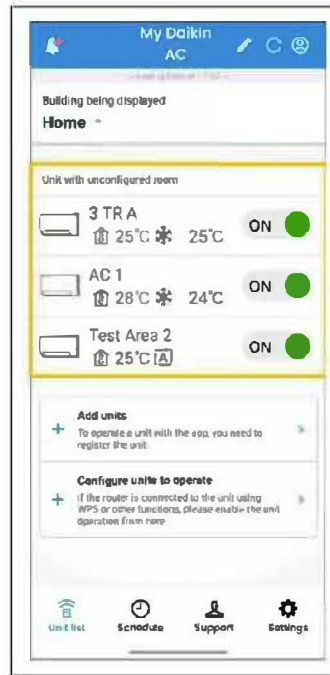


- User can add multiple air conditioner units in the App.
- Currently these units are not configured to any room and building. User need to assign the added units to a building and room.

CENTRAL CONTROL

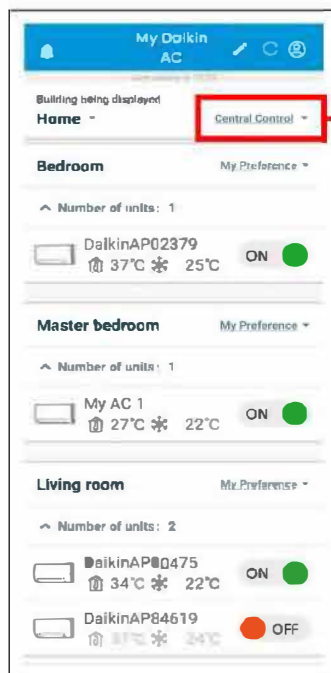


Homescreen after units are added in Building and Room.


1. Select Central Control to operate all registered units in the building.
2. User can disable all units registered to a building and rooms.

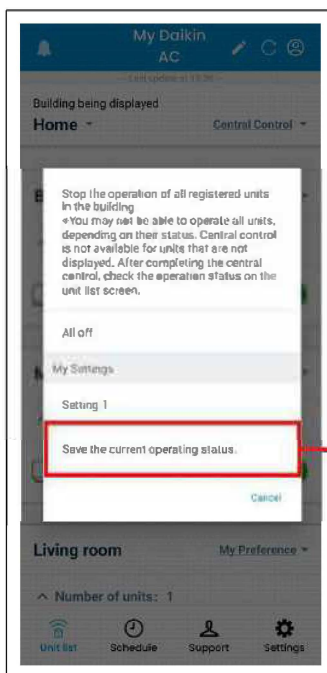

- Tap on "All off" to stop the operation of all registered units in the building.
- User can select "Save the current operating status" in My Settings to save the current settings of all registered units in the building.

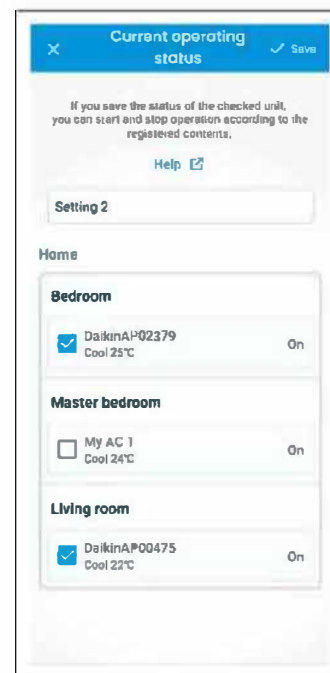


- Select the units you want to operate through central control, Enter Name of the setting and Save it (up to 14 characters).

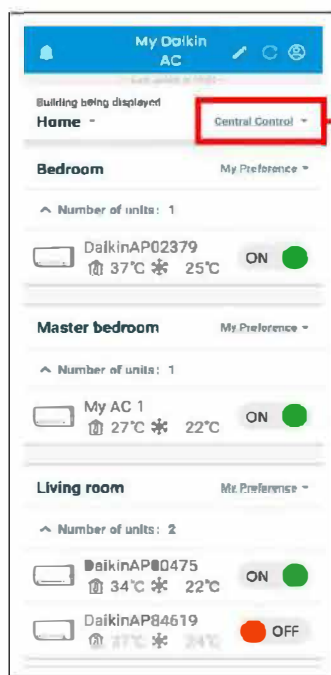


Homescreen after units are added in Building and Room.

- Select Central Control to operate all registered units in the building.
- User can disable all units registered in the building.

Notes: The equipment in all rooms stops. Do not use if there are people in the room who are unable to control the temperature by themselves, such as infants, people with disabilities, and the elderly.

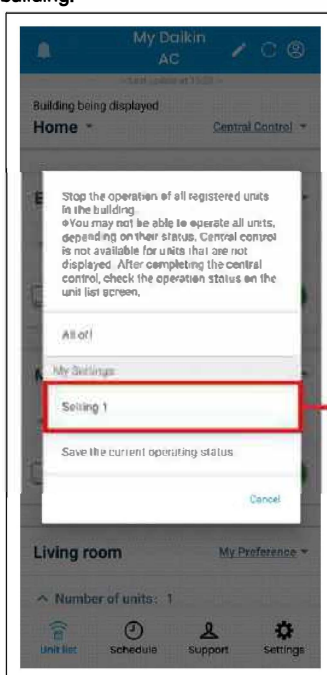

- You can select already saved setting (Setting 1) as shown or "Save the current operating status" of all registered units in the building in "My Settings".

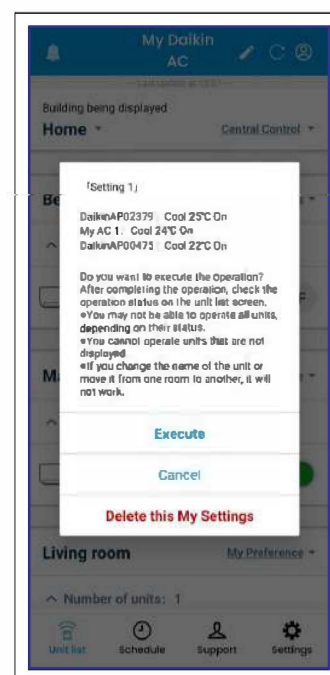


- Read the disclaimer carefully and Tap on "Execute" to confirm.
- To delete the setting, tap on "Delete this My Settings"

MY PREFERENCE




Homescreen after units are added in Building and Room.

- Select My Preference to control multiple units in each room at once.

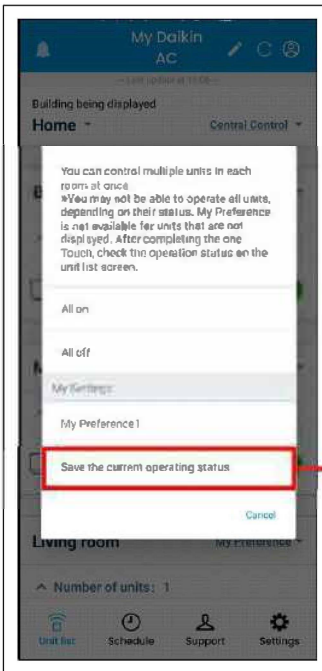

- Tap on All on/All off to start/stop the operation of all registered units in each room at once.
- You can also Save the current operating status of all registered units in each room at once.

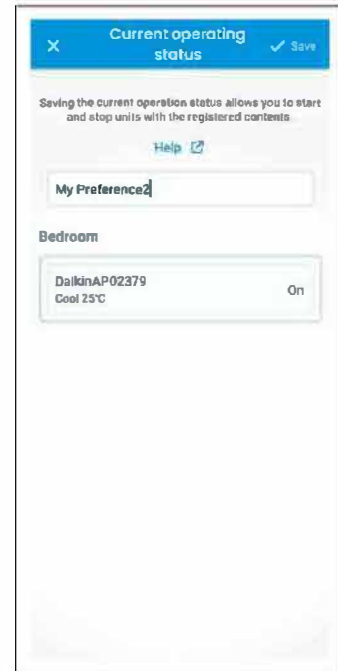


- Enter the name of the setting and Save it (up to 14 characters).




Homescreen after units are added in Building and Room.

- Select My Preference to control multiple units in each room at once

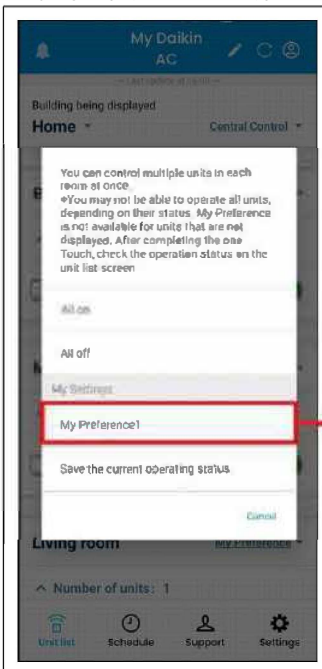

- Tap on All on/All off to start/stop the operation of all registered units in each room at once.
- You can also select already saved "My preference1" to operate all the registered units in room.

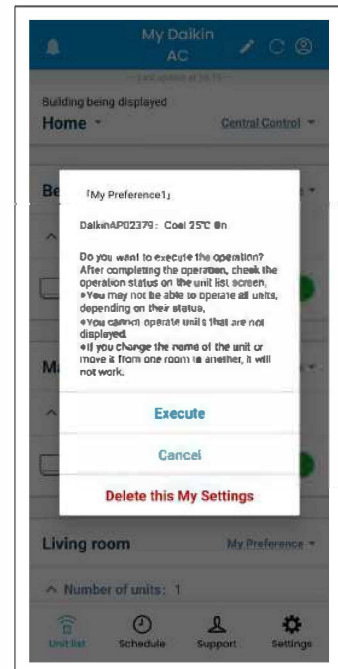

- Tap on "Execute" to confirm.
- To delete the setting, tap on "Delete this My Settings"

Notes:


- By saving the desired operating status, the units registered in the room can be started and stopped with the desired settings.
- The My Preference function is not subject to the My Preference operation when "moving a building/room" or "changing the name of a device". Please re-save My Preferences.

PROCESS TO CONFIGURE UNIT


To configure one or more number of units that are connected to a Wi-Fi Router. First, You need to connect your smartphone to that Wi-Fi Router



- Tap on **“Configure units to operate”** on Homescreen.

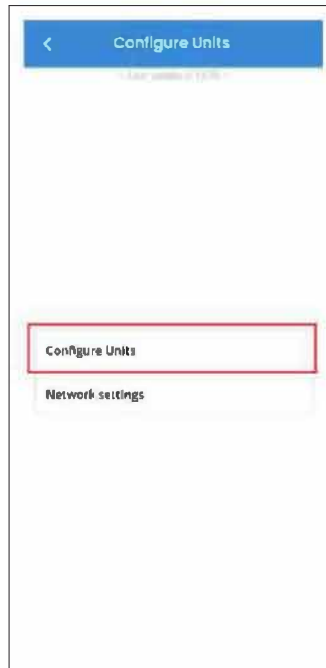

- Tap on **“Configure Units”** on this screen.

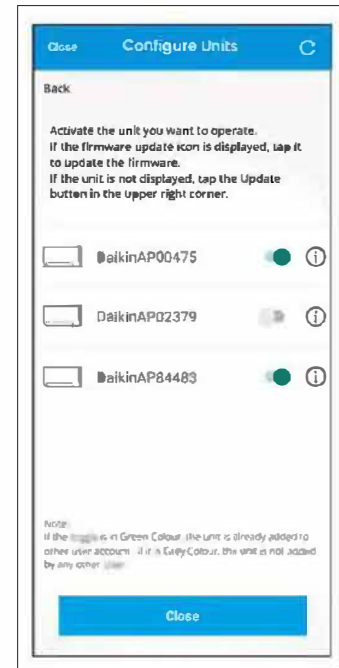


Multiple units

- After adding multiple units, user can choose to activate or deactivate the registered units.
- Tap on **“Close”** to redirect to Homescreen

PROCESS TO CHANGE HOME ROUTER NETWORK


If user wants to change home router then user can do this with the help of "Configure units to operate" icon.

First, connect your smartphone to the AC Wi-Fi hotspot starting with 'DaikinAP'.

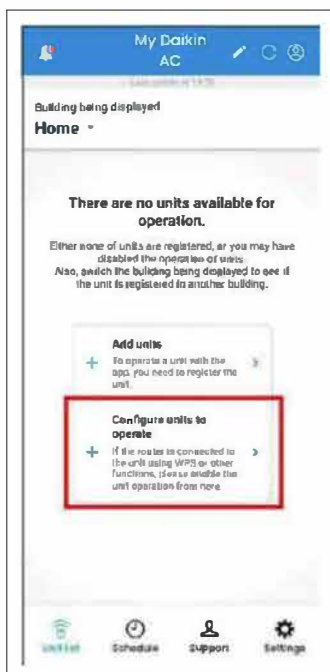


STEP 1

- Tap on "Configure units to operate" on Homescreen..

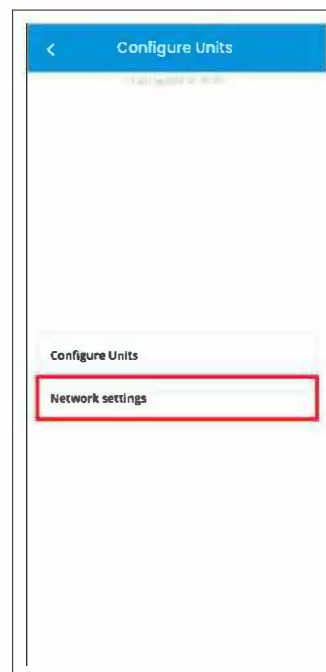

STEP 2

- Tap on "Network settings" on Homescreen.

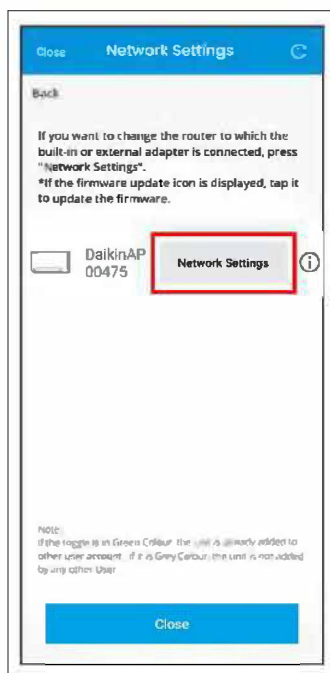

STEP 3


- Tap on "Network Settings" to change the router to which adapter is connected.



STEP 4


- Select the network of the new router to which you want to connect the adapter.

PROCESS TO CHANGE HOME ROUTER NETWORK

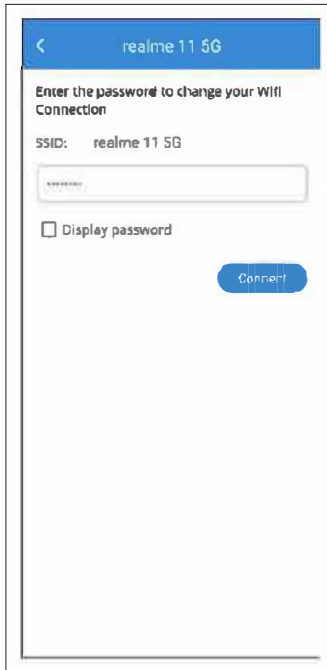

STEP 5


- Enter the **password** of the router network and tap on **Connect**.

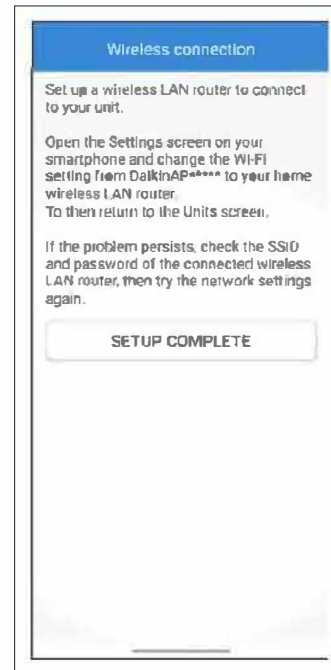

STEP 6

- Tap on **"SETUP COMPLETE"** to complete the process.

HOME SCREEN DETAILS

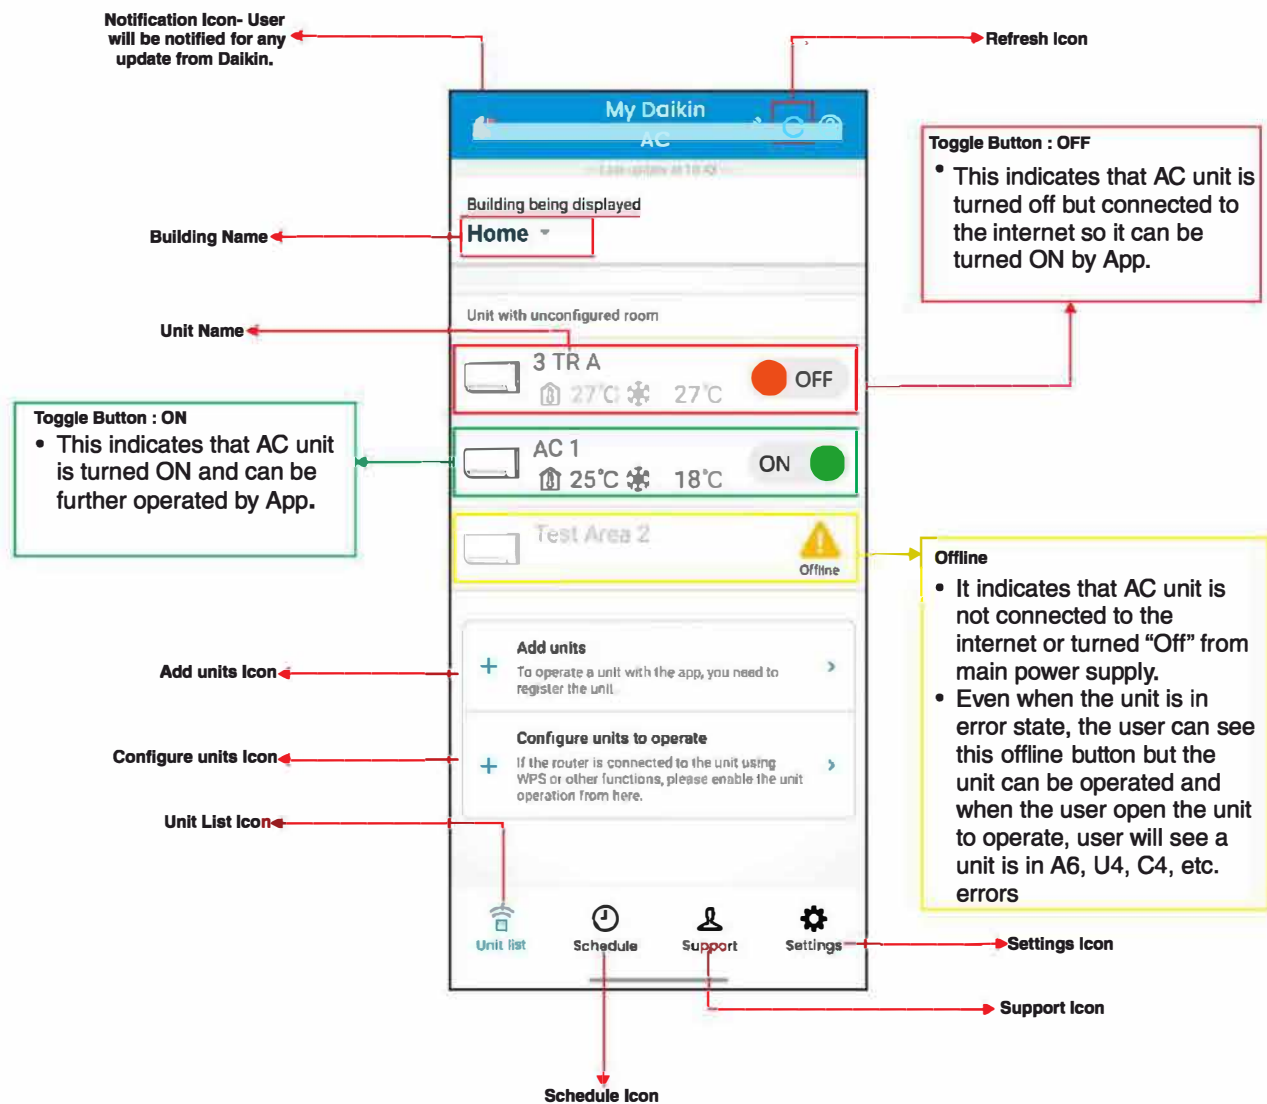

HOW TO USE CONTROL SCREEN

DaikinAP —Last update at 1:56 pm—

37°C 37°C 0.100kW OFF

Hyderabad Clear sky CITY AQI - 60

24°C
Cooling

Next Scheduled Action
Monday · 07:00 · ❄️ · 23°C · —■

Operation Mode

Standard Features

Up & Down Swing	Right & Left Swing	Fan Speed
Power Chill	Coanda	Good Sleep
LED Brightness	Econo	Dew Clean
OFF		

Advanced Features

Streamer	Intelligent Eye	Outdoor Quiet
Consumption	Filter Clean	
	Off	

Unit list **Schedule** **Support** **Settings**

Toggle button:

- Turn ON/OFF the unit.

• First row displays Room Temperature, Outdoor Temperature, Instantaneous Power Consumption.

• Second row displays Location of machine where it is installed for first time, Weather and AQI at that particular location.

• Displays the set temperature and mode of operation. Not only the - & + sign the slider can also be used to **increase** and **decrease** the temperature .

• Displays the **Next Scheduled Action** showing day, time of schedule, Operation Mode, Set Temperature and Fan Speed.

• Tap to select Operation Mode i.e. **Dry - Cool - FAN** (Heat and Auto Mode would be available in Choidan and heat & Cold Models.

• Set of **Advanced Features** including Up & Down Swing, Right & Left Swing, Airflow Rate, Powerful, Coanda and Dew Clean, Good Sleep, LED, Brightness, Econo.


• Set of **Advanced Features** including Streamer, Intelligent Eye, Filter Clean & Outdoor Quiet

• User can check **weekly, monthly, yearly** electricity consumption.


Note:

- If user shift the air conditioner unit after sometime of usage than user need to again do the add unit process to update the new location.
- Instantaneous power consumption is reference or indicative value only, it can vary from actual values.
- AQI values are taken from third party API , it can have variations depending upon third party API's.
- Depending upon different models, standard features and advance features icon will appear on the screen.
- For these models Streamer, Intelligent Eye & Outdoor Quiet are not applicable.

OPERATION MODE

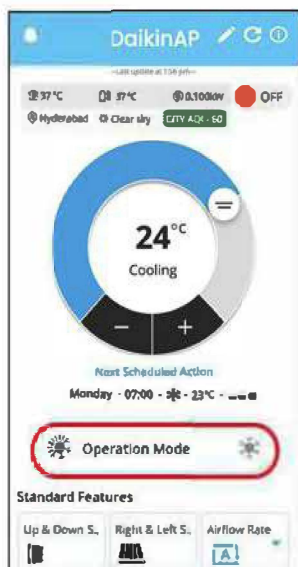

- User need to click on **Operation Mode** to select different modes.

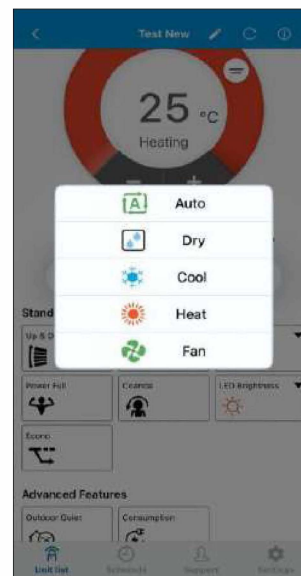

- User can select: **Auto , Dry, Cool , Heat and Fan** mode as per requirement .

Note :


- Auto and Heat Modes would be available only in Choidan, Heat and Cold Models.
- Whenever unit is Turned ON through App, unit will follow below table.
- Whenever AC is switched OFF in dry mode and is switched ON from remote, air conditioner will start in Cool mode and then DRY mode selection can be done using the MODE button.

Mode	Set temperature before Turn OFF by Mobile App.	Set temperature after Turn ON by Mobile App.
COOL	If Set temperature < 24°C	Default set temperature will be 24°C
	If Set temperature >= 24°C	Default set temperature will remain same as set prior to remote switched OFF.

SWING - UP & DOWN SWING ; RIGHT & LEFT SWING




- User need to click on **Up & Down Swing** or **Right & Left Swing** or both swing together to turn it on.

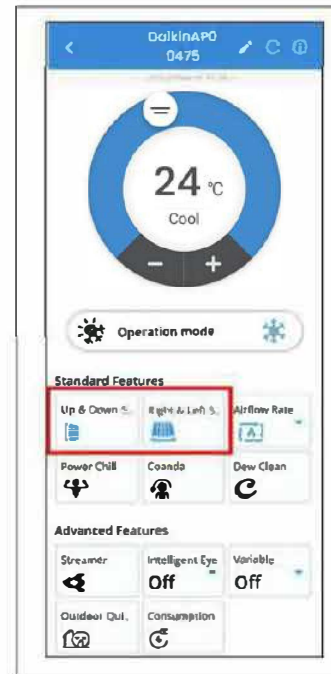

- **Up & Down Swing** and **Right & Left Swing** will turn to blue in colour which indicates that swing is turn On. User can Turn ON 3D Swing by clicking Up & Down Swing and Right & Left Swing.


How to use Airflow Rate and Power Chill feature

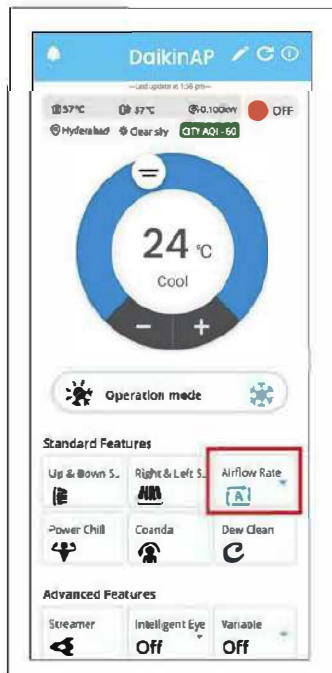


- User need to tap on **Airflow Rate icon** (as shown above).

Note:


- If Unit is Turned ON through Mobile App in Cool/Dry Mode and Auto Airflow rate, then smell proof operation will start

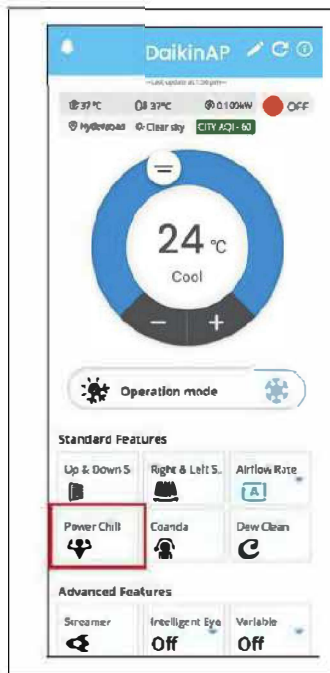

- To use Power Chill operation, user need to click on **Powerchill icon**.

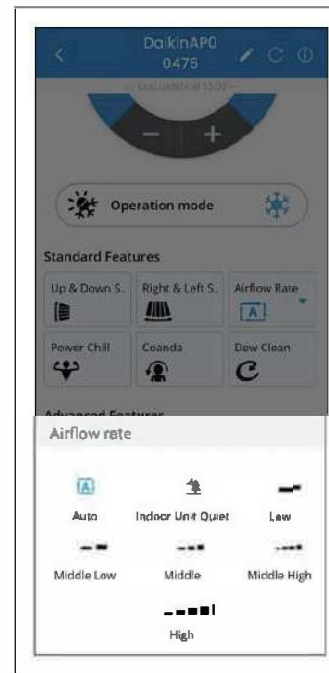

- User can choose from different fan speeds i.e., Indoor Unit Quiet, Low, Middle Low, Middle, Middle High, & High based upon your requirement.

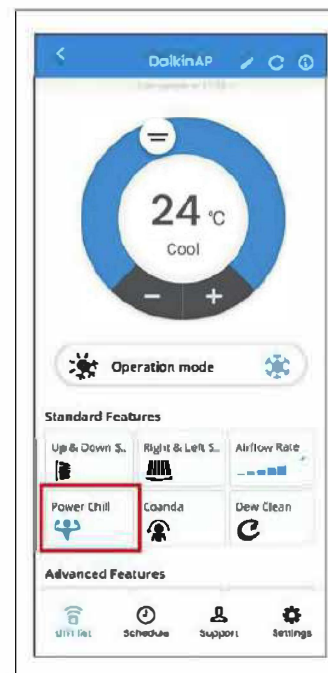


- The Power Chill icon colour will change to **blue** (this indicates the feature is turned ON).

Note:

- When power chill is on user cannot operate temperature & fan speed.


GOOD SLEEP OPERATON

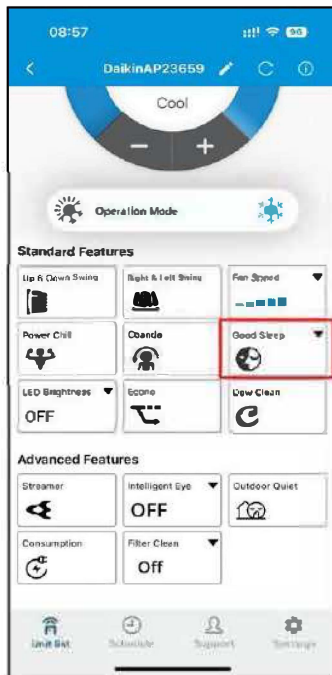


- User need to click on **Good Sleep** Mode.



- To Enable the **Good Sleep** feature user need to tap on the toggle button.

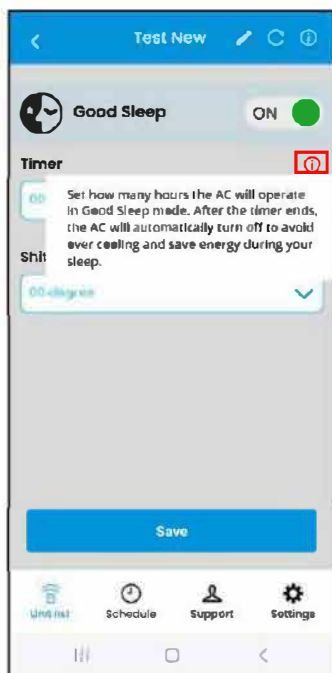

- For more details of **Timer** features please tap on the information icon.

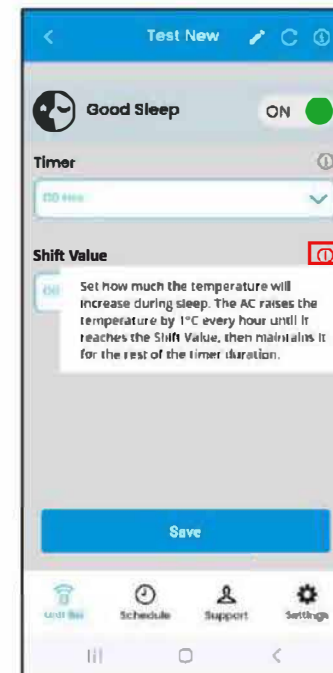


- For more details of **Shift Value** features please tap on the information icon.


GOOD SLEEP OPERATON




- User need to select the desired timer & shift value using drop down menu .

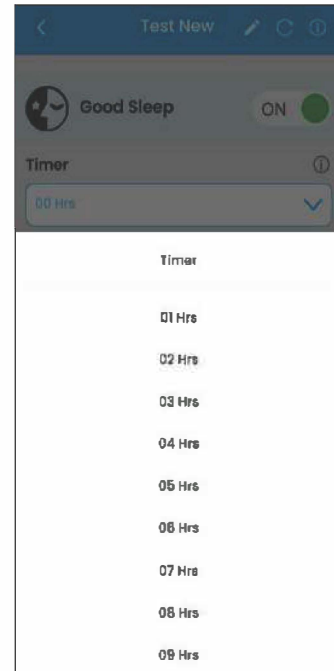

- After click on the Timer button user can select the timer from 01 to 09 Hrs.

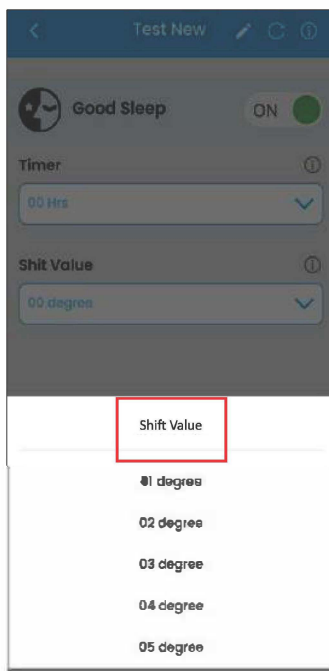

- After click on the Shift Value button user can select the Shift Value from 01 to 05 degree.

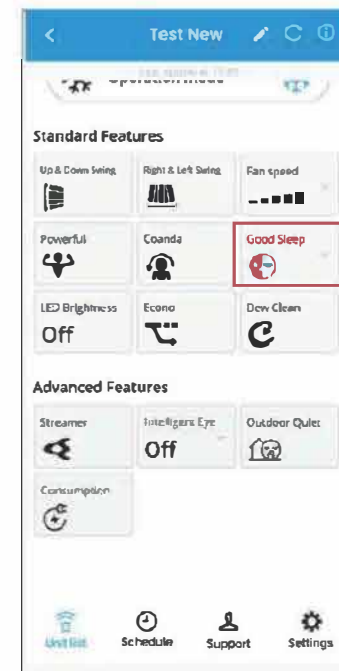


- After that Good Sleep icon will turn in Blue , This indicate Good Sleep operation is turn ON.


LED BRIGHTNESS OPERATION




- User need to click on LED Brightness Tab in standard features category.

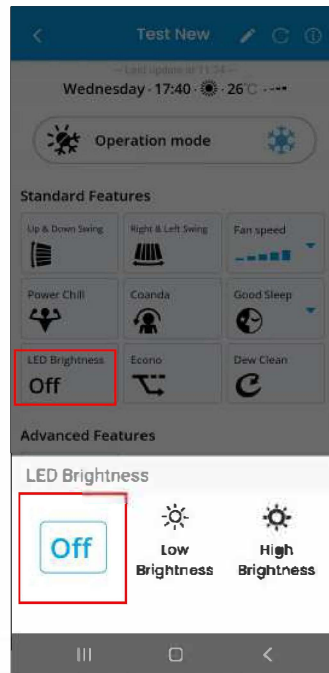


- User can tap on the off button to close the LED Brightness feature.

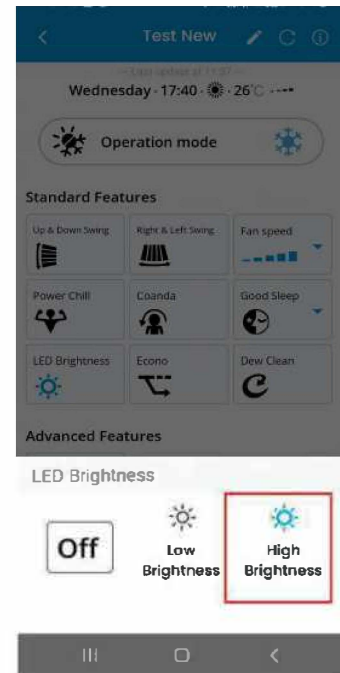

- After select the High brightness feature in shown pop-up the feature highlighted in blue colour.

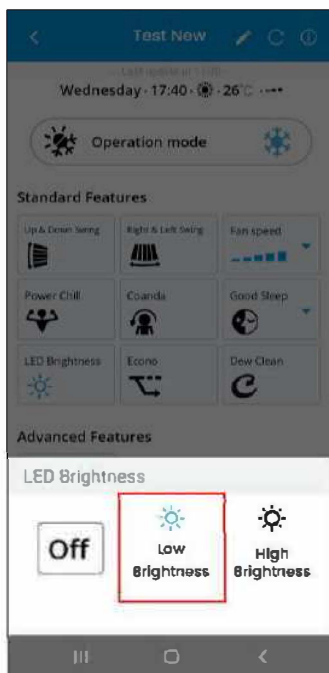


- After select the Low brightness feature in shown pop-up the feature highlighted in blue colour.

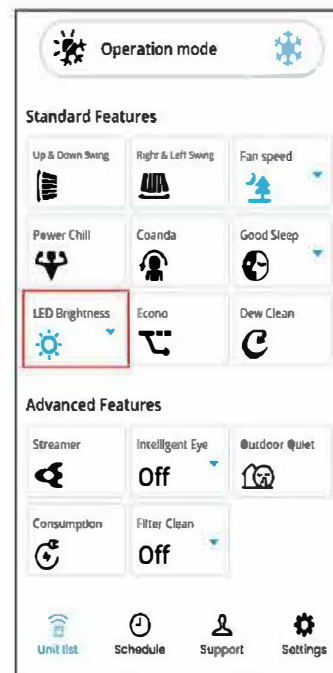


- After select the any mode in LED Brightness feature the feature will be blink in blue colour.

- * Brightness control becomes enabled once the LED is ON from the Remote.
- * LED Brightness should be ON from the Remote

ECONO OPERATION

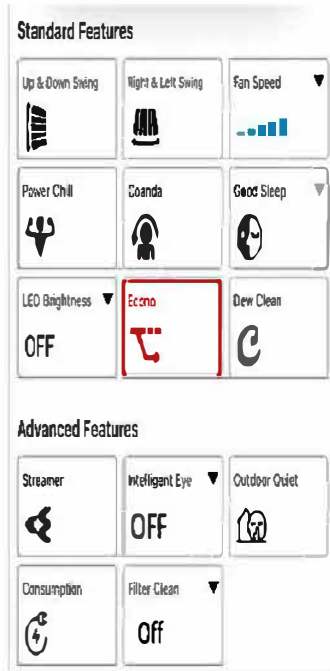


- User need to click on ECONO Tab In standard features category.

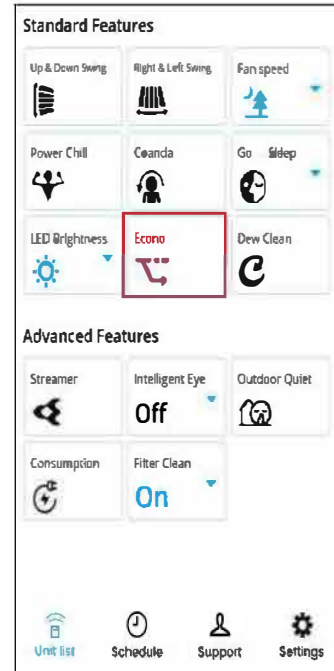


- After that ECONO icon will turn in Blue , This indicate ECONO operation is turn ON.



DEW CLEAN OPERATION

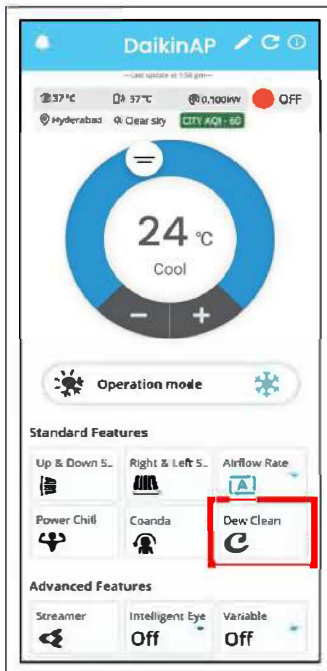

- User need to click on “Dew Clean” icon.


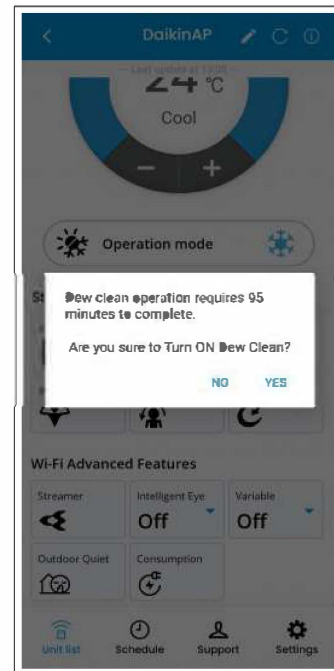


- App will again request permission to Turn ON the operation. After user confirm to Turn ON, then user need to follow the next step.

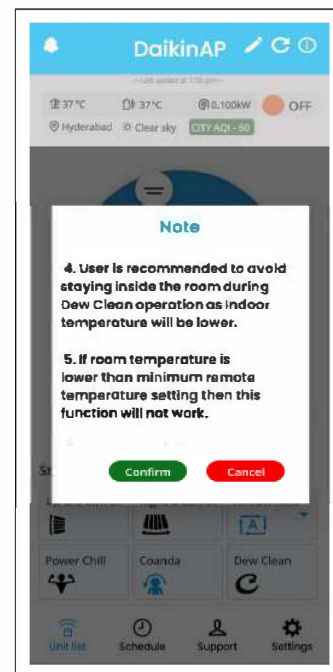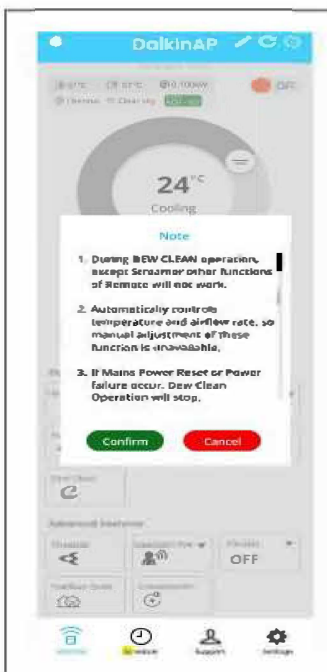


User is recommended to carefully read and follow the Notes.

DEW CLEAN OPERATION

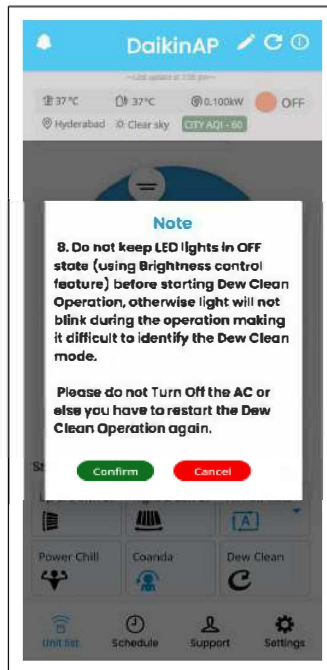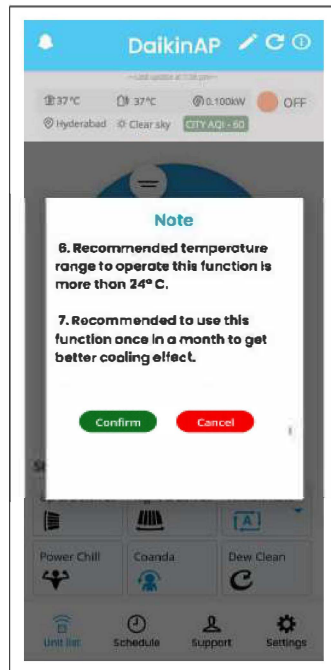

User is recommended to carefully read and follow the Notes.

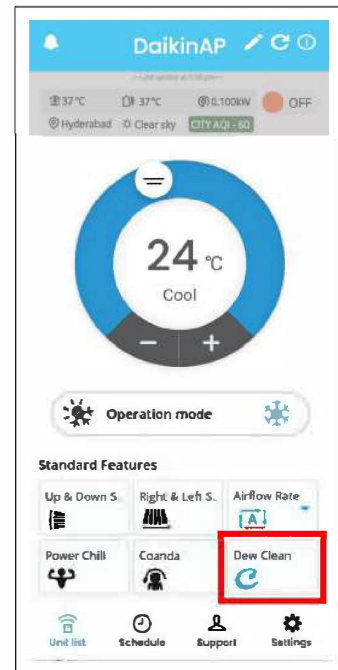


- After confirmation from user, Dew Clean Operation icon will turn **blue** (this indicates dew clean operation is Turned ON)


FILTER CLEAN FEATURES




- User need to click on Filter Clean Tab in Advanced features category.

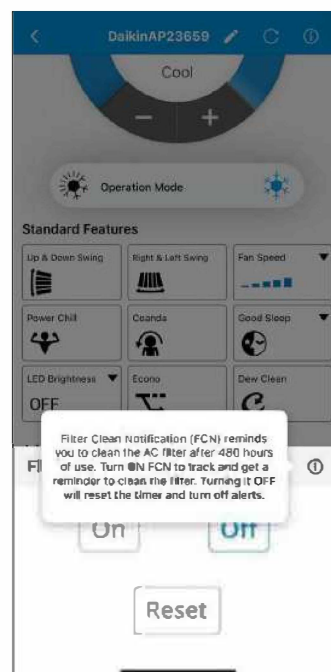

- After that you have to select ON/OFF & Reset icon .

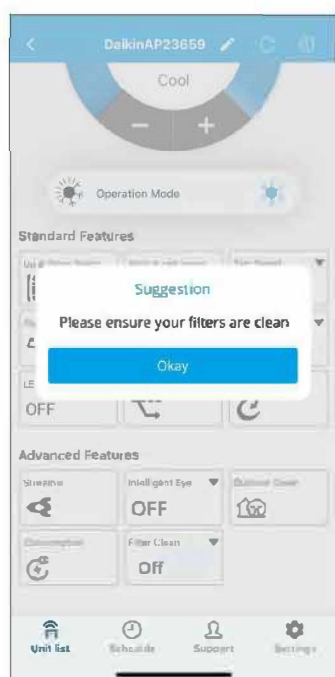


- User Need to select the ON icon; then User will saw the Pop-Up on display .

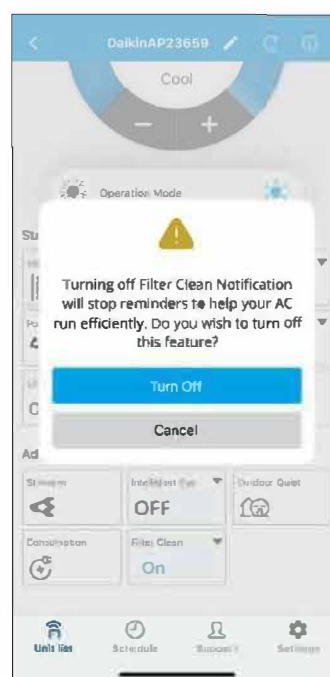

- User Need to select the OFF icon; then User will saw the Pop-Up on display .

FILTER CLEAN FEATURES

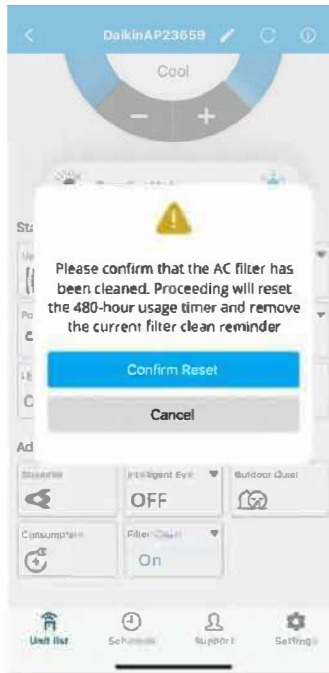

- User needs to select the Reset icon; then the user will see the Pop-Up on display.




- For more details of Shift Value features, tap on the information icon.

Note:- Filter clean indicator will work separately through remote & mobile application. Users are recommended to use this operation either from mobile application or remote at the same time.

ELECTRICITY CONSUMPTION FEATURE



- User need to click on **Electricity Consumption** icon (as shown above).

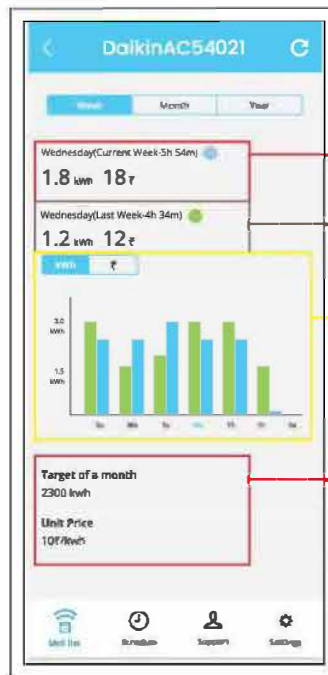


- User can view the Electricity Consumption on **Week, Month and Year** basis (as per above explanation).


- This indicates **present weekday's, month, year electricity consumption and total time for which unit is running.**
- This indicates **last weekday's, month, year electricity consumption.**
- This indicates **graphical comparison of above data.**
- User can select **price of electricity per unit and target electricity bill of a month.**

- **Note:** You can check the amount of power consumed and the electricity price in a graph.
- About graph colours in the "Week" display
Green: Usage that day
Blue: Last week's usage
- About graph colours in the "Month" display
Green : Usage that day
Blue : Last month's usage
- About graph colours in the "Year" display
Green : Usage that month
Blue : Previous year's usage


ELECTRICITY CONSUMPTION FEATURE

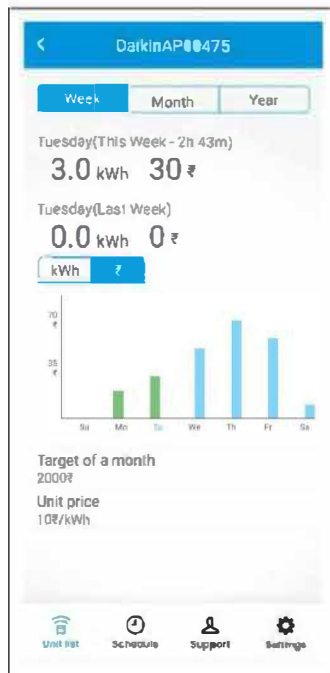

- When **Week** is selected, tap the day of the week at the bottom of the graph to display the cumulative power consumption for the selected day of the week.

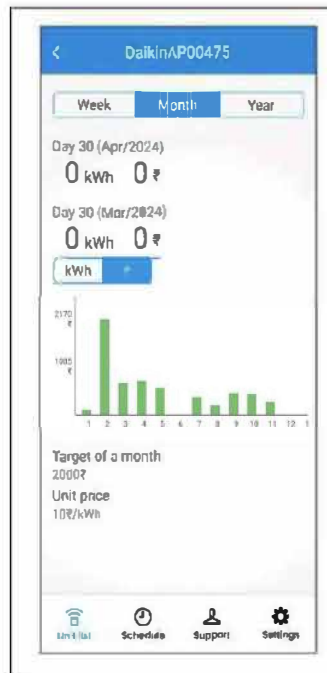

- When **Month** is selected, tap the date at the bottom of the graph to display the cumulative power consumption for the selected day of the month.

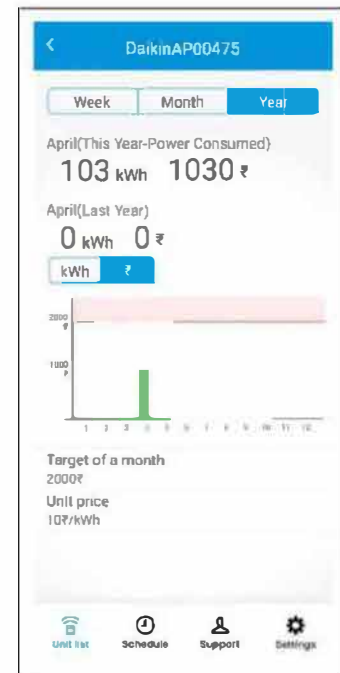

- If **Year** is selected, tap the month at the bottom of the graph to display the cumulative power consumption for the selected month.

Target of a month

☐ Not set

☐ 100 ₹

☐ 200 ₹

☐ 300 ₹

☐ 400 ₹

☐ 500 ₹

☐ 600 ₹

☐ 700 ₹

☐ 800 ₹

☐ 900 ₹

☐ 1000 ₹

☐ 1100 ₹

☐ 1200 ₹

CANCEL OK

- User can select the target electricity bill of a month. Then select OK.
- You can set it from no setting to 10,000 ₹



- **Red line** in graph indicates the Target of a month set by the user.

Unit price

☐ 1 ₹/kWh

☐ 2 ₹/kWh

☐ 3 ₹/kWh

☐ 4 ₹/kWh

☐ 5 ₹/kWh

☐ 6 ₹/kWh

☐ 7 ₹/kWh

☐ 8 ₹/kWh

☐ 9 ₹/kWh

☐ 10 ₹/kWh

☐ 11 ₹/kWh

☐ 12 ₹/kWh

☐ 13 ₹/kWh


CANCEL OK

- User can select the unit price of electricity. Then select OK.

Note :

- Electricity Consumption feature is indicative only, it can have variations from actual values.

HOW TO USE SCHEDULE FEATURE

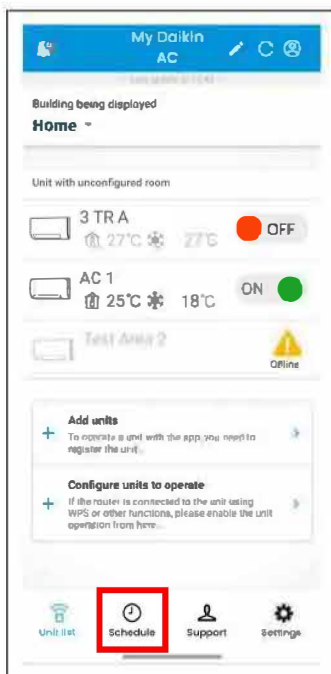


- User need to click on **Schedule Icon** (bottom side).



- Expand to see already set schedule or to set a new schedule.



- User need to click on week day like **Monday** and click on **Add a schedule**.

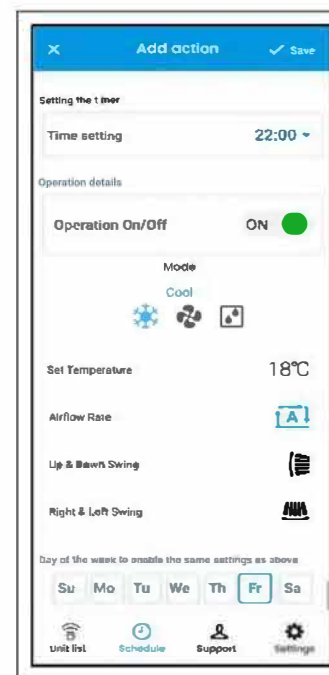

- User can now select Time (24Hr format), Unit ON/OFF, Mode(Cool, Fan, Dry) Set Temperature, Fan Speed, Swing. After selecting required setting, user need to **Save the setting** (Top Right Side).

HOW TO USE SCHEDULE FEATURE

- Ticked schedules are enabled on the unit.
- Unticked schedules are disabled on the unit.

This bar represents full day (24 Hrs.) set schedules in a unit

- Blue colour represents Cool mode
- Green colour represents Fan mode
- Light Blue colour represents Dry mode
- Grey colour shows no schedule is set.

Central control menu

You can change the settings of all schedules registered in this unit at once

Disable all Enable all

Delete all

Change operation details at once

Edit action

Mode

Cool

- Tap each item to enable or disable the corresponding timer.
- With Enable all and Disable all features, user with a single click can enable and disable all schedules of the week at one time.

Note:-

- User can save 06 numbers of schedule for a particular day.
- If the communication condition is poor, the time cannot be retrieved, so the schedule timer may be disabled


Central control menu

- User need to tap on Central control menu at the bottom of unit schedules as shown.
- With Enable all and Disable all features, user with a single click can enable and disable all schedules of the week at one time.
- User can use **Delete all** feature to delete all the schedules for the week.

Change operation details at once

- User can set operation mode (Cool, Fan or Dry) of all schedules set in a unit.

HOW TO USE SCHEDULE FEATURE ON MULTIPLE UNITS

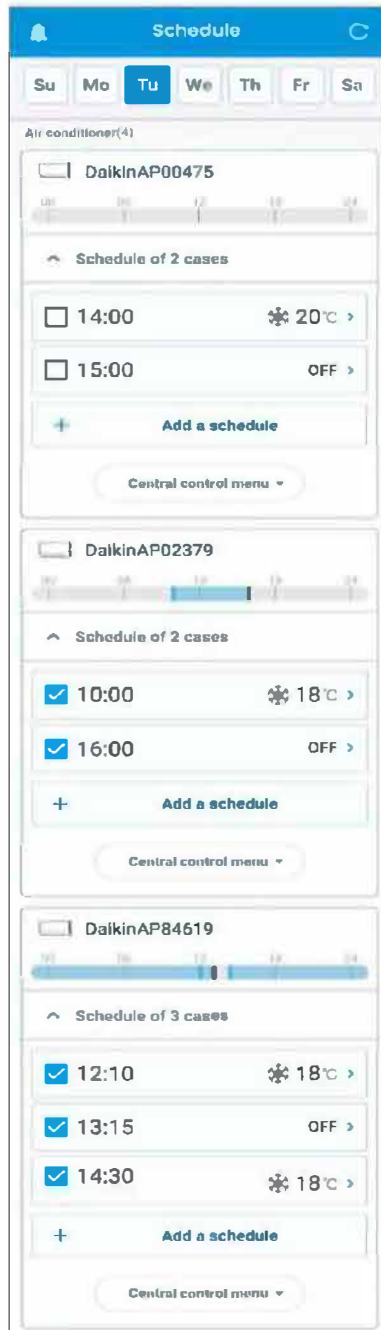


- User can view all the registered units and their set schedules on Schedule Screen.
- When you tap the operation schedule button from the individual AC unit setting screen, you cannot set the schedule for other devices.

Note:-


- If the communication condition is poor, the time cannot be retrieved, so the schedule timer may be disabled.
- Timer setting after the power outage is restored or when the outlet is plugged in and unplugged
- The air conditioner will match the operation of the timer of the main unit, so all settings will be changed. Since the settings are remembered, please check the settings by yourself and re-enable them.

SUPPORT & SETTINGS SECTION

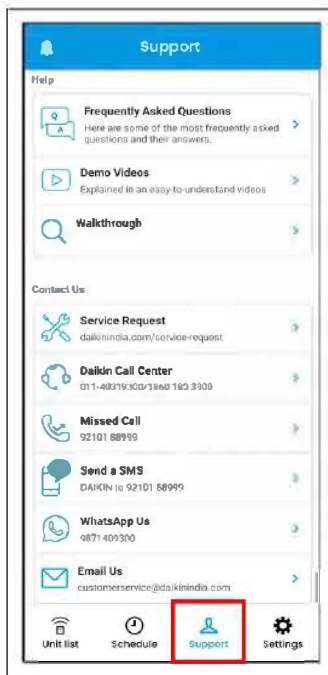

Support Section

- From Support Section, User can find out answers of frequently asked questions and Contact Daikin Service team through email, SMS or phone call.

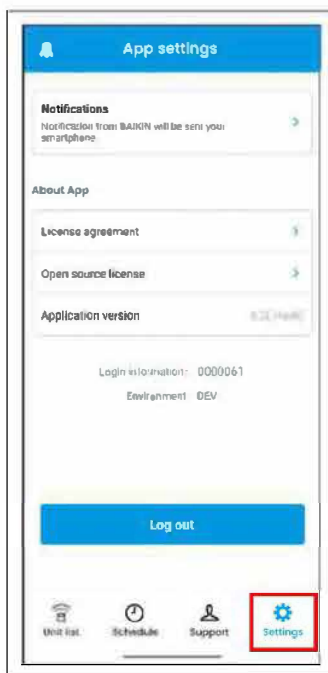


Settings Section


- If user wants to Log Out from the App, Read Licence Agreement and App Version; user can do this from setting section.

PROCESS TO REMOVE AN ADDED UNIT


- Turn off the unit for main supply or give SP 'Off' command by remote and wait for 5min. to appear yellow Offline icon.

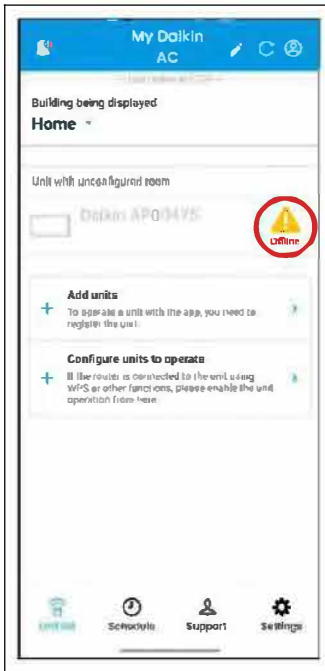


- Tap on yellow colour **Offline** icon next to the unit which you want remove on Homescreen.

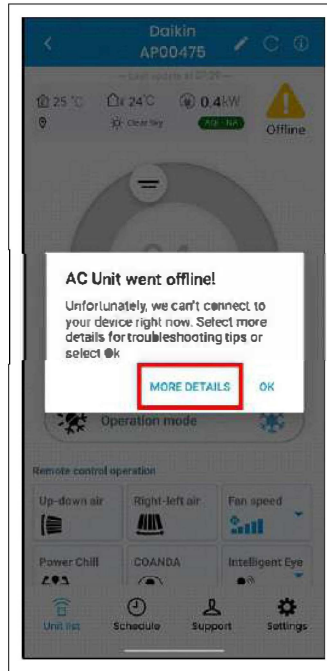


- Tap on **MORE DETAILS** to proceed further.

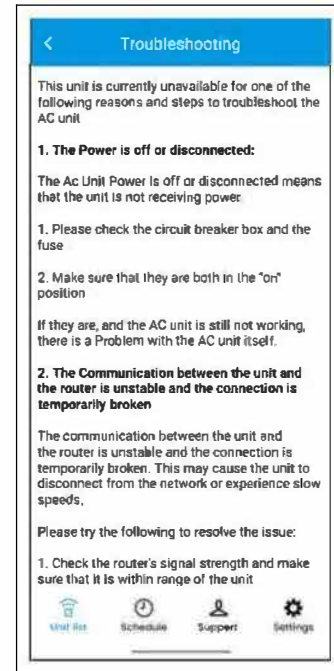

- User can read the Troubleshooting methods on this screen. Scroll down to the bottom of the screen.

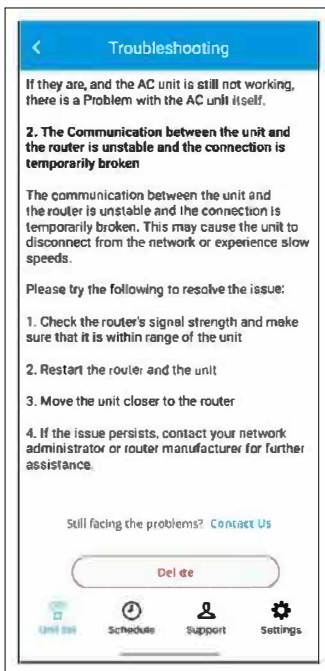

- Tap on **Delete** to remove unit from App.

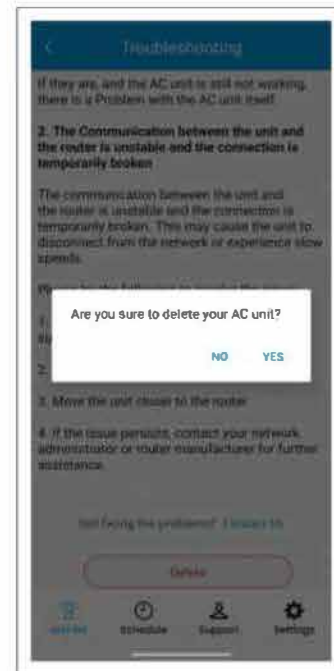


- Tap on **YES** to give confirmation.

NOTES

- Supported OS Versions :
 - For Android OS Version → 8 and above.
 - For IOS Version → 14 and above.
- Home Wi-Fi Router must be operating at 2.4GHz.
- The maximum distance to add the air conditioner unit is around 7m.
- If the wireless network router is physically too away from the unit, server connection may get fail.
- The Wi-Fi module device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- This Wi-Fi module device complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.
- If products are used in below conditions, it may damage products and leakage of electricity and abnormal temperature may occur.
 - In an atmosphere containing corrosive gas (Cl₂, NH₃, SO_x, NO_x etc.)
 - In an atmosphere containing combustible and volatile gases.
 - Dusty place.
 - Direct sunlight place.
 - Water splashing place.
 - Humid place where water condenses.
 - Freezing place.
- The Wi-Fi device specification and frequency range details are :
 - Specification** : IEEE802.11b/g/n
 - Frequency Range** : 2412-2462MHz
 - Certifications** : WPC ETA Certificate.
- WPA2 is the recommended security method for wireless network router. If the wireless network router is setup as WEP security, connection may fail.
- Features which are not applicable for a particular model can't be used through Mobile App. Users are recommended to use Streamer, Intelligent Eye features through App only if these features are present in the provided remote controller.
- Upto 50 units can be added from one login account. For comfortable operation, we recommend using around 10 units.
- The colour coding followed for different AQI ranges are mentioned below:

AQI	Remark	Color Code
0-50	Good	Green
51-100	Satisfactory	Light Green
101-200	Moderate	Yellow
201-300	Poor	Orange
301-400	Very Poor	Red
401-500	Severe	Dark Red

- Images shown in the manual are for representation purpose, it can vary from model to model.
- Due to continuous R&D, some features can be different for different models. Please visit Daikin Home Page for more information.
- During Fan Mode, the icon colour would Turn Green whenever that particular feature is active. While during Dry Mode, the icon will Turn Light Blue colour whenever that particular feature is active.

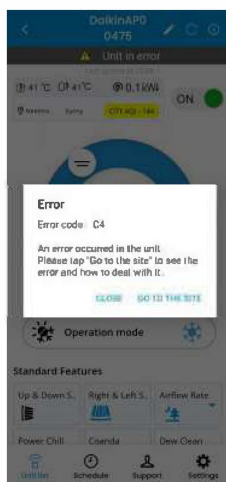

When machine is in error condition like faulty heat exchanger temperature sensor (Error code : C4) etc., a pop-up will show in App that an error occurred in the unit.

DAIKIN AC MANAGER 2.0 – SMART SPEAKER

– Amazon Alexa



INDEX

1. Alexa App Overview	93-95
2. Alexa Device Setup (How to Connect Alexa Speaker with Alexa Mobile App)	96-103
3. Alexa AC Connectivity (How to Connect Alexa Speaker with AC Unit)	104-112
4. How to Provide Command to Alexa - Smart Speaker	-113-114

ALEXA APP OVERVIEW

1. Download the App:


- Download and install the Amazon Alexa App from Google Play Store(Android OS) or iOS App Store.

2. Open the App:


- Once the app is installed, tap on the app icon to open it.

3. Sign In or Create an Account:

- If you already have an Amazon account, tap on "Sign In" and enter your Amazon account credentials (email address and password) to proceed.
- If you don't have an Amazon account, tap on "Create a new Amazon account" and follow the prompts to create one.

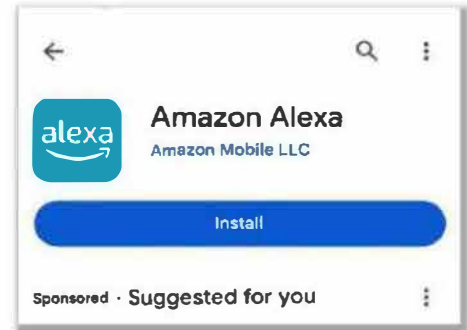


- After successfully signing in, you will see this screen. Please verify that your name is accurate. If it's correct, tap on it. If not, proceed by selecting 'I'm someone else' to complete the registration process.

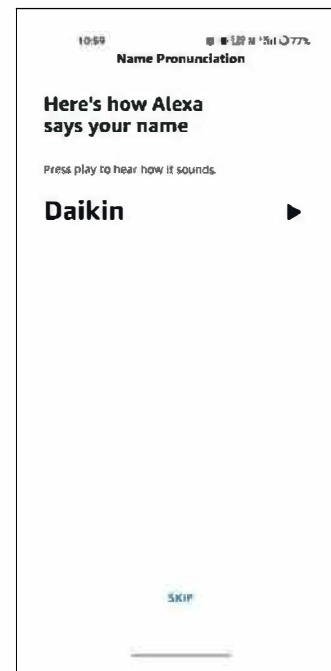


- Press play button to hear how Alexa says your name or you can skip this step.


ALEXA APP OVERVIEW

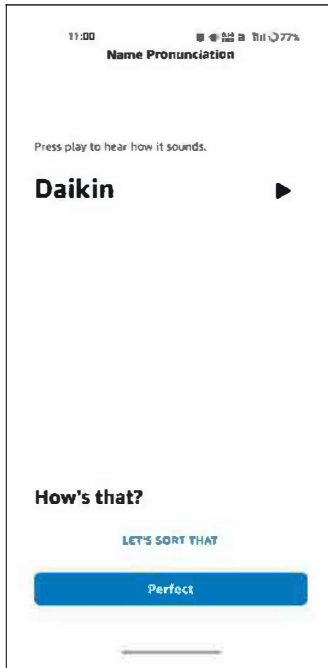


- If you agree with how Alexa pronounces your name, press 'Perfect' to confirm. If you wish to fine-tune the pronunciation, select 'Let's Sort That'.

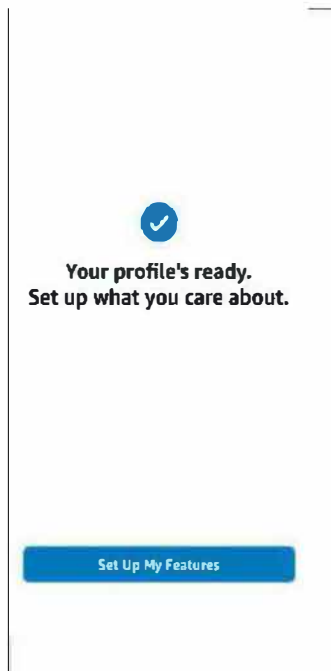

- Your account is now prepared for setup, allowing you to configure and customize your features. Let's proceed with the set 'Up My Features'.

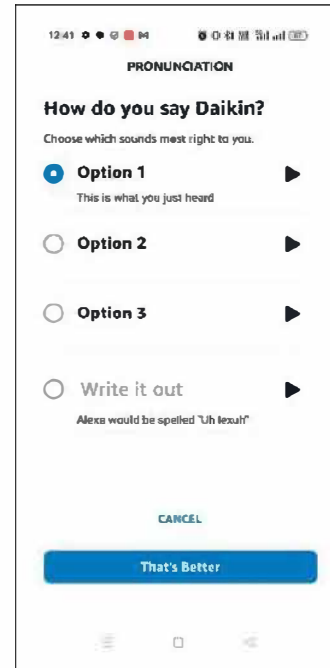

- The 'Let's Sort That' option provides various alternatives for pronouncing your name. You can choose the one that best suits your preference. And click on "That's better".

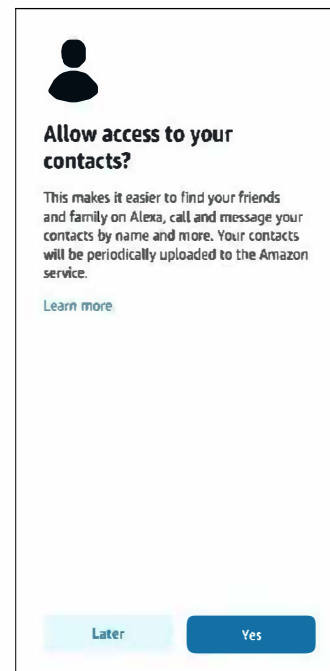


- User can allow access to their contacts or can do it Later.


ALEXA APP OVERVIEW




- Alexa will initiate the verification process by sending an SMS message to confirm your details

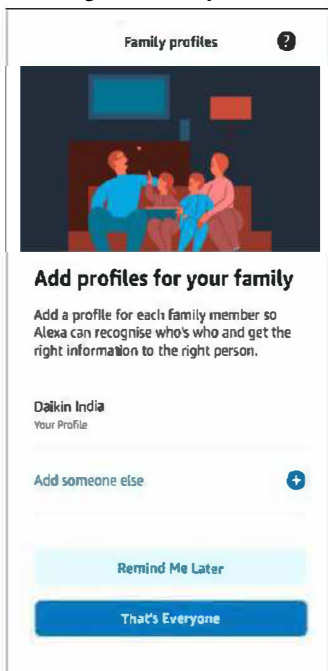

- Click on 'That's Everyone' to proceed next step or can Add Someone else.

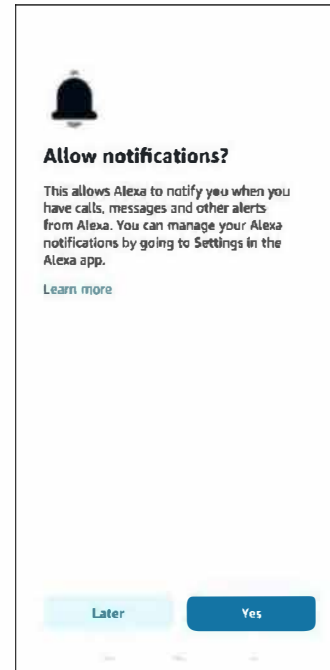


- User can accept the Allow Notifications or can do it Later.

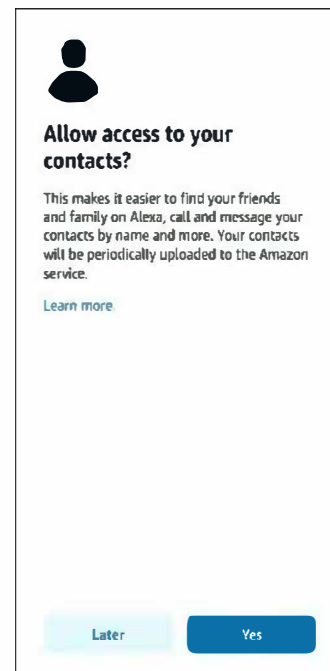


- Now user is ready to setup their Alexa device, and click on 'Done'.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

User need to follow below steps to connect Alexa Smart Speaker with Alexa Mobile App.

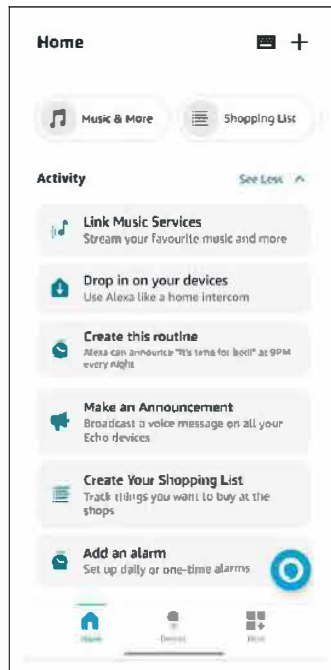


- This is home screen that is showing various features. There are three options at bottom side: Home, Devices and More. Click on 'Devices'.

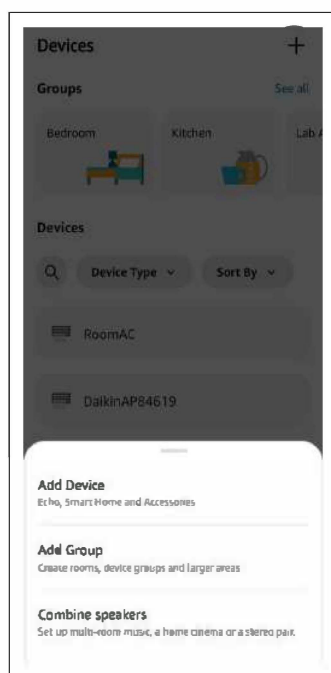


- Tap on the "+" icon in the top right corner to add a new device. To set up a new device with Alexa, tap on "Add device" on the screen.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

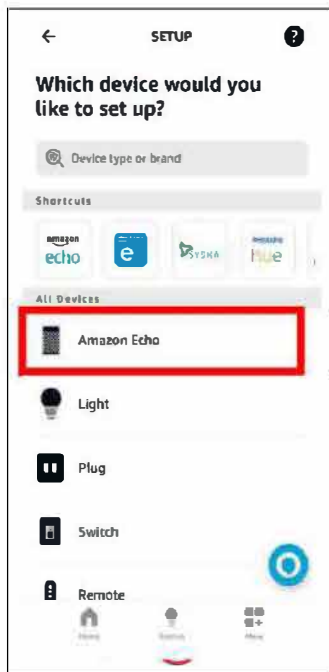


- Select "Amazon Echo" from the list of devices displayed on the screen to proceed with its setup.

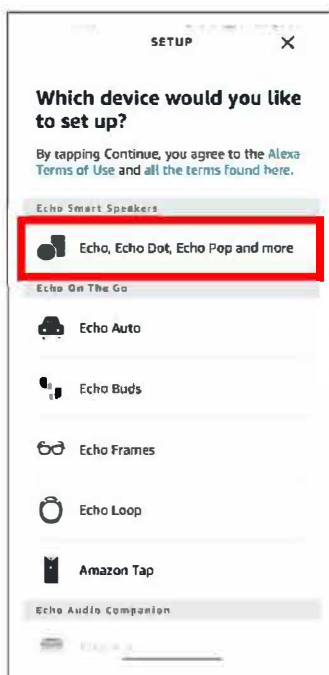


- Choose "Echo, Echo Dot, Echo Pop, and more" from the list of Echo smart speakers displayed on the screen to continue with the setup process

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

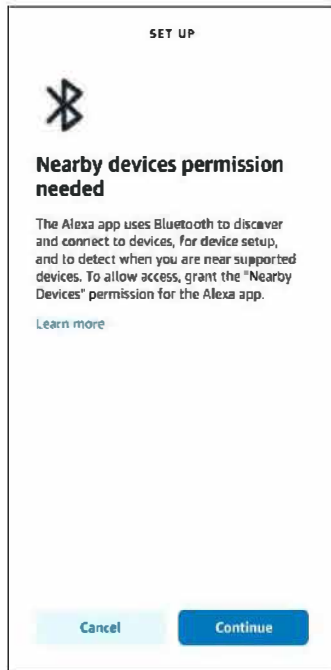

- The Alexa app utilizes Bluetooth to discover and connect to devices, facilitating device setup.

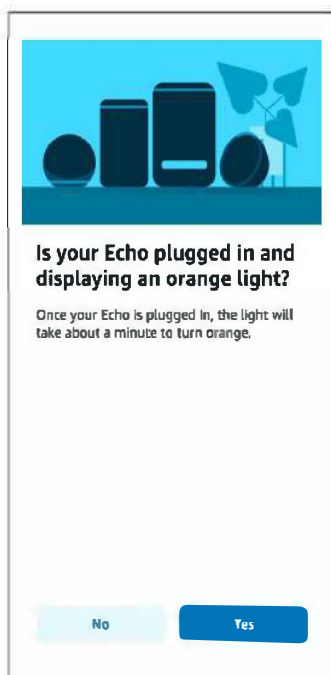


- Confirm whether your Echo device is plugged in and displaying an orange light by selecting "Yes" or "No" accordingly on the screen.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)




- To connect your phone to the Echo device, open the Wi-Fi settings on your phone and select the network that begins with "Amazon".

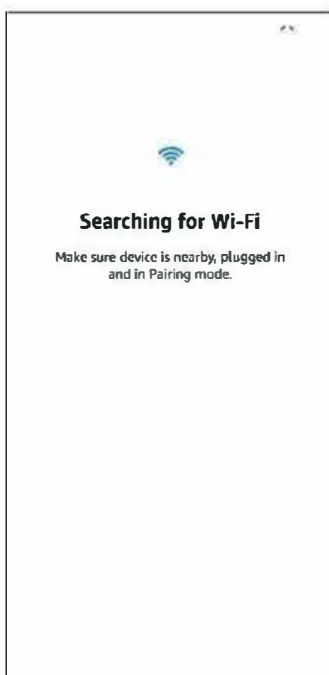


- After successfully connecting your phone to the network starting with "Amazon," return to the Alexa app, which should be running in the background. You will be directed to the "Searching your Wi-Fi" screen.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

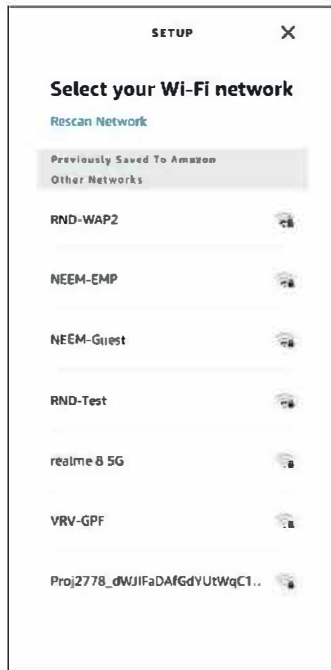


- In this screen, select your home or office Wi-Fi network from the list provided. This will connect your device to your preferred Wi-Fi network.

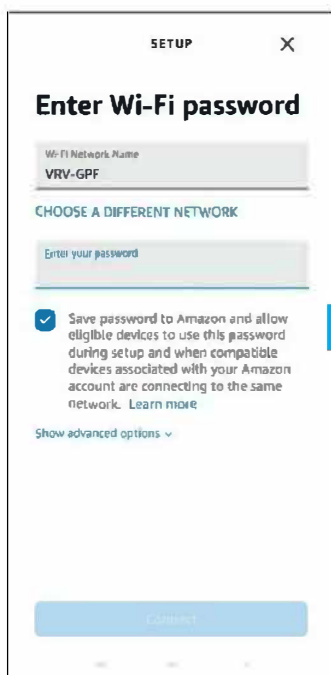


- After choosing a Wi-Fi Network; for example "VRV-GPF", then you'll need to enter the Wi-Fi password.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

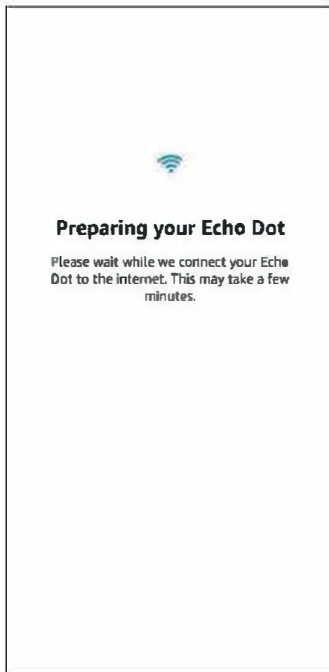


- In the subsequent screen, you will see the "Now preparing your Echo Dot" Message. This process may take a few minutes to complete.

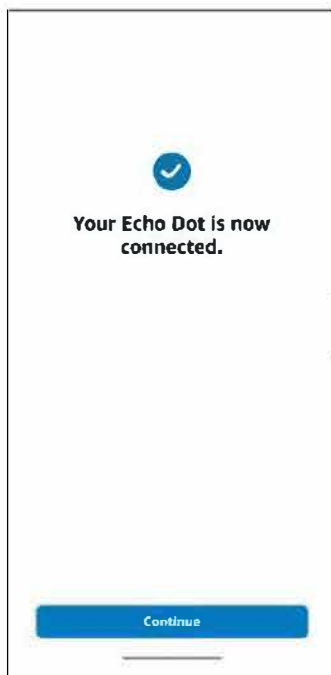


- This screen shows that your echo dot is connected.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

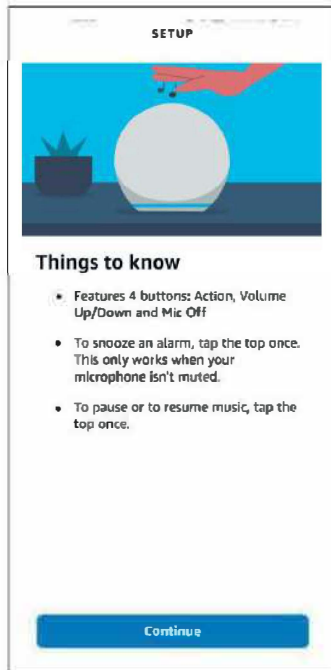


- Here are the functions of the four buttons: Action, Volume Up/Down, and Mic Off. To snooze an alarm, tap the top once. Please note that this only works when your microphone isn't muted. For pausing or resuming music, tap the top once.

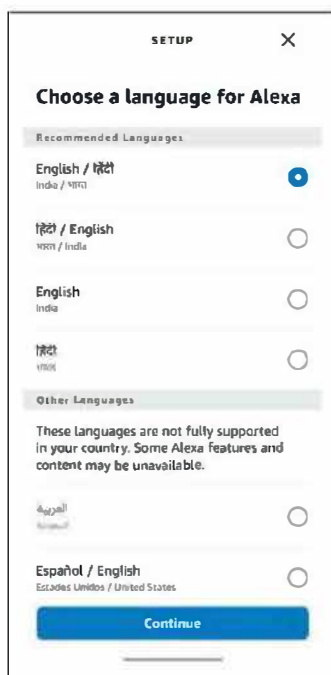


- Select a language for Alexa, and please be aware that some languages mentioned on the screen may not be fully supported.

ALEXA DEVICE SETUP (How to Connect Alexa Speaker with Alexa Mobile App)

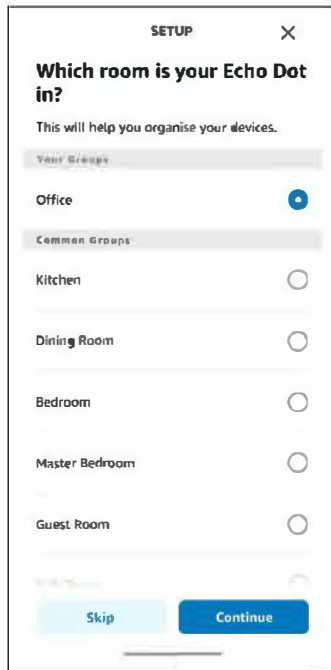


- Indicate the room where your Echo Dot is located. This information is valuable for organizing and managing your device effectively.

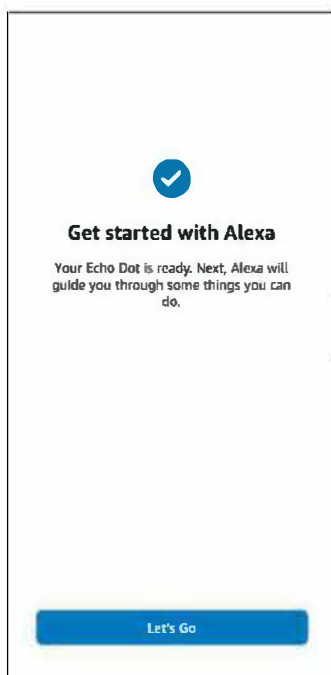

- Once you have successfully connected Alexa to your Wi-Fi, you can now proceed to establish a connection between Alexa and your air conditioner.

ALEXA – AC CONNECTIVITY (How to connect Alexa Speaker with AC Unit)

- User need to follow below steps to connect Alexa Smart Speaker with Alexa Mobile App.

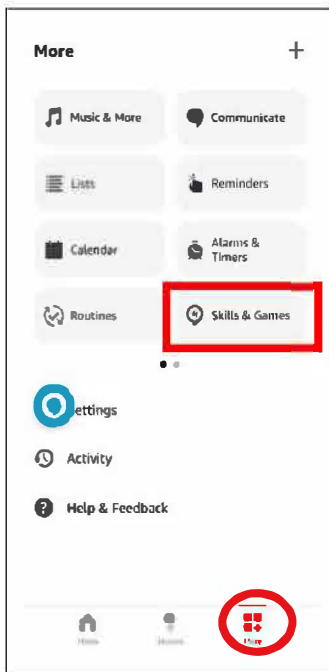


- To connect your AC unit, Please click on 'More' as shown in the screen. And then click on Skills & Games.




- To add Daikin AC Manager 2.0 Skills, search for "Daikin AC Manager 2.0" and tap on it.


ALEXA – AC CONNECTIVITY

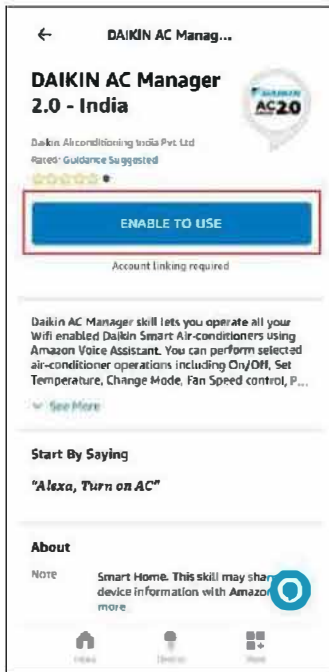

- Tap on “ENABLE TO USE” to add Daikin AC Manager 2.0 skills.

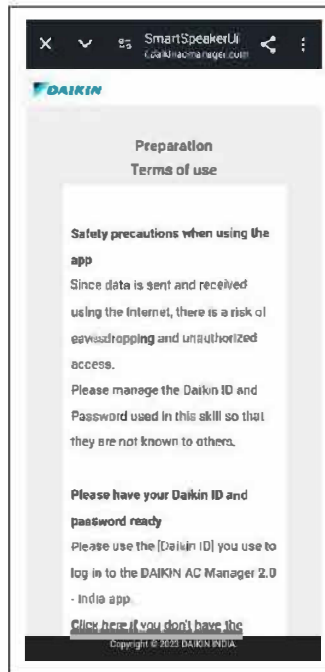


- User can read the Terms of use by scrolling down on this page.

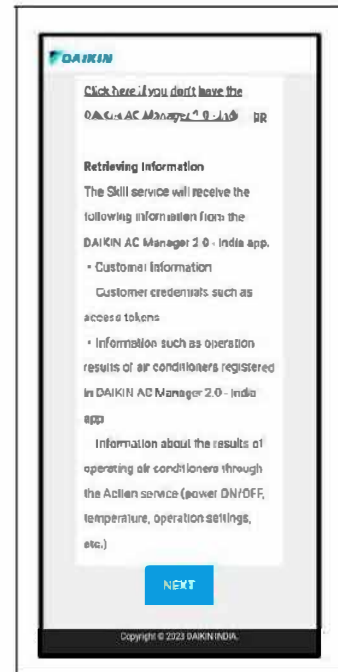

- After reading the Terms of use, Tap Next.

ALEXA – AC CONNECTIVITY

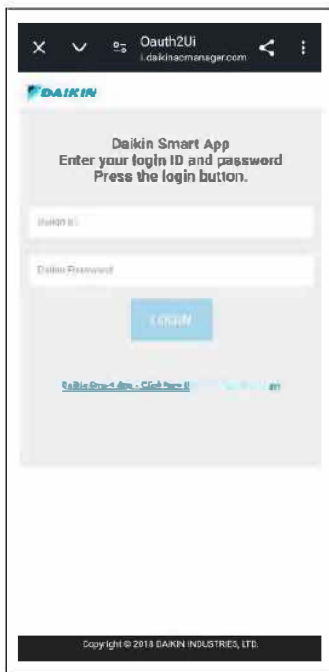

- Enter the login details same as used in Daikin Mobile App. Please mention Mobile no. As +91xxxxxxx.




- This screen indicates that Daikin AC Manager 2.0 skills has been successfully added.




- Please set the device name that you want Alexa to call. User should not keep same location of different devices.

ALEXA – AC CONNECTIVITY

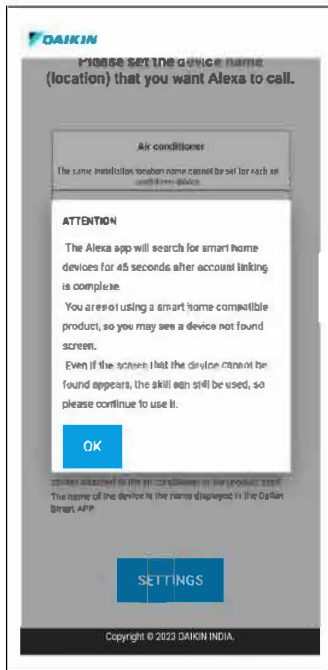


- Please follow the instructions given on the screen and click on 'OK'

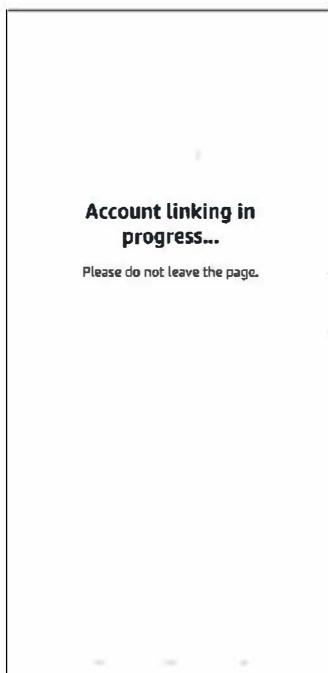


- This screen shows Account linking progress, wait for few seconds.

ALEXA – AC CONNECTIVITY

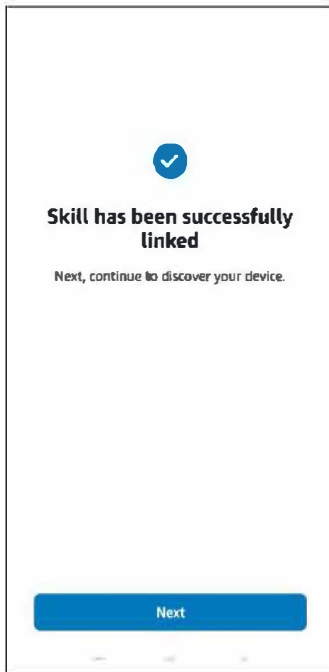


- The skill has been successfully linked. Click on 'Next'

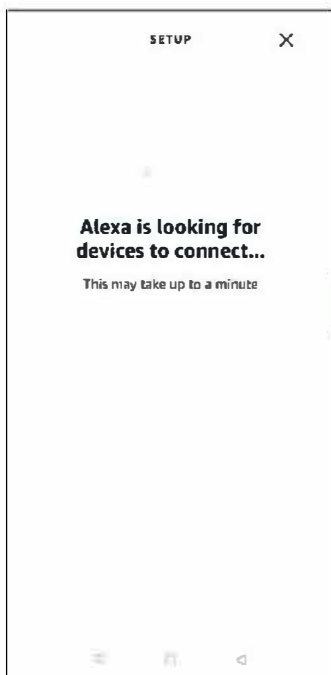

- Alexa is actively searching for devices to establish a connection. Please wait while it looks for available devices

ALEXA – AC CONNECTIVITY

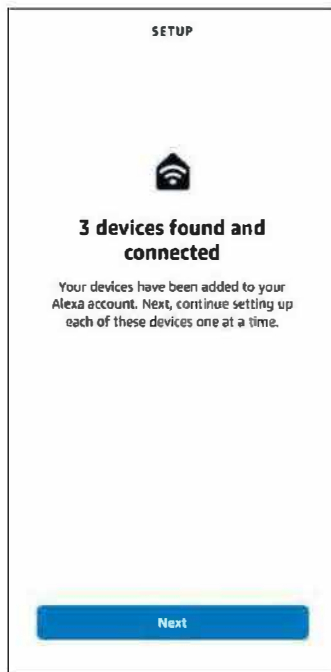

- Now User's AC unit is added to Alexa Account.



- Now user can choose particular device to setup first.

ALEXA – AC CONNECTIVITY

SETUP

Where is your air conditioner?

Add your device to a group so you can control devices together and say things like, "Alexa, turn on the Living Room".

Your Groups

Bedroom

Kitchen

Lab Area

Living room

Office ✓

Skip

Add To Group

- User need to give the location of room, so please Select a particular location and click on " Add on Group"

Setup

✓


DaikinAP00475 added to Office

Now you can refer to this device using room name and device type instead of remembering the device name.

Continue

- Now "Daikin AP00475" is added to office.

ALEXA – AC CONNECTIVITY

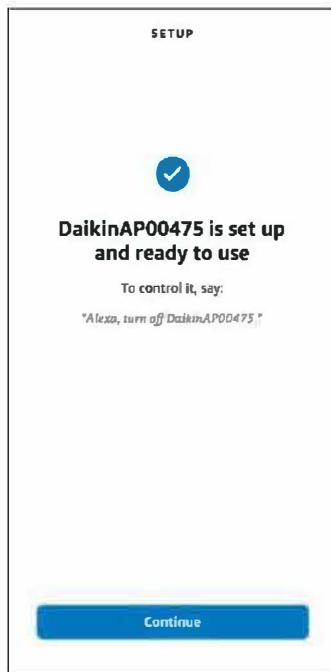


- DaikinAP00475 is set up and ready to use.
To control it, say "Alexa turn on DaikinAP00475"




- User need to come back on Device section, and added device will appear in this section, and click on 'DaikinAP00475'

ALEXA – AC CONNECTIVITY

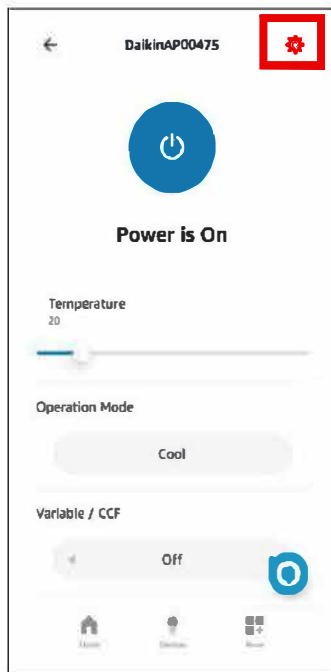

- Click on setting icon and proceed for next step.

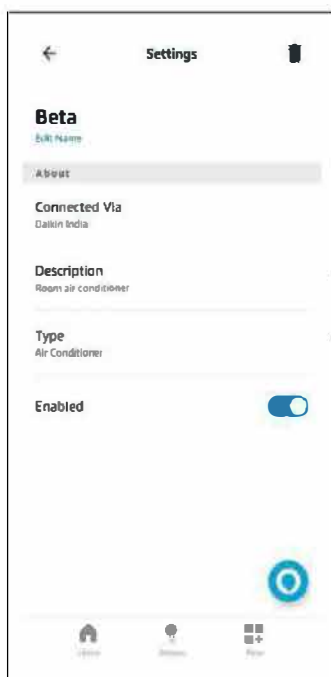

- User can edit device's name according to their own preference, Here for example, Device 'DaikinAP00475' is changed to 'Beta'.

HOW TO PROVIDE COMMAND TO ALEXA - SMART SPEAKER :

ALEXA		
Sr. No.	Feature	Voice Command Statement
In Cool Mode		
1	ON/OFF	Alexa! Turn ON/OFF 'AC name'
2	Operation Mode	Alexa! Set/Change "AC name" to Cool/Dry/Fan
3	Set Temperature	Alexa! Set Temperature to 18/19/20.../32 on "AC name" Alexa! Increase/Decrease Temperature by 1/2/3/.../14 on "AC name"
4	Fan Speed	Alexa! Set Fan Speed to Auto/ Indoor Unit Quiet/ Low/ Medium Low/ Medium/ Medium High/ High on "AC name"
5	Up & Down Swing	Alexa! Turn ON/OFF Up-down flap on "AC name"
6	Right & Left Swing	Alexa! Turn ON/OFF Left-right flap on "AC name"
7	Power Chill	Alexa! Turn ON/OFF Power Chill on "AC name"
8	Coanda	Alexa! Enable/Disable Coanda on "AC name"
9	Dew Clean	Alexa! Turn ON/OFF Dew Clean on "AC name"
In Dry Mode		
1	ON/OFF	Alexa! Turn ON/OFF 'AC name'
2	Operation Mode	Alexa! Set/Change "AC name" to Cool/Dry/Fan
3	Up & Down Swing	Alexa! Turn ON/OFF Up-down flap on "AC name"
4	Right & Left Swing	Alexa! Turn ON/OFF Left-right flap on "AC name"
5	Power Chill	Alexa! Turn ON/OFF Power Chill on "AC name"
6	Coanda	Alexa! Enable/Disable Coanda on "AC name"
7	Dew Clean	Alexa! Turn ON/OFF Dew Clean on "AC name"

HOW TO PROVIDE COMMAND TO ALEXA - SMART SPEAKER :

Sr. No.	Feature	Voice Command Statement
In Fan Mode		
1	ON/OFF	Alexa! Turn ON/OFF 'AC name'
2	Operation Mode	Alexa! Set/Change "AC name" to Cool/Dry/Fan
3	Fan Speed	Alexa! Set Fan Speed to Auto/ Indoor Unit Quiet/ Low/ Medium Low/ Medium/ Medium High/ High on "AC name"
4	Up & Down Swing	Alexa! Turn ON/OFF Up -down flap on "AC name"
5	Right & Left Swing	Alexa! Turn ON/OFF Left -right flap on "AC name"
6	Power Chill	Alexa! Turn ON/OFF Power Chill on "AC name"
7	Coanda	Alexa! Enable/Disable Coanda on "AC name"
8	Streamer	Alexa! Turn ON/OFF Streamer on "AC name"
9	I-Eye Energy Saver	Alexa! Turn ON/OFF Energy Saver on "AC name"
10	I-Eye Auto ON/OFF	Alexa! Turn ON/OFF Auto On/Off on "AC name"
11	Dew Clean	Alexa! Turn ON/OFF Dew Clean on "AC name"
Status Commands		
1	Operation Mode	Alexa! Which Operation Mode is the "AC name" set to?
2	Set Temperature (Not applicable in Dry Mode and Fan Mode)	Alexa! What is the current Set Temperature on "AC name" ?
3	Fan Speed (Not applicable in Dry Mode and Power Chill operation)	Alexa! What is the Fan Speed in "AC name"?
4	Up & Down Swing	Alexa! Is Up -down flap ON in "AC name" ?
5	Right & Left Swing	Alexa! Is Left-right flap ON in "AC name"?
6	Power Chill	Alexa! Is Powerchill ON in "AC name"?
7	Coanda	Alexa! Is Coanda ON in "AC name"?
8	Streamer	Alexa! Is Streamer ON in "AC name"?
9	I-Eye Energy Saver	Alexa! Is Energy Saver ON in "AC name" ?
10	I-Eye Auto ON/OFF	Alexa! Is Auto On/Off ON in "AC name"?
11	Dew Clean	Alexa! Is Dew clean ON in "AC name" ?
12	Outdoor Quiet (Not applicable in Dry Mode and Fan Mode)	Alexa! Is Outdoor Quiet ON in "AC name"?
Note: 1. If AC name is set to 'Bedroom AC' then command will be → Alexa! Turn ON Bedroom AC 2. Voice commands other than the above mentioned voice commands may not work properly. 3. If Smart Speaker doesn't respond, Please re-check the above setup process or internet connection.		

DAIKIN AC MANAGER 2.0

SMART SPEAKER – Google Home



Google Home

INDEX

1. Google Home App	116-119
2. How to Connect Google Home App and Google Home Speaker	120-123
3. How to Connect Google Home Smart Speaker and Daikin Smart App	124-131
4. How to Provide Command to Google Home - Smart Speaker	132-133



GOOGLE HOME APP

1. Download the App:

- Download and install the Google Home App from Google Play Store(Android OS) or iOS App Store.

2. Open the App:

- Once the app is installed, tap on the app icon to open it.

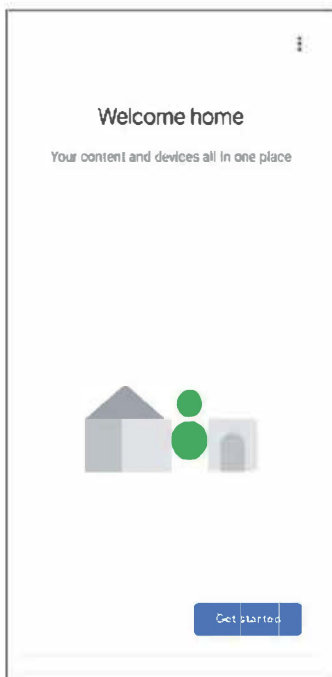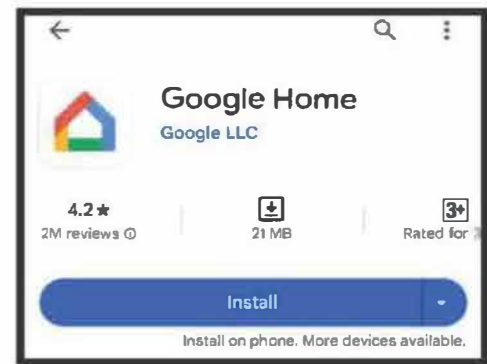


- After tapping the app icon, you'll encounter this screen. Proceed to the next step by clicking on "Get started".




- User will get important notifications from this app, this setting can be change at any time later, click on 'Next'.

GOOGLE HOME APP

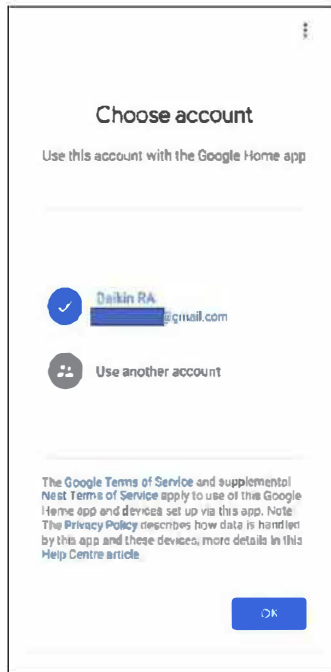


- Select the email address user would like to use for logging in, or click on 'Use another account'.

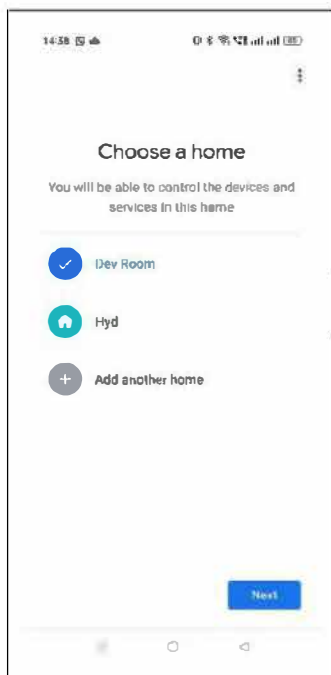


- Select the location where you want to control your devices, and click on 'Next'.

GOOGLE HOME APP

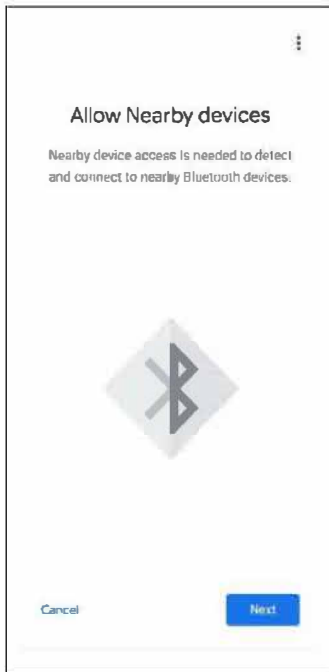


- Proceed with this instruction, and Click 'Next'.

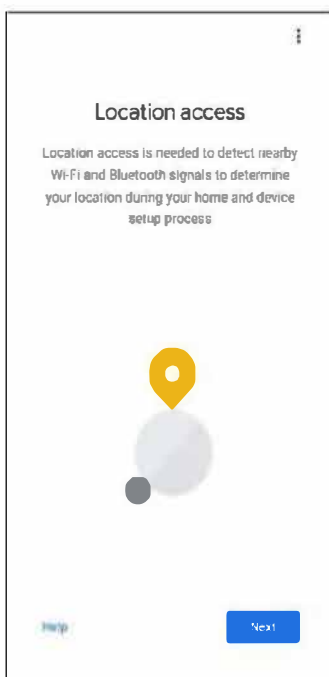


- Grant location access to allow detection of Wi-Fi and Bluetooth signals for the device setup process, and click 'Next'.

GOOGLE HOME APP

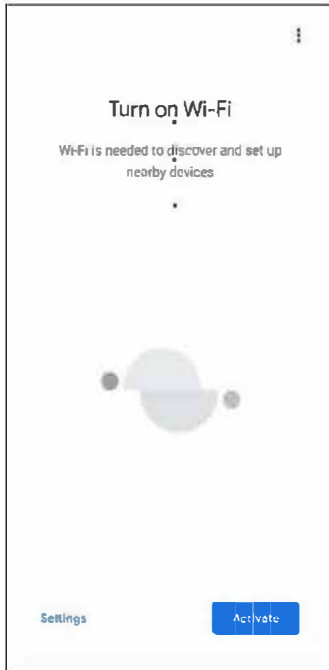


- Proceed according to screen, and click on the 'Activate'

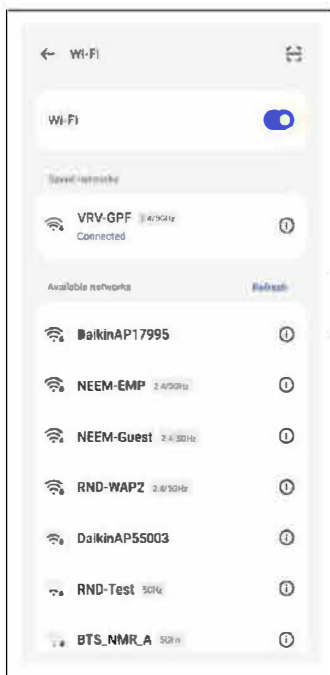


- Select the Wi-Fi, and Proceed next.

GOOGLE HOME APP + GOOGLE HOME SMART SPEAKER

- User needs to follow the below steps to connect with the Google Home Smart Speaker with the Home Router.

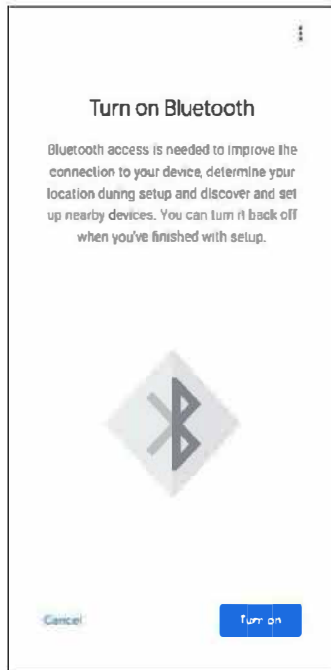


- User need to turn on their Bluetooth, and click on 'turn on'.

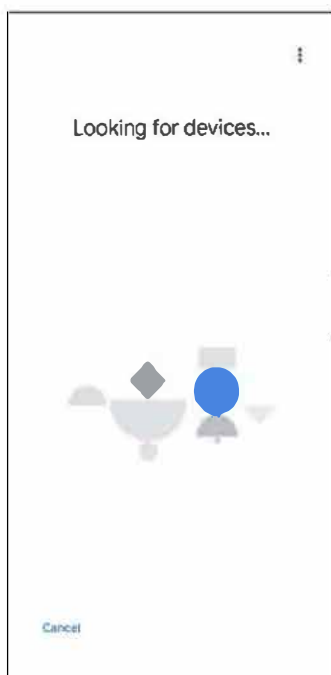


- Proceed according to screen and ensure that your Google Nest Device is plugged in.

GOOGLE HOME APP + GOOGLE HOME SMART SPEAKER

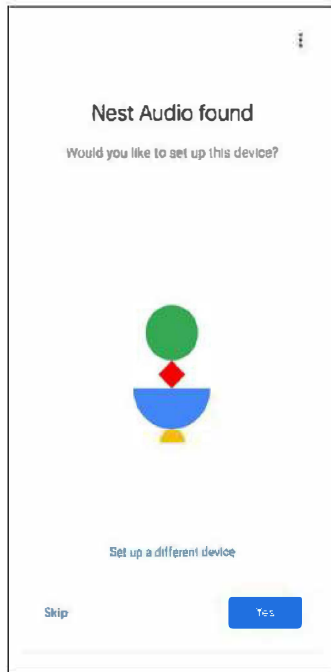


- After few seconds Google Home will find the Nest Audio, and this screen appears.

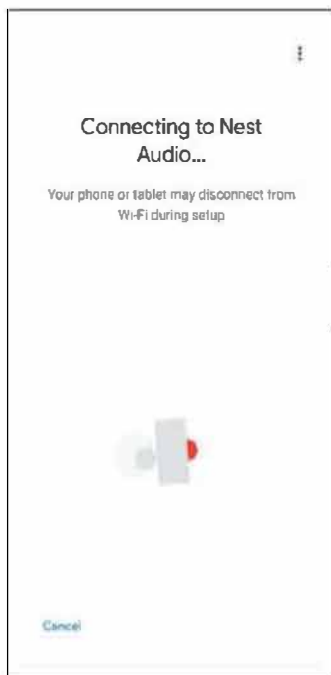


- This screen will appear at the time of connecting.

GOOGLE HOME APP + GOOGLE HOME SMART SPEAKER

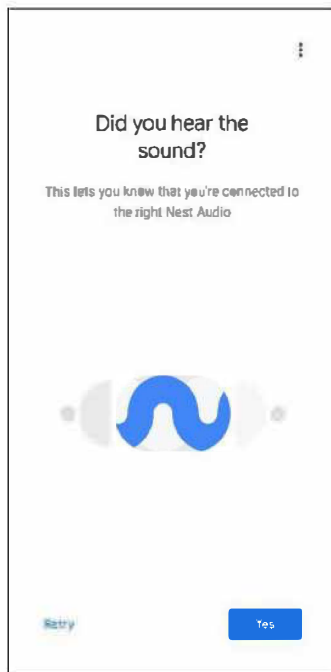


- Just after connection, user will hear sound it is indication that you are connected with right Nest Audio Device if it is right then click 'Yes'.

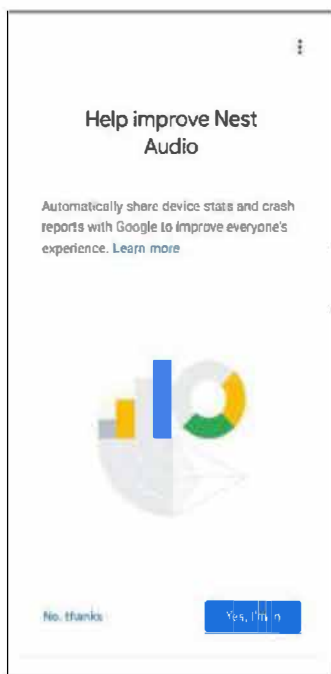

- Proceed according to the screen, and click 'Yes, I'm in'.

GOOGLE HOME APP + GOOGLE HOME SMART SPEAKER

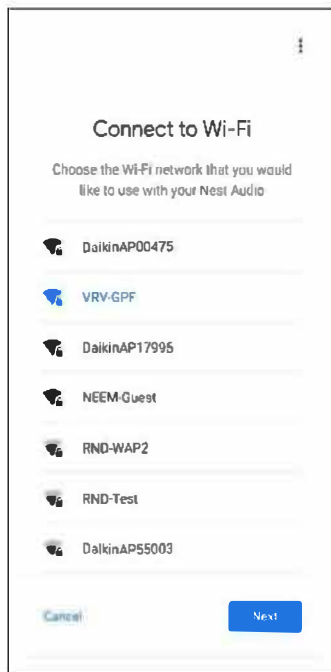


- User need to choose the Wi-Fi network that they would like to use with Smart Speaker. User can choose from the list for example, VRV-GPF and click on 'Next'.



- User need to enter the Wi-Fi password and proceed to next step click on 'Next'.

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP

- User needs to follow the below steps to connect with the Google Home Smart Speaker with the Daikin Mobile App.

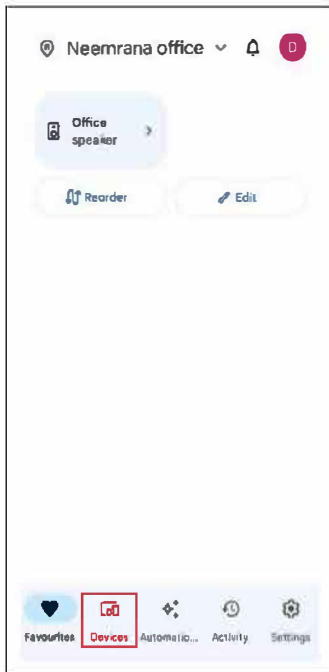


- Select the 'Device' option as shown in the screen.




- Click on '+ Add' to add the devices like Speakers, AC units etc.

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP

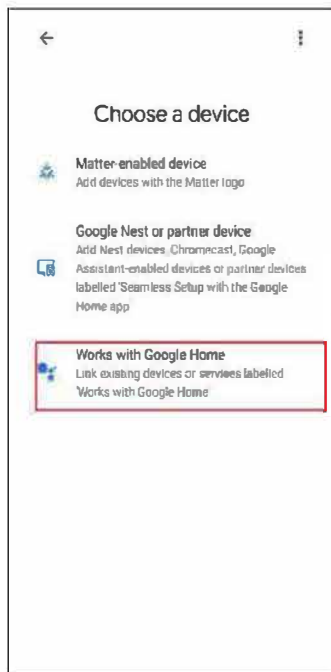

- Select the 'Work with Google Home' option as shown in the screen.

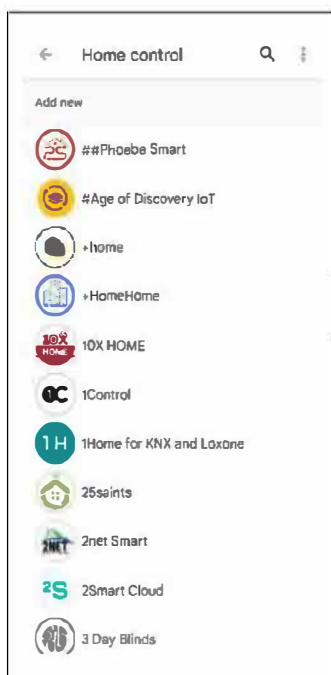


- This is Home Control of GoogleHome. Search "Daikin AC Manager 2.0 - India" here to add Daikin AC Manager 2.0 skills.

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP




- Select the "Daikin AC Manager 2.0 – India" and proceed next

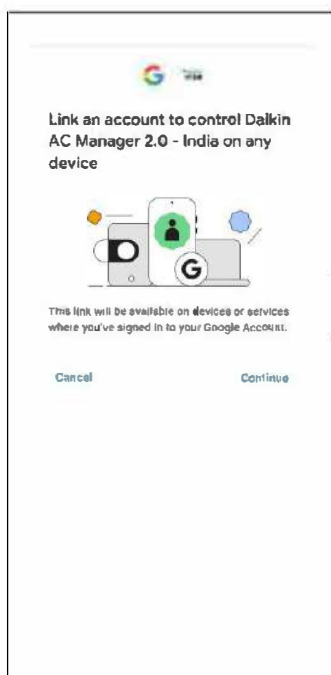


- Click on 'Continue', and proceed to Next Step.


GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP

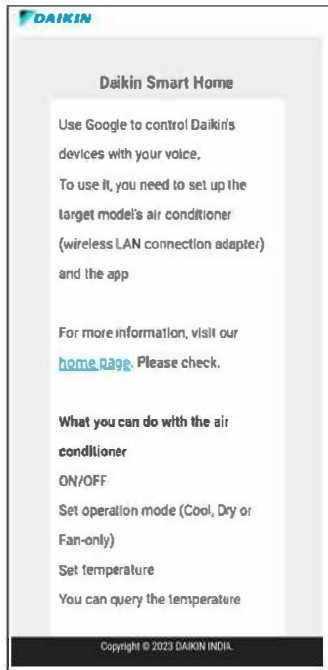


- User will be re-directed to this page, go through the instructions and scroll down button.

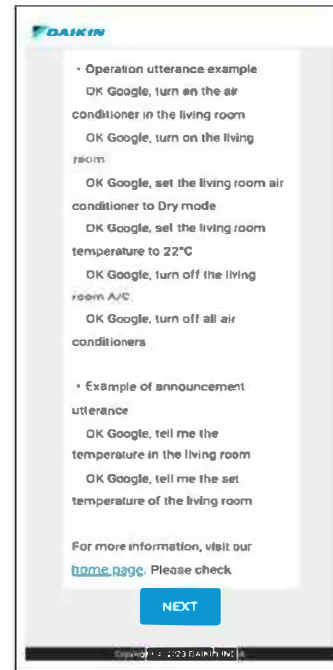

- After reading the instructions and tap 'Next'

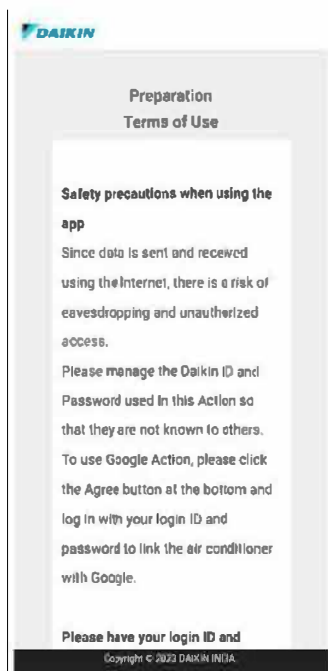

- This screen shows Safety Precautions when using the App, go through this and click on ' I AGREE TO THE TERMS OF USE'

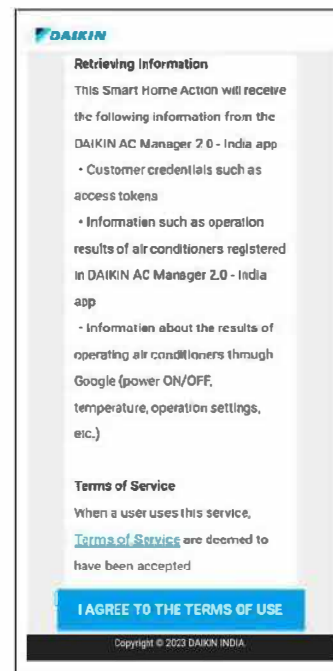

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP

iscmanager.com

DAIKIN

Daikin Smart App
Enter your login ID and password
Press the login button.

By signing in, you are authorizing Google to control your device.

Email ID

Email Password

LOGIN

[Daikin Smart App... Click here if you don't have an app](#)

Copyright © 2018 DAIKIN INDIA/STRES, LTD.

- Enter the login details same as used in Daikin AC Manager 2.0 App. Click on 'LOGIN'.

iacmanager.com

DAIKIN

Please set the name (installation location)
to be called to Google.

Air conditioner
The given installation ID, name, and location will be used to connect the air conditioner device.

SSID DaikinAP040003

device name DaikinAP040003

Location Living room


ADD DEVICE(S)

For the SSID, refer to the instruction manual attached to the air conditioner.
If there is no label on the cover, please refer to the SSID sticker attached to the air conditioner or the product itself.
The name of the device is the name displayed in the Daikin AC Manager 2.0 India app.


Copyright © 2023 DAIKIN INDIA

- Please set the Name and location of unit to be called to Google, and click on 'SETTINGS'.

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP

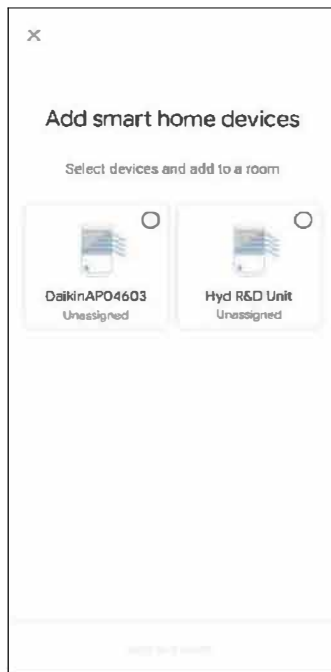

- Choose the devices that needed to add in room and click on 'Add to a room'.

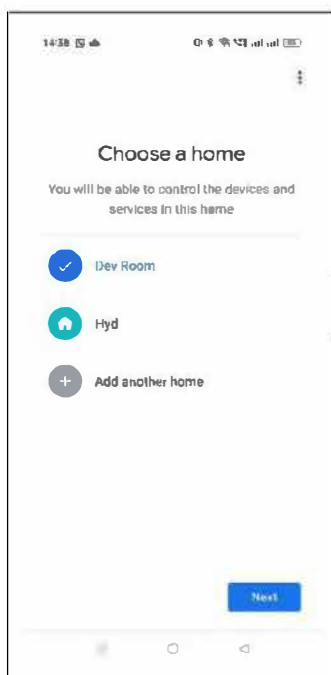

- The user should select the location Where the unit (or) device will be Installed and then click 'NEXT'

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP



- This screen will appear in the device section after adding different units .
- To change the name of any unit, click on the unit.




- User need to click on setting and proceed to next.

GOOGLE HOME SMART SPEAKER + DAIKIN SMART APP



- User need to click on 'name' and proceed to change name.

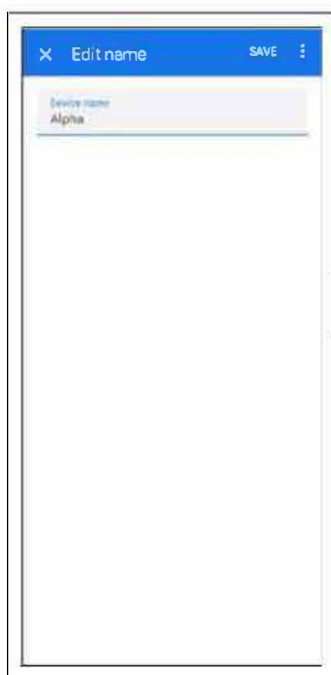

- This screen appear for name change of unit. Once name changed user should say "Okay Google" Turn on Alpha" then Unit referring Alpha will be on.

HOW TO PROVIDE COMMAND TO GOOGLE HOME - SMART SPEAKER

GOOGLE HOME		
Sr. No.	Feature	Voice Command Statement
In Cool Mode		
1	ON/OFF	OK Google! Turn ON/OFF "AC name" AC
2	Operation Mode	OK Google! Set/Change "AC name" AC to Cool/Dry/Fan
3	Set Temperature	OK Google! Set Temperature to 18/19/20/.../32 on "AC name" AC
		Increase/Decrease temperature by 1/2/3/.../14 on "AC name" AC
4	Fan Speed	OK Google! Set Fan Speed to Auto/ Indoor Unit Quiet/ Low/ Middle Low/ Middle/ Middle High/ High on "AC name" AC
5	Up & Down Swing	OK Google! Turn ON/OFF Up-down flap on "AC name" AC
6	Right & Left Swing	OK Google! Turn ON/OFF Left-right swing on "AC name" AC
7	Dew Clean	OK Google! Turn ON/OFF Dew Clean on "AC name" AC
In Dry Mode		
1	ON/OFF	OK Google! Turn ON/OFF "AC name" AC
2	Operation Mode	OK Google! Set/Change "AC name" AC to Cool/Dry/Fan
3	Up & Down Swing	OK Google! Turn ON/OFF Up-down flap on "AC name" AC
4	Right & Left Swing	OK Google! Turn ON/OFF Left-right swing on "AC name" AC
5	Dew Clean	OK Google! Turn ON/OFF Dew Clean on "AC name" AC

HOW TO PROVIDE COMMAND TO GOOGLE HOME - SMART SPEAKER

Sr. No.	Feature	Voice Command Statement
In Fan Mode		
1	ON/OFF	OK Google! Turn ON/OFF "AC name" AC
2	Operation Mode	OK Google! Set/Change "AC name" AC to Cool/Dry/Fan
3	Fan Speed	OK Google! Set Fan Speed to Auto/ Indoor Unit Quiet/ Low/ Middle Low/ Middle/ Middle High/ High on "AC name" AC
4	Up & Down Swing	OK Google! Turn ON/OFF Up-down flap on "AC name" AC
5	Right & Left Swing	OK Google! Turn ON/OFF Left-right swing on "AC name" AC
6	Dew Clean	OK Google! Turn ON/OFF Dew Clean on "AC name" AC
Status Commands		
1	ON/OFF	OK Google! Is the "AC name" AC Turned ON?
2	Operation Mode	OK Google! Which Mode is the "AC name" AC set to?
3	Set Temperature (Not applicable in Dry Mode and Fan Mode)	OK Google! What is the current Set Temperature on "AC name" AC?
4	Fan Speed (Not applicable in Dry Mode and Power Chill operation)	OK Google! What is the current Fan Speed in "AC name" AC?
5	Up & Down Swing	OK Google! What is the current status of Up-down flap on "AC name" AC
6	Right & Left Swing	OK Google! What is the status of Left-right flap on "AC name" AC
7	Dew Clean	OK Google! What is the current status of Dew clean on "AC name" AC
Note:		
1. If AC name is set to 'Bedroom' then command will be → OK Google! Turn ON Bedroom AC		
2. Voice commands other than the above mentioned voice commands may not work properly.		
3. If Smart Speaker doesn't respond, Please re-check the above setup process or internet connection.		



DAIKIN AIRCONDITIONING INDIA PVT. LTD.

210, 1st FLOOR, OKHLA INDUSTRIAL AREA, PHASE 3, DELHI-110020

PROTECT THE ENVIRONMENT FROM E-WASTE (GUIDELINES)

Meaning of E-waste under E-Waste (Management) Rules,2022 (E-waste Rules)
-Waste electrical and electronic equipment, whole or in part of reject from their manufacturing and repair process, which are intended to be discarded.

Our product is RoHS compliant.




Don't dump Electrical and Electronic Products in Garbage Bins

DO'S & DONT'S

DO'S	
Run and maintain the air conditioner as per the instructions given in the operation / instruction manual	✓
Ensure that an authorised person repairs your air conditioner	✓
Call our local authorised dealer or our toll free number to dispose your air conditioner	✓
Contact an authorised dealer in case of installation or de-installation	✓
Consult our local authorised dealer or our toll free number on the life span of the air conditioner	✓

DONT'S	
Do not try to repair your air conditioner on your own	✗
Do not sell or dispose your air conditioner or parts to an unauthorised Kabbadi wala / Scrap Dealer / Ragpickers	✗
Do not dismantle your air conditioner on your own	✗
Do not get your air conditioner or any parts repaired by an unauthorised person	✗
Do not dispose off the E-waste in landfills	✗
Do not use the air conditioner as furniture after its use	✗

Customer Contact Center : 011-4031 9300/1860-180-3900
For further information visit us at www.daikinindia.com

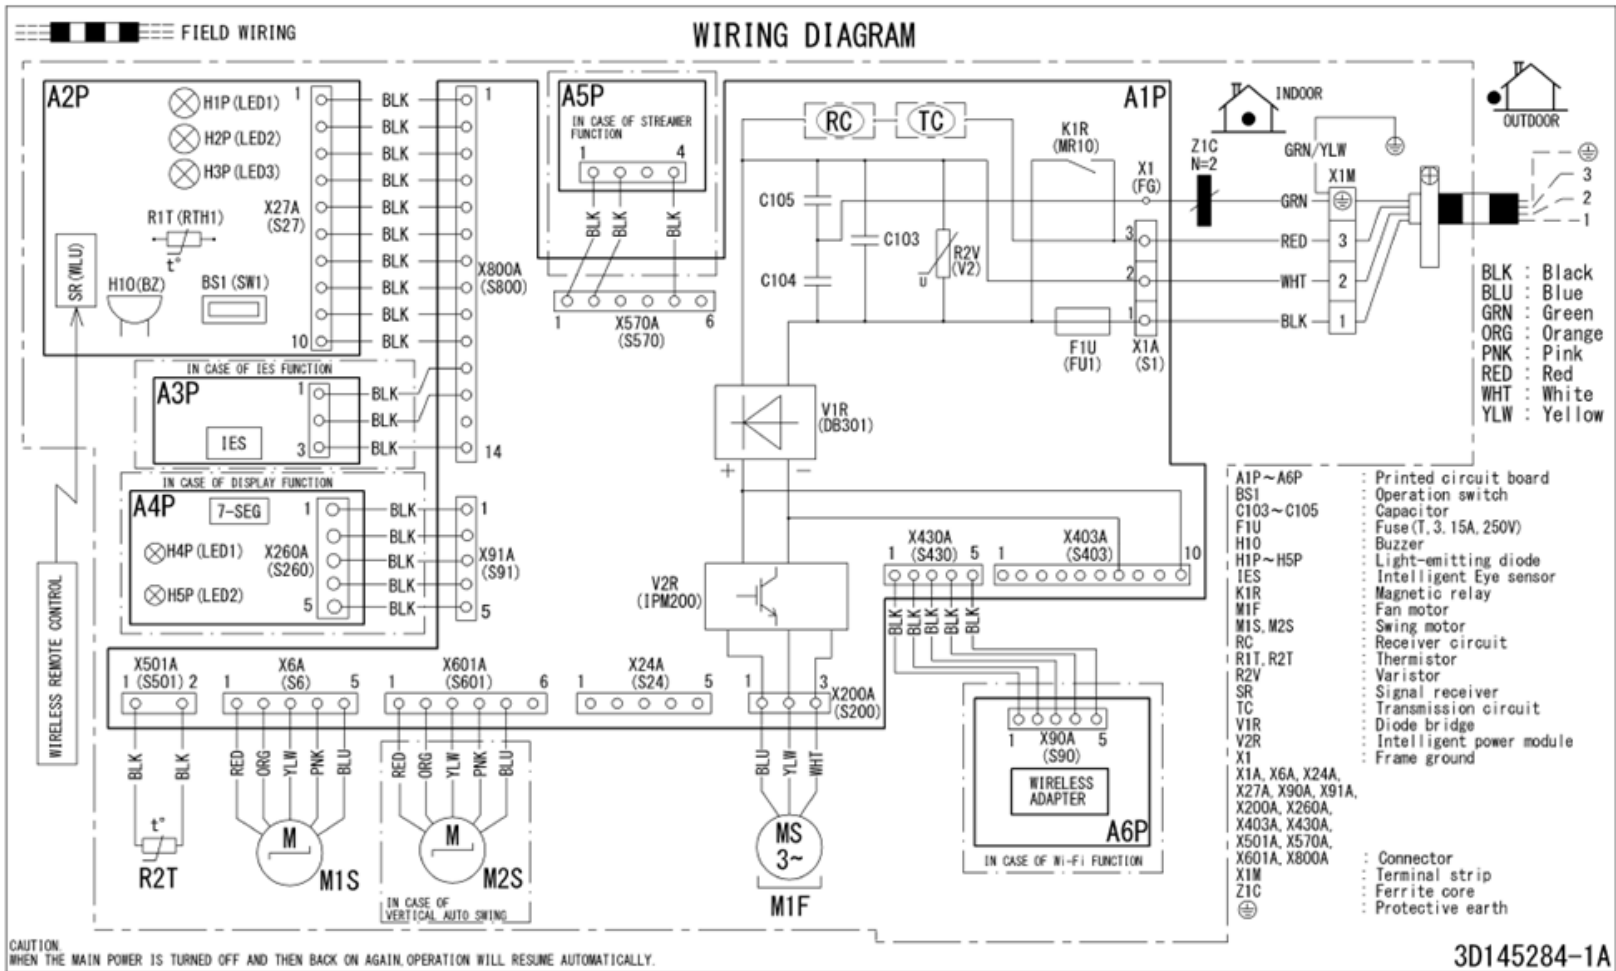

Applicable Model- FTKR35XV16VAA


CAUTIONS

《 CONCERNING HANDLING OF HIGH VOLTAGE PARTS 》

DO NOT TOUCH THE CHARGED PARTS FOR 10 MINUTES
AFTER THE SAFETY BREAKER IS TURNED OFF,
BECAUSE OF THE DANGER OF HIGH VOLTAGE

3P699384-3D

WIRING DIAGRAM

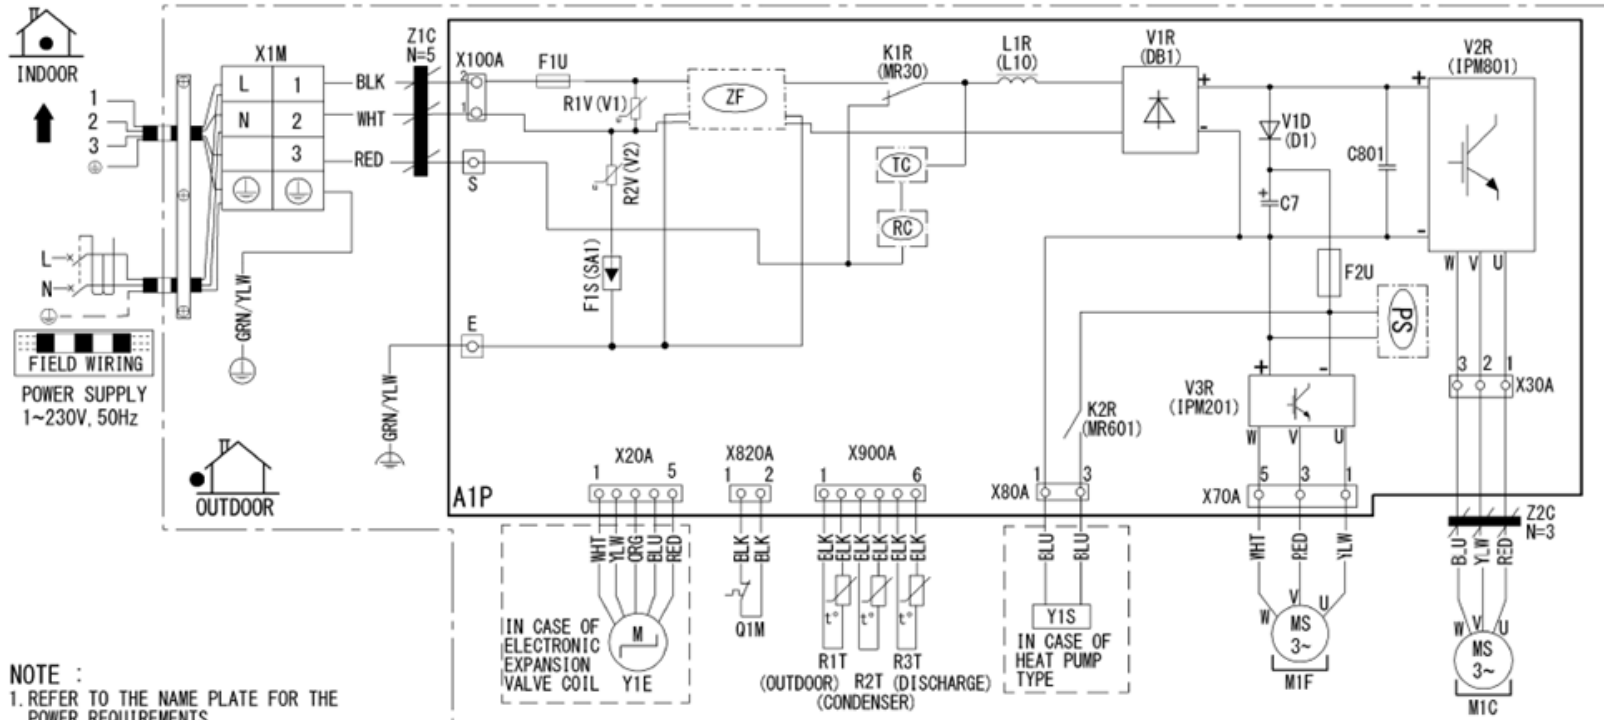

NOTE :

1. REFER TO THE NAME PLATE FOR THE POWER REQUIREMENTS.

A1P : PRINTED CIRCUIT BOARD
C7, C801 : CAPACITOR
F1U, F2U : FUSE
F1S : SURGE ABSORBER
K1R, K2R : MAGNETIC RELAY
L : LINE
L1R : REACTOR
M1C : COMPRESSOR MOTOR
M1F : FAN MOTOR

N : NEUTRAL
PS : SWITCHING POWER SUPPLY
Q1M : THERMAL PROTECTOR
RC : RECEIVER CIRCUIT
R1T, R2T, R3T : THERMISTOR
R1V, R2V : VARISTOR
TC : TRANSMISSION CIRCUIT
V1D : DIODE
V1R : DIODE BRIDGE
V2R, V3R : INTELLIGENT POWER MODULE

X20A, X30A, X70A, X80A, X100A, X820A : CONNECTOR
X1M : TERMINAL BLOCK
Y1E : ELECTRONIC EXPANSION VALVE COIL
Y1S : REVERSING SOLENOID VALVE COIL
Z1C, Z2C : FERRITE CORE
ZF : NOISE FILTER
⊕ : PROTECTIVE EARTH
⊖ : NOISELESS EARTH

3D150723-1

NOTES

1. SIZE : LENGTH 105 × WIDTH 185
2. REFER TO PURCHASING SPECIFICATION AS (Y)303002, UNLESS OTHERWISE SPECIFIED.
3. THIS DRAWING WAS DRAWN ON CAD SYSTEM.
4. INDICATION OF DEVICE NUMBER ARE INDICATE ACTUAL ON PCB WILL BE MENTION IN BRACKET (EX. R1V(V1), V1R(DB1) ETC.
5. GRAPHICAL SYMBOLS ARE REFER FROM STANDARD GAZ007-X.


Applicable Model-RKR35XV16VAA

CAUTIONS

< CONCERNING HANDLING OF HIGH VOLTAGE PARTS >

DO NOT TOUCH THE CHARGED PARTS FOR 10 MINUTES
AFTER THE SAFETY BREAKER IS TURNED OFF.
BECAUSE OF THE DANGER OF HIGH VOLTAGE

3P699384-3D

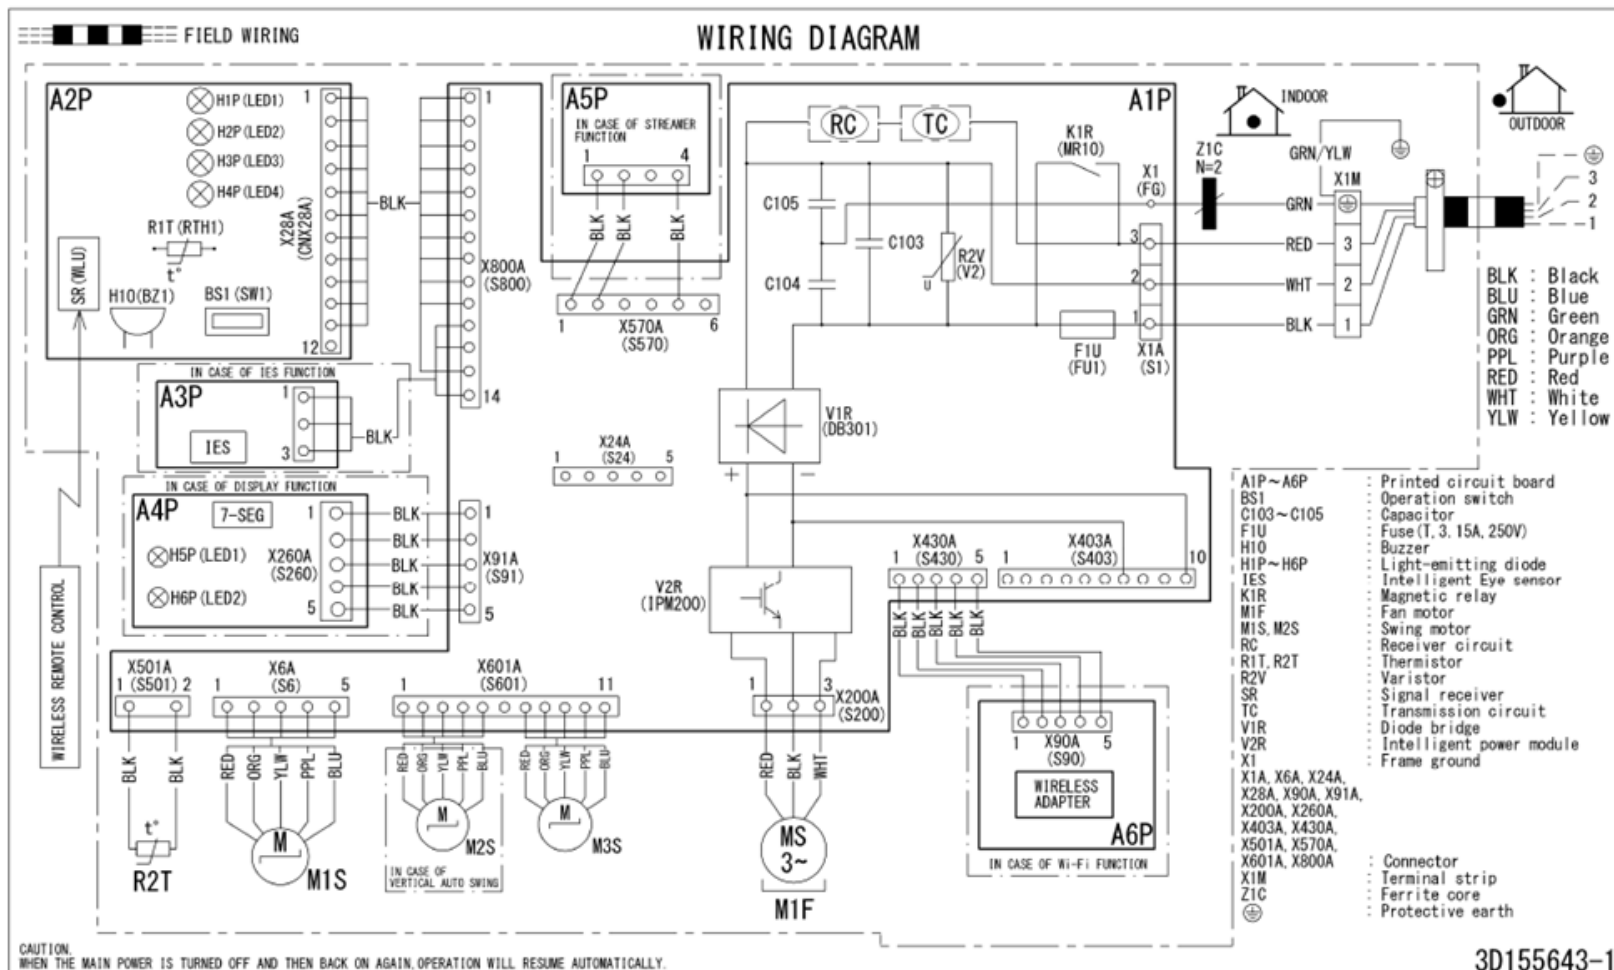

Applicable Model-FTKR50XV16MKA, FTKR60XV16MAA


CAUTIONS

(CONCERNING HANDLING OF HIGH VOLTAGE PARTS)

DO NOT TOUCH THE CHARGED PARTS FOR 10 MINUTES
AFTER THE SAFETY BREAKER IS TURNED OFF,
BECAUSE OF THE DANGER OF HIGH VOLTAGE

3P699384-3D

WIRING DIAGRAM

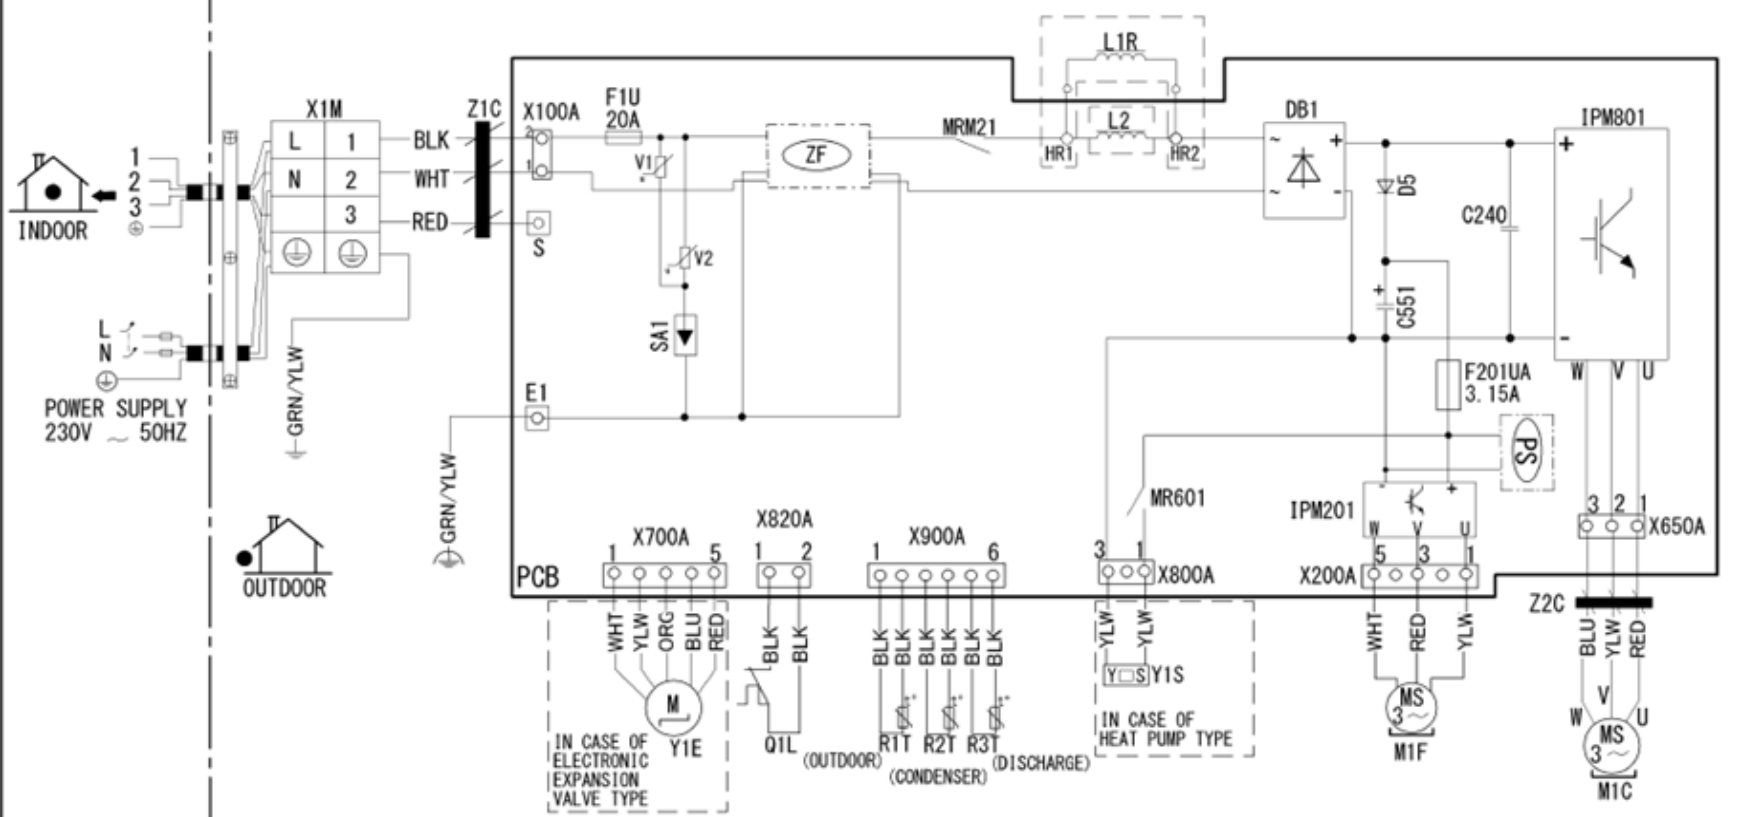

NOTE
1. REFER TO THE NAME PLATE FOR THE POWER REQUIREMENTS.

C240, C551 : CAPACITOR
DB1 : DIODE BRIDGE
D5 : DIODE
F1U, F201UA : FUSE
IPM201, IPM801 : INTELLIGENT POWER MODULE
L : LINE
L2 : IN CASE OF ON-BOARD REACTOR
L1R : IN CASE OF OUTSIDE REACTOR


M1C : COMPRESSOR MOTOR
MRM21, MR601 : MAGNETIC RELAY
M1F : FAN MOTOR
N : NEUTRAL
PCB : PRINTED CIRCUIT BOARD
PS : SWITCHING POWER SUPPLY
Q1L : OVERLOAD PROTECTOR
R1T, R2T, R3T : THERMISTOR
SA1 : SURGE ARRESTOR
E1, S, X100A, X200A, X650A, X700A, X800A, X820A, X900A, HR1, HR2 : CONNECTOR

V1, V2 : VARISTOR
X1M : TERMINAL STRIP
Y1E : ELECTRONIC EXPANSION VALVE COIL
Y1S : REVERSING SOLENOID VALVE COIL
Z1C, Z2C : FERRITE CORE
ZF : NOISE FILTER
⊕ : PROTECTIVE EARTH
⊕ : EARTH
⊕ : NOISELESS EARTH

3D146912-1

NOTES
1. SIZE: LENGTH 105mm X WIDTH 185mm
2. REFER TO PURCHASING SPECIFICATION AS (Y)303002, UNLESS OTHERWISE SPECIFIED.
3. THIS DRAWING DRAWN ON CAD SYSTEM
4. GRAPHICAL SYMBOLS ARE REFERRED FROM STANDARD GA2007-X

Applicable Model-RKR50XV16MKA

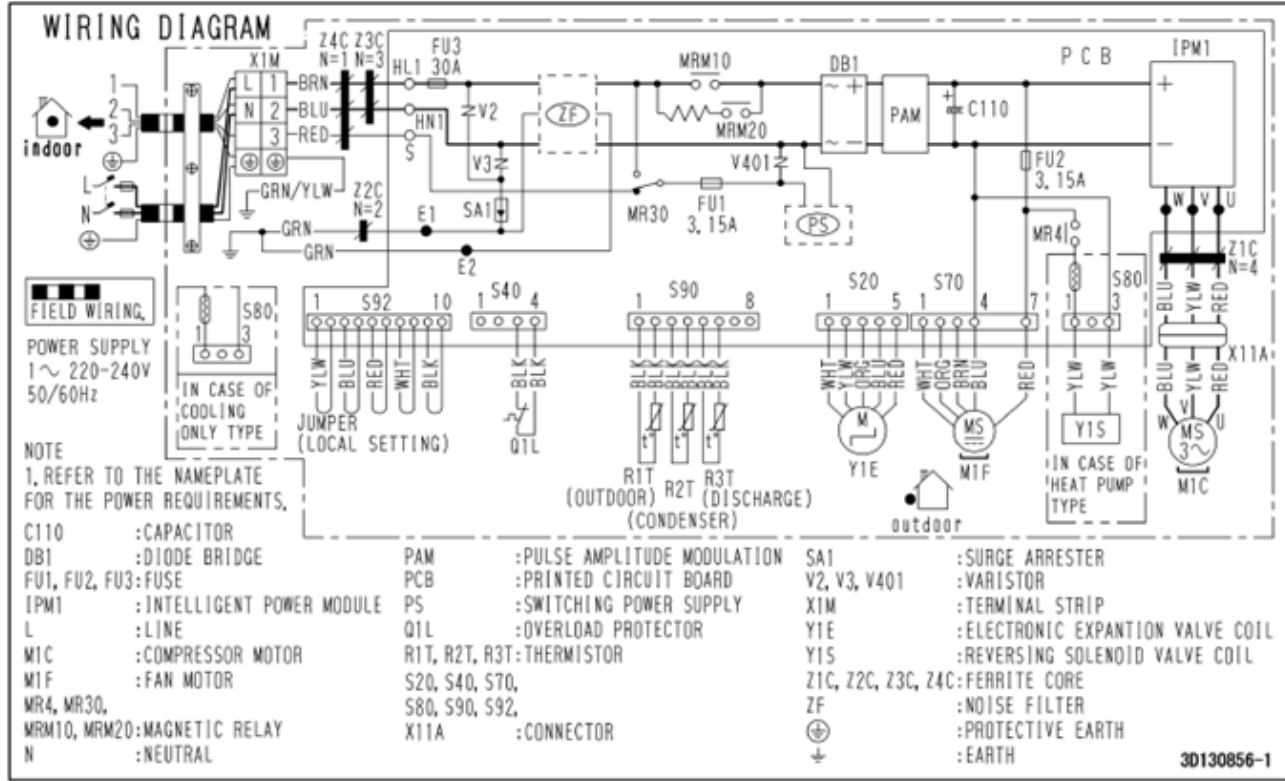

NOTES

- 1.SIZE:LENGTH 140X WIDTH 230
- 2.REFER TO PURCHASING SPECIFICATION AS(Y)303002.UNLESS OTHER SPECIFIED
- 3.THIS DRAWING WAS DRAWN ON CAD SYSTEM.
- 4.LETTER TYPE:PERMISSION TO USE GOTHIC TYPE.