



# Technical Manual

## DEEP FREEZER



### HARD TOP DEEP FREEZER

RCHT20SDASV16  
RCHT35DDARV16  
RCHT45DDARV16  
RCHT55DDARV16

3P834610-1

## USER MANUAL

### CONTENTS

1. Nomenclature .....	3
2. Specification.....	3
3. Instructions .....	4
4. Safety Recommendations .....	5
5. Operation of Unit.....	8
6. Control Panel .....	9
7. Handling .....	10
8. Installation and use of Freezer.....	11
9. Electrical Control - Wiring Diagram.....	12
10. Check, Regulation & Adjustments .....	12
11. Wiring and Safety Devices .....	12
12. Maintenance and Repairs .....	13
13. Routine Maintenance .....	13
14. Trouble Shootings .....	14
15. E-Waste Guideline.....	14

## 1. Nomenclature

R	C	H	T	3	5	D	D	A	R	V	1	6
1	2	3	4	5	6	7	8	9	10	11	12	13

Digit	Description
1	R - Refrigeration
2	S - Standard Cooler (0 °C to + 8 °C) F - Freezer Only (-31 °C to + 7 °C) C - Convertible (-20 °C to + 6 °C) CB - Combi Cooler & Freezer (Freezer -20°C to -15°C, Cooler 0° to +7°C)
3 & 4	HT - Hard Top GT - Glass Top VC - Visi Cooler
5 & 6	Gross Volume (35*10 = 350 litre)
7 & 8	DD - Double Door SD - Single Door GT - Glass Top
9	A- Major Design Category (Progress according to design change)
10	R/S - Minor Design Category (Progress according to design change)
11 & 12	Power Supply V1 - 1ph / 50Hz / 230 V
13	6 - India

## 2. Specification

Model no.	RCHT20SDASV16	RCHT35DDARV16	RCHT45DDARV16	RCHT55DDARV16
Net Unit Dimension (W*D*H mm)	815 X 720 X 845	1105 X 720 X 845	1395 X 720 X 845	1685 X 720 X 845
Storage Volume (Ltr)	210	309	411	513
No of Doors	1	2	2	2
Refrigerant Type	R-600a	R-290	R-290	R-290
Temperature Range	Freezer -23 °C to +5 °C Cooler 0 °C to +7 °C	Freezer -23 °C to +5 °C Cooler 0 °C to +10 °C	Freezer -23 °C to +5 °C Cooler 0 °C to +10 °C	Freezer -23 °C to +5 °C Cooler 0 °C to +10 °C
Puff Thickness (mm)	60	60	60	60
Gross (Packed) Dimension (W*D*H mm)	885 X 760 X 900	1175 X 770 X 895	1460 X 770 X 895	1750 X 770 X 895



### **3. Instructions**

Thank you for choosing Daikin Product.

Please read these instructions carefully. They provide details and advice on the correct method of installing, using and maintaining this unit, in order to obtain maximum reliability, efficiency and long life.

Technical specifications are subject to change without notice.

#### **Limitation of liability**

All the details in this manual are compiled in consideration of the standards and legal regulations applicable at this time, as well as the experience of the manufacturer and qualified staff. The manufacturer accepts no liability for damage to persons or property (devices, goods, etc.) resulting from:

- Non-observance of the manual and the regulations/safety instructions contained therein.
- Failure to comply with the local safety regulations.
- Inappropriate use (foreseeable misuse).
- Use of unauthorized and non-trained staff.
- Unauthorized equipment conversions and technical modifications by the operator himself.
- Use of spare parts not approved by the manufacturer.
- Failure of the power supply or electro technical safety devices.
- Typesetting and print errors.

Failure to observe the above points will invalidate the warranty claims.

The contractual obligations agreed to under the contract, the general terms and conditions of sale and delivery of the “Daikin Air conditioning India Private Limited” and the statutory provisions applicable at the conclusion of the contract apply.

Technical specifications are subject to change without notice.

The local commercial law regulations and safety regulations/provisions and the essential health and safety requirements of the device apply.

#### **Intended use**

Depending on the series, the device is suitable for the storage of packaged cooled or packaged deep-frozen food products.

The operator is responsible for the correct operation of the devices.

Operate the device in a stable operating position (horizontal alignment).

Operate the device only mounted on the Feet.

Operate the device only with a provided Cover.

Danger from foreseeable misuse

- No technical modifications may be made to the device.
- Steam or high-pressure cleaners may not be used for basic cleaning.
- Do not store explosive substances, e.g. aerosol containers with flammable propellant gas, in this device.
- The device may only be operated if all the required safety devices are present and fully functional.

**Material and property damage from foreseeable misuse.**

- Regularly check that the device is in good condition. Damage must be repaired immediately.
- Before storing the goods and during operation, the temperature must be checked for correctness.
- Stored goods must be checked by the operator in the case of power failure (temperature control).
- Check regularly for foreign objects in the goods area. Incorrectly stored goods must be removed immediately.
- Regularly check that the top cover is closed.
- Operation of a device with damaged cover / element (crack, fracture, breakage) is no longer possible.
- Remove goods from the damaged device and rearrange in a functional device with the same product
- Switch off the damaged device after removing the goods.
- Contact the maintenance service.
- Do not apply stickers or film to the surfaces.
- Observe the minimum distances to the boundary walls and to other devices to avoid hindrance to air.
- Do not use the cover as storage place for diverse objects.

**4. Safety recommendations**

When installing and using the unit please follow the recommendations listed below.

- Installation shall be carried out in strict compliance with the diagrams and instructions supplied by the manufacturer.
- Damages due to improper connections are excluded.
- The electric system available where the unit is installed shall meet the relevant standards in force.

- Maintenance shall be effected by trained personnel or by the manufacturer.
- Only staff trained in handling combustible refrigerants may perform work on the refrigerant circuit of R-290 devices.

The user is strongly recommended to contact the manufacturer before attempting any intervention on the unit and any use not corresponding to the manufacturer's indications (in particular as for the field of application) and to enquire about the possible dangers and contra-indications connected with an improper use of the machine.

- The unit shall be used following these instructions and sticking to the destination of use indicated by the supplier. Any incorrect use can result in damages to the unit and represents a serious danger for people's health.



#### **ATTENTION**

The unit is not suitable for working in explosive environments. Therefore, the use of the unit in an explosion-dangerous atmosphere is absolutely forbidden.



#### **ATTENTION**

The unit is not suitable for working in salty environments. In such a case protect condenser and evaporator with appropriate means.

When maintenance involves operations on the refrigerating circuit, empty the system and let it reach the atmospheric pressure.



#### **WARNING**

- Do not discharge the refrigerant in the atmosphere. It must be recovered by specialized technicians using suitable equipment.
- Quantity and quality of the refrigerant to be charged are indicated on the data plate.
- Do not use refrigerants of different kind (especially inflammable fluids, for example hydrocarbons) or air.
- Do not modify or alter the refrigerating circuit or its components (for example: welding on compressor body)
- The final user shall protect the system from external fire dangers.

### **Refrigerant circuit**

- Work on the refrigerant circuit must only be performed by qualified staff.
- Protect hands and face from contact with fluid/leaking refrigerant.
- Wear protective goggles and gloves. Fluid refrigerant causes frostbite on the skin.

### **Material, property and environmental damage caused by damage to the refrigerant circuit.**

- Do not expose the device during storage and transport to temperatures higher than 70°C (158°F).
- Avoid transmission of pulsations and vibrations to the device.
- Avoid external force to the device such as careless movements with floor trucks or floor cleaning machines.
- Drilling or other work on the device is not permitted.
- Do not squeeze or bend pipes.
- To accelerate the defrosting process, do not use any mechanical devices or other means (e.g. ice scrapers).
- Steam or high-pressure cleaners may not be used for basic cleaning.

### **Combustible refrigerant**

Safety and warning information for devices with combustible refrigerants.

#### **WARNING**

- The refrigerant R-290 and R-600a belongs to safety group A3 according to DIN EN 378-1.
- The refrigerant used and the fill quantity are indicated on the power rating plate.
- The refrigerant is highly flammable.
- If leaks occur, the refrigerant can escape and create an explosive gas/air mixture. This can lead to fire and explosion with subsequent fire risk.
- Keep away from ignition sources (heat, sparks, open flames, hot surfaces).
- To remove condensation and for cleaning, use a damp cloth or sponge.
- Do not use dry cloths or sponges for rubbing dry. (Danger of electrostatic charging and sparking).
- Requirements for the installation area:
  - The device must only be installed in well-ventilated areas.
  - Do not install the device in cellars or lowered areas.



- Channels and wall penetrations must be sealed underneath and behind the device, in accordance with fire protection laws.
- Do not close venting openings in the device housing. Use only original accessory parts.
- Do not damage the refrigerant circuit.
- Do not operate any electrical devices (e.g. wet vacuum cleaners) within the refrigerator compartment that are not of the type recommended by the manufacturer.
- Steam or high-pressure cleaners may not be used for basic cleaning.
- Work on the electrical system and the refrigeration system must only be performed by qualified staff (staff trained in flammable refrigerants).
- Opening the refrigerant circuit and suctioning of the refrigerant may only be performed in a well ventilated area outside of business hours of the market (without customer traffic) or outdoors.
- Disconnect the device before each maintenance/repair.  
Secure the device against restarting.
- During repairs, a knowledgeable person who knows the local conditions must be available as the contact person for the Daikin-authorized qualified staff.
- Dispose of devices with flammable refrigerant and devices with insulating foam (thermal insulation polyurethane foam with pentane) appropriately. Inquire with the responsible authorities about the safety and statutory disposal regulations applicable to you.
- The product was designed to take into account the environmental and disposal friendliness of devices. The refrigerant R-290 and the propellant pentane (for the insulating foam) do not have any ozone depletion potential and do not contribute directly to the greenhouse effect.

## **5. Operation of Unit**

### **Getting Started**

- Unpack the machine and choose a well-ventilated spot close to an electrical Socket - Allow sufficient clearance from the walls to dissipate heat, preferably 8 inches (200mm) at the back & side. Keep your appliance away from direct sunlight and other high temperature sources like ovens and cooking ranges.
- Avoid damp, exposed locations.
- Avoid carpeted areas.
- The Cabinet must stand on an even base. If the base is uneven, the cabinet can


be adjusted using adjustable feet (some models only). A Stable installation minimizes noise and vibration.

- If the Deep Freezer is installed in areas with high humidity like the basements, garages or in cold weather, there are chances of water droplet formation on the outer surface due to condensation. This is quite normal and not a fault. Remove the condensation by wiping with a dry cloth.

## **6. Control Panel**

**Before operating for the first time, it is important to understand its control panel.**

- The GREEN LED indicates that the compressor is working (Cooling function is on).
- To set the desired temperature, use the thermostat knob. It can be adjusted between Max. & Min positions.

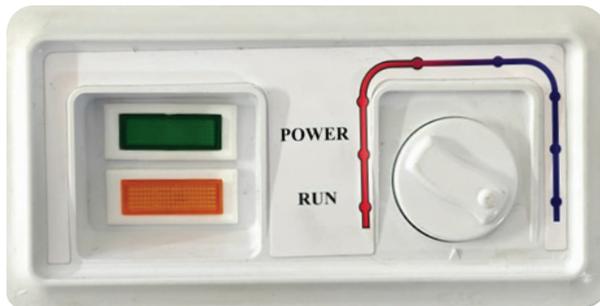

### **Caution**

- To avoid the risk of children becoming trapped and therefore suffocating, do not allow them to play around or hide inside the cabinet.
- Check for transit damage to your appliance and if any, report to the company dealer / distributor you may have purchased from within 24 hours of delivery.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not spray or wash the freezer. Do not put the freezer in moist places as this may affect the electrical insulation properties of the freezer.
- Avoid switching on / off the appliance consecutively to prevent damage to the compressor.

## Getting Connected

- Ensure that the electrical point is properly earthed. Avoid extension cords for complete safety. Do not cut / remove the round earthed pin from the socket. If using a separately fused circuit, ensure that the fuse is rated at 15 amps.
- Leave the door open for a few hours. Use a soft cloth and a mild solution of liquid detergent to clean the interior and exterior of the machine.
- Plug into a 3 pin electrical socket & switch on.
- The thermostat has been factory set to provide appropriate cooling. However, if need be, increase thermostat position for more cooling, or decrease the thermostat position to reduce cooling.
- Set the temperature control knob at the cooling level you want and load after continuously running for 6 hours for normal machine and 30 hours for eutectic freezer. The temperature control is placed in the compressor compartment.
- When the machine is switched on, you may hear clicking gas flow sound, and compressor humming sound. These are normal sounds and not a cause for concern.
- Do not load the appliance immediately after it is switched on. Wait until the correct storage temperature has been reached. We recommend you to check the temperature with an accurate thermometer.
- Defrost when a frost layer of around 7mm (1/4") has formed.
- 6 hours before the defrosting, please set the thermostat knob at 'MAX' position to make sure the food is at the lowest temperature when you get it out. All food should be wrapped in several layers of newspaper and stored in a cool place.
- The manufacturer declines all liabilities for injury to persons and animals or damage resulting from failure to observe these regulations.
- Check the transit damage to the machine and if any, report to company within 24 hours of delivery.

## **7. Handling**

The unit can be handled by lifting and transport means:

- Make sure that no one is in transit in the operating area of the lifting/transport means to prevent any possible accidents to people.
- If the unit is in a wooden case or crate, sling the packing properly before handling it.
- Lifting speed shall be such as not to make the packed unit oscillate dangerously and possibly fall.

## **Transport and Storage**

Check the device for transport damage after delivery. Contact the maintenance

service in case of damage to refrigerant circuit. The refrigerant can escape and create an explosive gas/air mixture. Risk of fire will be there..

- Do not expose the device during storage and transport to temperatures higher than 70°C (158°F).
- Ensure good ventilation.
- In event of damage, contact the maintenance service.


**Transport the device with floor trucks. Risk of injury to persons during collisions.**

- Observe the transport routes for floor trucks.
- Secure the cargo.
- Floor trucks must only be operated by trained persons.
- Observe the details for the stacking height on the packaging.

## **8. Installation and Use of Freezer**

- Keep freezer away from heat and direct sunlight. Do not place the freezer in moist or wet places to prevent rust or reduction of insulating effect. The space above the top of the freezer shall be greater than 80cm. The distance from both sides and the back shall be more than 20cm. This facilitates the opening & closing and heat dissipation. Wipe the freezer inside and outside with a warm moist rag (add a small amount of detergent in the warm water. Use plain water for the cleanse).
- Do not switch on the connection power until 6 hours after moving the freezer. The refrigerant needs time to settle. Before placing frozen foods in your freezer, turn the freezer on and wait for 6 hours to make sure it is working properly and to allow the freezer to chill down to the optimum temperature. Temperature can be measured using a thermometer. Take care to maintain the temperature as recommended by food suppliers.
- Prepare foodstuff for freezing in small portions to ensure rapid freezing. Don't put liquid-filled bottles or sealed cans containing carbonated liquids into the freezer as they may burst.
- Try avoid dual loading of liquid food long with frozen food, usage of same may deteriorate the performance of product.
- Fresh Meat should not be stored in chest freezers.
- Fresh product should not be stored with ice cream in a freezer.
- No liquid should be stored.
- If you want to store fresh food product set thermostat position 1 in convertible models.
- Don't store milk packets and dairy products in chest coolers.

## 9. Electrical Control – Wiring diagram

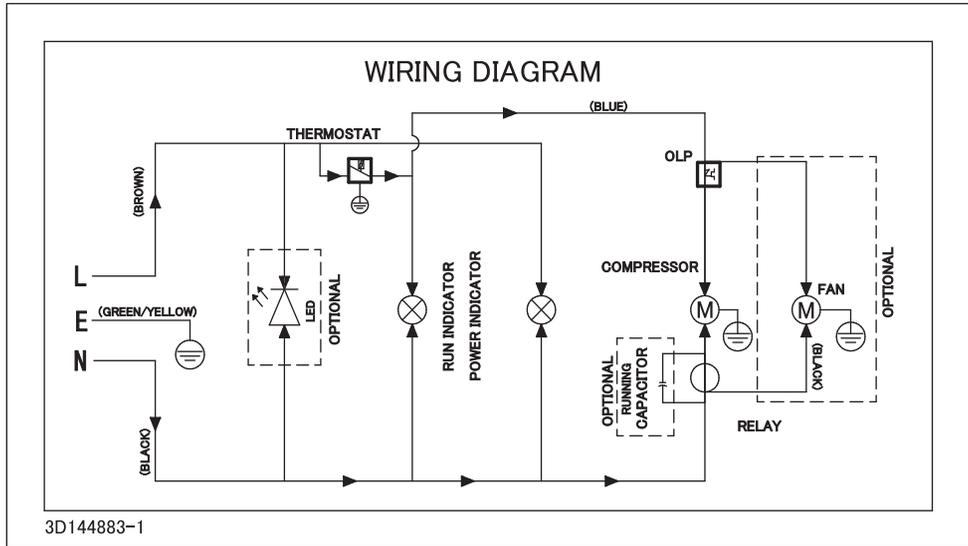

## 10. Check, Regulation and Adjustments

**Before turning the unit on, check that:**

- Locking Screws are tight.
- Electrical connections have been carried out correctly.

**In the event unit has been opened, check that:**

- No tools are left inside.
- Assembly is correct.
- There is no gas leakage.
- Front cover is secured correctly.

**Starting:**

**Before Starting the unit act as follows:**

- Connect the unit to the Mains. The luminous switch lights up.
- Switch on the controls.
- Set the required cabinet temperature.

## 11. Wiring and Safety Devices



**ATTENTION:** Before connecting the unit make sure that mains voltage and frequency correspond to the values shown in the data plate. Voltage tolerance.  $\pm 10\%$  compared to nominal value.

- Electric connection  
Connect the unit after checking the panel components.



**ATTENTION:** Connection to the electric line shall be effected applying a suitable safety device (a circuit breaker or a ground fault interrupter) settled by the installer on the basis of the fine involved and of the absorption indicated on the unit plate.

If a cold room includes more units, each unit shall be provided with its own safety device. Connect the unit paying attention to the colours of the supply cable wires.

**WARNING:**

- Any defective electrical part should be replaced by trained personnel exclusively. The electric connection should be effected by qualified personnel & electrical control.

**ATTENTION:**

- Young children or persons without supervision can't operate the appliance.
- Young children should be supervised not to play with the appliance.
- We have a policy of improving our product and reserve the right to change materials and specifications without notice. Please check specific parameters on the rated label of the product.

## **12. Maintenance and Repairs**

- Suitable maintenance is crucial for obtaining longer life, perfect working conditions and high efficiency of the unit as well as for ensuring the safety features provided by the manufacturer.
- Before cleaning, always switch off the power supply and remove the plug from the socket. Take out all items from the machine.
- Use mild liquid detergent solution or a synthetic detergent to clean all the parts and the inside & outside of the machine.
- Wipe dry with soft cloth. Leave the door open for a while.
- Plug the power cord in and switch on. Allow the machine to cool for 3 hours.
- To polish, use liquid silicon or a good quality automotive or appliance wax polish.

## **13. Routine Maintenance**

- Good operation of the unit requires condenser to be cleaned periodically (Frequency of the cleaning depends on the environment where the unit is installed).
- Turn off the unit and clean it by blowing air from the inside outwards. If no air jet is available, use long haired brush and work on the outside of the Condenser.

**Periodic Maintenance:**

Periodically check wear condition of electrical contacts and switches, if necessary

replace them. Service Operation to be carried out by Qualified technicians or by Manufacturer exclusively. Under no circumstances the user is allowed to:

- Replace Electrical Components.
- Work on Electrical Equipment.
- Repair Mechanical Parts.
- Work on Refrigeration system.
- Work on the Control Panel, ON/OFF and Emergency Switches.
- Work on Protection and safety Device.

## **14. Trouble Shootings**

In case of any difficulty, please refer to this trouble-shooting guide. You may well be able to handle the problem yourself and save time. But if the problem still remains, please contact our customer care Centre.

## **15. E-Waste Guideline**

### **PROTECT THE ENVIRONMENT FROM E-WASTE (GUIDELINES)**

MEANING OF E-WASTE UNDER E-waste (Management) Rules, 2016 (E-waste Rules) -Waste electrical and electronic equipment, whole or in part of reject from their manufacturing and repair process, which are intended to be discarded.



**Our product is RoHS compliant.**

**Don't dump Electrical and Electronic Products in Garbage Bins**

### **DO'S & DONT'S**

<b>DO'S</b>	
Run and maintain the Deep Freezer as per the instruction given in the operation / instruction manual	✓
Ensure that an authorised person repairs your Deep Freezer	✓
Call our local authorised dealer or our toll free number to dispose your Deep Freezer	✓
Contact an authorised dealer in case of installation or de-installation	✓
Consult our local authorised dealer or our toll free number on the life span of the Deep Freezer	✓

<b>DONT'S</b>	
Do not try to repair your Deep Freezer on your own	✗
Do not sell or dispose your Deep Freezer or parts to an unauthorised Kabbadi wala / Scrap Dealer / Rag pickers	✗
Do not dismantle your Deep Freezer on your own	✗
Do not get your Deep Freezer or any parts repaired by an unauthorised person	✗
Do not dispose off the E-waste in landfills	✗
Do not use the Deep Freezer as furniture after its use	✗

Problem	Possible Cause	Remedial Measures
<b>Product does not work</b>	<ul style="list-style-type: none"> <li>Supply voltage low (below 165V)</li> </ul>	<ul style="list-style-type: none"> <li>Use a suitable automatic voltage stabilizer which meets product specification</li> </ul>
	<ul style="list-style-type: none"> <li>Power cord plug removed or loosened from electronic wall socket</li> </ul>	<ul style="list-style-type: none"> <li>Reset properly, if necessary</li> </ul>
	<ul style="list-style-type: none"> <li>Temperature control knob in OFF position</li> </ul>	<ul style="list-style-type: none"> <li>Rotate the knob to desired cooling position</li> </ul>
<b>Power is on but no cooling</b>	<ul style="list-style-type: none"> <li>Supply Voltage low (below 165V)</li> </ul>	<ul style="list-style-type: none"> <li>Use automatic voltage stabilizer recommended by the company</li> </ul>
<b>Insufficient cooling</b>	<ul style="list-style-type: none"> <li>The Door is not shut properly</li> </ul>	<ul style="list-style-type: none"> <li>Check and close the door properly</li> </ul>
	<ul style="list-style-type: none"> <li>Temperature of room is very high or direct sunlight is falling on the product</li> </ul>	<ul style="list-style-type: none"> <li>Install the machine in a cooler place</li> </ul>
	<ul style="list-style-type: none"> <li>Incorrect setting of temperature control system guard</li> </ul>	<ul style="list-style-type: none"> <li>Rotate the knob to correct position</li> </ul>
	<ul style="list-style-type: none"> <li>Supply voltage low (below 165V)</li> </ul>	<ul style="list-style-type: none"> <li>Use an automatic voltage stabilizer which meets ISI specification</li> </ul>
	<ul style="list-style-type: none"> <li>Machine is too close to the wall</li> </ul>	<ul style="list-style-type: none"> <li>Maintain at least 8 inches gap between the machine and the wall</li> </ul>
<b>Smell in the machine</b>	<ul style="list-style-type: none"> <li>Items with excessive pungent smell</li> </ul>	<ul style="list-style-type: none"> <li>Wrap such items in a polythene or stored in the machine. keep in closed containers</li> </ul>
<b>Condensed water accumulating inside the machine</b>	<ul style="list-style-type: none"> <li>Machine not on levelled ground</li> </ul>	<ul style="list-style-type: none"> <li>Re-level the cabinets as explained in earlier section</li> </ul>
	<ul style="list-style-type: none"> <li>Drain pipe is clogged</li> </ul>	<ul style="list-style-type: none"> <li>Clean the drain pipe</li> </ul>
<b>Machine unstable or vibrating</b>	<ul style="list-style-type: none"> <li>Cabinet is not levelled properly</li> </ul>	<ul style="list-style-type: none"> <li>Re-level the cabinet by adjusting position of legs as applicable</li> </ul>
<b>Electric Shock from the appliance body</b>	<ul style="list-style-type: none"> <li>Wiring of premises not earthed properly</li> </ul>	<ul style="list-style-type: none"> <li>Check proper earthing in your socket</li> </ul>
	<ul style="list-style-type: none"> <li>Shock on your stabilizer</li> </ul>	<ul style="list-style-type: none"> <li>Replace your stabilizer</li> <li>Call your electricians</li> </ul>
<b>Gas flow noise from freezer</b>	<ul style="list-style-type: none"> <li>This noise is normal</li> </ul>	
<b>Excessive cooling</b>	<ul style="list-style-type: none"> <li>Thermostat knob at very high setting</li> </ul>	<ul style="list-style-type: none"> <li>Thermostat knob to lower position</li> </ul>



Daikin Air Conditioning India Private Limited  
12th Floor, Building No.9, Tower A,  
DLF Cyber City, DLF Phase III,  
Gurugram - 122002

Daikin Refrigeration Business Helpline

Helpline number: 1800 102 9322

Operational window: 8 am to 8 pm

Operational Days: Mon-Sat

Email id:

**[serviceref@daikinindia.com](mailto:serviceref@daikinindia.com)**

**<https://www.daikinindia.com/cold-chain-solution>**